



Original	Replacement
	 Power
	 Mute / Dimmer
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 TV/Radio /
	 0
	 Display / Media
	 Guide / EPG / -/--
	 Info / Angle
	 Menu / Home

Original	Replacement
	 Up
	 CH+ / Page+
	 Exit / Cancel / Clear
	 Left
	 Vol-
	 OK
	 Right
	 Vol+
	 Down
	 CH- / Page-
	 Smart / List
	 Shift + CH+ /
	 >>I / Preset+
	 Pause / Step / Freeze
	 Picture / Format
	 Shift + CH- /
	 I<< / Preset-





Original	Replacement
 UHF	 AV / Input / RDS
 Red / Recall	 Red / Netflix / Search
 Red / Recall	 Back / Return
 Green / Audio	 Green / APP / Repeat
 Green / Audio	 Audio / Lang I/II
 Yellow / Text	 Yellow / YouTube / Repeat
 Yellow / Text	 Text / Goto
 Blue	 Blue / Prime Video / Random
 RGB / YPbPr	 Setup / OPT /
 Subtitle	 Subtitle / EQ
 Wide	 Zoom / Size

Original	Replacement

