

Link
tech

PREMIUM
VIP PRODUCT

Hello!

TWS WIRELESS BOX SPEAKER USER MANUAL



MODEL: LPS-M405

Please carefully read this Manual before using this Product for the very first time and well keep it for further reference.



INFORMATION

Thank you for choosing our product, please read this manual to avoid damage to the item.

ACCESSORY

S/N	Items	Qty
1	Remote controller	1
2	User manual	1
3	Charging cable	1

MAIN FUNCTION

- Wireless connection
- Audio input
- USB & TF port
- Digital display

CHARGE THE BATTERY

When the battery is charging the CHARGE STATUS flashing. After the battery has fully charged, CHARGE STATUS light up.

1. Connect the AC/DC adaptor to the DC9V IN jack of the speaker firmly, and plug it into a wall outlet.
2. When the battery is fully charged, first disconnect the AC/DC adaptor from the speaker, then from wall outlet.
3. Do not use speaker when charging.

SPECIFICATIONS

Model	LPS-M405
Bluetooth Version	V5.0
UHF Transmission Distance	30m
Rated Power	40W
Play Time	3-4 HOURS
Distortion	1% (1W 1KHz)
Charging Time	3-4 HOURS
S/N Ratio	80dB
Net Weight	4.1kgs/UNIT
Packing	328 X 288 X 407 mm

AUDIO INPUT JACK

1. Connect an audio cable (not included) to the AUDIO INPUT jack of the speaker and to the audio output socket on the external audio devices such as MP3 player, discman etc, then select line by pressing the mode button on the front panel
2. Play from an external audio device

WIRELESS CONNECTION

Please press MODE button on control panel to select Wireless BT connection mode.

Simultaneously open the Wireless BT connection setting on your phone, tablet or any other Wireless BT connection enabled audio device and select (no need to match code), the unit and device will then connect via Wireless BT connection. Press the NEXT song and PREV song button on the control panel to select the song, or press PLAY/PAUSE button to control the playing status

TWS (True Wireless Stereo)


1. After both machines (same model) startup, switch to Bluetooth mode
2. Search for the Bluetooth name and connect
3. Long press the "PLAY/PAUSE"
4. The two machines are automatically matched and TWS stereo playback

FEATURES

- Portable speaker with RGB lights.
- Bass/Treble/Echo/Mic vol/Mic in
- Long lasting rechargeable battery.
- Wireless version 5.0, with TWS function, support connection of two speakers simultaneously for a stereo effect.
- Supports wireless music, FM radio, USB-flash etc.
- 4 types of placement method (Monitor - Tilt back - Speaker bracket - Plane frame height).

REMOTE CONTROL

1. **MUTE** Press to mute audio output, and press again to resume
2.  Press this button to toggle between the various inputs (AUX, USB, TF, FM, BLUETOOTH).
3. **REC** Press this button to start recording.
4. **VOL+** Press this button to increase the master volume for the unit.
5.  Press to start playing/pause, In FM mode, press to tune with jumps of 0.1 MHz
6.  Press this button to select the previous song/ channel.
7. **VOL-** Press this button to reduce the master volume for the unit.
8.  Press this button to repeat one/repeat all.
9. **REC PLAY** Press this button to play the recording or exit recording function
10.  Press this button to select the next song/ channel.
11. **EQ** Press this button to the EQ mode of Flat, Jazz, Rock, Pop, Classical.
12. **Numeric** keys 0-9, Key number for selecting certain songs in the USB/TF Card MODE.

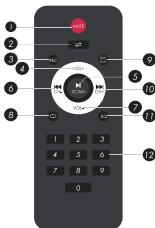

CONTROL PANEL

- | | |
|--|---|
| 1 CHARGE
(Charge/battery status indicator) | 10 USB (USB slot) |
| 2 VOLUME (Master volume button) | 11 BASS (Bass button) |
| 3 LINE (Audio input) | 12 TREBLE (Treble button) |
| 4 Display (It is a display to show the function out) | 13 ECHO (ECHO volume button) |
| 5 NEXT (Next song) | 14 MIC VOL (Microphone volume button) |
| 6 PLAY/PAUSE
(Play or Pause function) | 15 MIC IN/GUITAR
(Microphone input/Guitar input) |
| 7 PREV (Previous song) | 16 AC INPUT (110V-240V 50/60Hz AC input) |
| 8 MODE
(Mode change button) | 17 POWER SW: Power switch |
| 9 TF CARD (TF card input) | 18 DC 12V input |



SYSTEM CONFIGURATION

The multifunctional system can be used in four unique modes. Under the function of AUTO EQ (self-service EQ), the system will automatically adjust the sound quality for various playing directions to maintain the best tone balance. You can quickly find the most suitable mode for the desired purpose through the following example.

PLANE FRAME HEIGHT

Place the machine on a flat surface. This placement method can project sound clearly and evenly, ensuring that you can fully enjoy the full-band effect of the system.



TILT BACK

In a performance where the audience is closer to you. Please tilt back with the rear side of the machine as the fulcrum. In order to achieve the best performance of sound quality, it is recommended that performers stand or sit at the side of the speakers to avoid blocking the speakers so that the audience can directly hear the sound emitted by the speakers.



MONITOR

If you want to use the machine as a personal floor monitor speaker, place it horizontally on the floor in front of the performer and face the performer. The speaker should be tilted upward with its side on the ground.



SPEAKER BRACKET

Place one or two machines on the speaker bracket (sold separately) to meet various broadcast effects.



SAFETY MEASURES

To ensure proper use of this product, please take the time to read this instruction manual carefully before use. Please observe all the instructions about safe operation and please keep this instruction manual in a safe place for future reference.

1. Protection of power supply wire: Do not place the cable in the path of foot traffic. Do not place heavy furniture on the cable. Never pull the cable to unplug the unit from the socket, always disconnect the unit from the main power supply by pulling the plug out of the socket.
2. Ventilation: In order to prevent this unit from overheating, place it in a well-ventilated area on stable surface. Never place it on a bed, sofa or carpet where the ventilation will be restricted.
3. Dismantling: In order to avoid the risk of electric shock, do not dismantle the unit. Should your unit be faulty or broken please refer servicing to an authorized service center.
4. Strange odour: Should your unit emit any strange odour, immediately unplug it from the wall socket. Do not use the unit again until you have had it repaired by a qualified service center.
5. Do not expose this unit to liquid of any kind.



Resale to Firm
LINK-TECH TRADING COMPANY LIMITED
FLAT 609A, 8/F, FOOK CHONG BUILDING 63 HOL YUEN
ROAD, KWUN TONG, KOWLOON, HONG KONG
TEL: 3114 7187