

## 557B WIRELESS SPEAKER

### USER MANUAL

(Read before proceeding)

- Press and hold the “power” button on the top of the unit for 3 seconds to turn on the unit.
- The item should come with enough power be powered on. If you are having trouble on pairing or powering-on it, please make sure it is fully charged.
- Use the USB charge cable connecting to the item from its type-C charging socket to your computer or charger. The charging input power is 5V 500mA.
- The red light will turn off when power charging completes.
- Short press the “M” button to change LED light mode, long press to turn on or off the LED light.

#### **Music Playing:**

##### Bluetooth Mode:

- Once power on, the item turns default into Bluetooth mode, while there is no other connection.
- The item will automatically connect to the last Bluetooth device first. If not found, it will search a new one.
- On the Bluetooth device, switch on Bluetooth setting and search for “557B”. For the first-time connection, select “557B” to start connection. If necessary, enter the pass code 0000 or 1234.
- To disconnect the item from current Bluetooth device, switch off Bluetooth from current connected Bluetooth device.
- Once connected, you can listen to music from the unit wirelessly (< 33 ft.). The music streaming may be interrupted by obstacles between the device and the item, such as walls, metallic casing that covers the device, or other devices nearby that operate in the same frequency.
- Press “ power ” button one time to play or pause the music; short press “< ” or “> ” button to skip songs; press and hold “< ” or “> ” to fast backward or fast forward the music.
- Short press “EQ” button to change music mode in sequence-normal/pop/rock/jazz/classic/country
- Rotate the “VOLUME” button to adjust the music playing volume;
- Rotate the “MIC VOL” button to adjust the volume of wired microphone (not included)

##### TWS Mode:

- Turn on 2pcs units and ensure they are in Bluetooth mode.
- Press and hold the “M” button on one of the unit, waiting for their connection/ disconnection with each other.
- Once the 2pcs units connected, follow the above step the connect it with your Bluetooth enable devices.

##### Aux-in Input Mode:

- Once power on, connect the item with audio device by 3.5mm aux-in cable(not included), the unit will turn into Aux input mode and play music automatically; press “power” button one time to enter silent mode.
- Rotate the “VOLUME” button to adjust the music playing volume;

##### TF card/USB drive Mode:

- Once a TF card/USB drive is inserted, the unit will turn into music play mode and plays music automatically.
- Press “ power ” button one time to play or pause the music; short press “< ” or “> ” button to skip songs; press and hold “< ” or “> ” to fast backward or fast forward the music.
- Rotate the “VOLUME” button to adjust the music playing volume;

##### FM radio mode

- Once power on, press “M” button to change to “FM” mode.
- Insert USB charging cable as antenna.
- Press the “power” button one time to search and lock all possible FM channels automatically. When searching finishes, there will have no channel changing.
- Press “< ” or “> ” button one time to select a channel.
- Rotate the “VOLUME” button to adjust the music playing volume;

#### Karaoke mode

- Once power on, insert wired 6.3mm Jack microphone (not included) to enjoy the Karaoke;
- Rotate the “MIC VOL” button to adjust the volume of wired microphone (not included)

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment