



Original	Recharge
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 Sleep	 Sleep / Timer
 4	 4
 5	 5
 6	 6
 Still	 Pause / Step / Freeze
 7	 7
 8	 8
 9	 9
 Aspect	 Shift + Picture / Format
 - / -	 Guide / EPG / - / -
 0	 0
 Prev. Ch.	 Fav / Marker / PC

Original	Recharge
 Source	 AV / Input / RDS
 Vol -	 Vol -
 Vol +	 Vol +
 CH -	 CH / Page-
 CH +	 CH+ / Page+
 Info	 Info / Angle
 Nicam A2 / Audio	 Audio / Lang I/II
 Auto	 Smart / List
 P. Mode	 Picture / Format
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 OK	 OK
 Right	 Right
 S. Mode	 Sound / Title
 Down	 Down
 Exit	 Exit / Cancel / Clear





Original	Recharge
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Index	 Play / Slow
 Cancel	 Shift + Exit / Cancel / Clear
 Reveal	 << / Tune-
 Hold	 Stop / Hold
 TXT	 Text / Goto
 Size	 Zoom / Size
 Subpage	 >> / Tune+
 Subtitle	 Subtitle / EQ

Original	Recharge

