 




Original	Recharge	Original	Recharge
 Mute	 Mute / Dimmer	 Source	 AV / Input / RDS
 Power	 Power	 Vol -	 Vol -
 1	 1	 Vol +	 Vol +
 2	 2	 CH -	 CH / Page-
 3	 3	 CH +	 CH+ / Page+
 Sleep	 Sleep / Timer	 Info	 Info / Angle
 4	 4	 NICAM12 / Audio	 Audio / Lang I/II
 5	 5	 Auto	 Smart / List
 6	 6	 P. Mode	 Picture / Format
 Still	 Pause / Step / Freeze	 Up	 Up
 7	 7	 Menu	 Menu / Home
 8	 8	 Left	 Left
 9	 9	 OK	 OK
 Aspect	 Shift + Format Picture / Format	 Right	 Right
 - / - -	 Guide / EPG / - / - -	 S. Mode	 Sound / Title
 0	 0	 Down	 Down
 Prev. Ch.	 Fav / Marker / PC	 Exit	 Exit / Cancel / Clear





Original	Recharge
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Print Video / Random
 Index	 Play / Slow
 Cancel	 Shift + Exit / Cancel / Clear
 Reveal	 << / Tune-
 Hold	 Stop / Hold
 TXT	 Text / Got o
 Size	 Zoom / Si ze
 Subpage	 >> / Tune+
 Subtitle	 Subtitle / EQ

Original	Recharge

