



ONE
FOR ALL

SONY

URC-4912

ENGLISH 3 | DEUTSCH 7 | FRANÇAIS 11 |
ESPAÑOL 15 | PORTUGUÊS 19 | ITALIANO 23 |
NEDERLANDS 27 | DANSK 31 | NORSK 35 |
SVERIGE 39 | SUOMI 43 | ΕΛΛΗΝΙΚΑ 47 |
РУССКИЙ 51 | TÜRKÇE 55 | POLSKI 59 |
ČESKY 63 | MAGYAR 67 | БЪЛГАРСКИ 71 |
ROMÂNĂ 75 | SLOVENSKY 79 | HRVATSKI 83 |

  AUDIO CODELIST 93

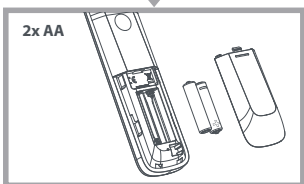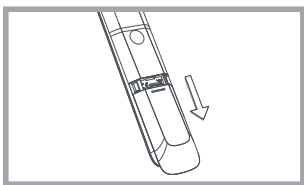

English: **CAUTION:** Risk of explosion if battery is replaced by an incorrect type. Use quality Alkaline batteries.

 
Deutsch: **WARNUNG:** Es besteht Explosionsgefahr wenn die Batterie durch einen inkorrekten Typ ersetzt wird. Verwenden Sie Alkali- / Qualitätsbatterien.

Français: **ATTENTION:** Risque d'explosion si les piles sont remplacées par un mauvais type de piles. Utilisez des piles alcalines / de qualité.

Español: **ADVERTENCIA:** Riesgo de explosión si se cambian las pilas por un tipo de pilas incorrecto. Usar pilas alcalinas / de calidad.

Italiano: **ATTENZIONE:** Rischio di esplosione se le batterie vengono sostituite con un tipo di batterie errato. Usare batterie alcaline / di qualità.



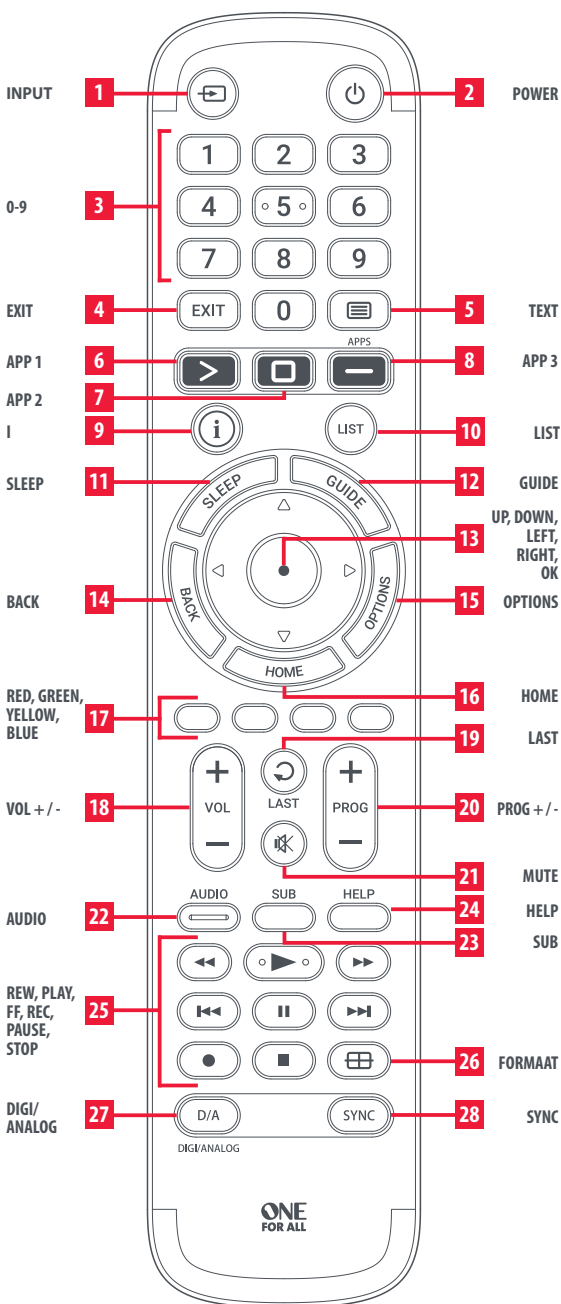

ENGLISH

- | | | |
|---|---|--|
| 1. INPUT
Input Select | 10. LIST
Title List | 19. LAST
Last Channel |
| 2. POWER
Power | 11. SLEEP
Sleep Timer | 20. PROG + / -
Channel Up and Down |
| 3. 0-9
Digits for Channel Entry | 12. GUIDE
Guide | 21. MUTE
Mute |
| 4. EXIT
Menu Exit | 13. UP, DOWN, LEFT, RIGHT, OK
Navigate the Menu | 22. AUDIO
Audio / Language |
| 5. TEXT
Teletext on and off | 14. BACK
Back one level in the Menu | 23. SUB
Subtitles |
| 6. APP 1
YouTube / App Shortcut Key | 15. OPTIONS
Options, Menu | 24. HELP
Help |
| 7. APP 2
Netflix / App Shortcut Key | 16. HOME
Home | 25. REW, PLAY, FF, PAUSE, REC, STOP
Playback control |
| 8. APP 3
Google Play / App Shortcut Key | 17. RED, GREEN, YELLOW, BLUE
Fasttext | 26. FORMAT
Screen Format |
| 9. I
Info | 18. VOL + / -
Volume Up and Down | 27. DIGI/ANALOG
Digital / Analog |
| | | 28. SYNC
Sync, Bravia Sync |

STEP 1: SET UP YOUR TELEVISION

THE MAJORITY OF NEWER SONY TV'S SHOULD WORK DIRECTLY.

After putting batteries in, just test some of the keys, and if they work, your remote is ready. If not, follow the next steps:

- Make sure your TV is on (not on standby).
 - 
 Hold down **Red + Blue** until the LED behind the **Power Key** blinks twice.
 - 
 Point towards the TV and hold down the **Power key** until the TV turns off
 - 
 The remote will send a different Power signal every 3 seconds. As soon as the TV turns off, let go of the **Power key**.
 - The light will blink twice. Now test the rest of the keys on the remote, if they work as your original did, your remote is ready to use. If you find some keys do not work as expected (or at all), proceed to the next step.
- If you find some keys still do not work as expected (or at all), proceed to the next step.

ENGLISH

STEP 2: IF STEP 1 DOES NOT WORK AS EXPECTED

ARE SOME KEYS NOT WORKING AS EXPECTED?

If you find some keys do not work as expected (or at all), proceed to the next step.

1. Make sure your TV is on (not on standby).
2.  Hold down RED + BLUE until the LED behind the Power Key blinks twice
3.  Point towards the TV and hold one of the keys that is not working correctly (for example **HOME**).
4. The remote will send a signal every 3 seconds.
5. When the correct function is shown on the screen (in this case the HOME), let go of the key.
6. The LED will blink twice - your remote is ready to use.

LEARNING

LEARN A NEW FUNCTION TO YOUR REMOTE

Your One For All remote can learn any function from your original (working) remote.



1. Place the original remote facing the One For All remote on a flat surface.
2.  To learn: Hold down **GREEN + YELLOW** until the LED blinks twice.
3.  **Press 975.** The LED will blink twice.
4.  Press the key on the One For All remote you want to learn on, for Example: the **VOL +** key. The LED will blink rapidly.
5.  Press the key on the Original remote you want to learn, for Example: the **VOL +** key of your Audio Device
6.  **Two blinks:** ok. Repeat from step 4 for any more keys to learn.
Long blink: try again from step 4.
7.  When you have learned all the keys you need, press and hold the **OK** key for 3 seconds. The LED will blink twice.

HOW TO DELETE A LEARNED FUNCTION

1. Hold down **GREEN + YELLOW** until the LED blinks twice.
2. **Press 976.**
3. Press the key to reset twice.
4. The LED flashes twice and the key will revert to the original function.

ENGLISH

SOUND BAR / AUDIO RECEIVER VOLUME CONTROL

SOUND BAR / AUDIO RECEIVER VOLUME CONTROL

If you have your TV connected to a Sound Bar or Audio Receiver, it's possible to set up your One For All remote to control the Volume and Mute of this device. There are two ways to do this:

AUDIO SIMPLESET

If you have a Sound Bar or Audio Device from one of the brands listed in the table below, you can use the SimpleSet method to program your remote to control it. If you do not have one of the below brands, please proceed to the next section.

Digit	Brand
1	Bose
2	Denon
3	Samsung / Harman/Kardon / JBL
4	LG / JVC
5	Marantz / Philips
6	Onkyo
7	Panasonic / Technics
8	Pioneer
9	Sony
0	Yamaha

Note that each of the brands has a digit associated with it, for example 4 for LG (and JVC).

To set up your remote to control your Sound Bar / Audio Device, first make sure your TV and Sound Bar / Audio Device are both powered on, and that there is something playing that you can hear (this procedure will test the Mute function). Next:

1. Hold down the **VOLUME UP** and **VOLUME DOWN** buttons together until the LED under the POWER key blinks twice.
2. Now point the remote towards your Sound Bar / Audio Devices and hold down the digit key for your brand (for example 4 for LG). The remote will send the Mute function to your device every 3 seconds.
3. As soon as your Sound Bar / Audio Device mutes the volume, release the digit key. The LED under the Power key will blink twice, and the Volume Up, Down and Mute keys should now control your Sound Bar / Audio Device.

AUDIO CODE SETUP

If your Sound Bar / Audio Device is not one of the brands listed above, you can also set up the remote to control it by entering a 4 digit code. The codes are listed in the Audio Codelist section of this manual, and are listed by brand and then popularity. Locate the brand of your Sound Bar / Audio Device in this code list and then the procedure is:

ENGLISH

1. Hold down the **VOLUME UP** and **VOLUME DOWN** keys until the LED under the Power key blinks twice.
2. Enter the first 4 digit code for your Sound Bar / Audio Device. The LED should blink twice on the last digit.
3. Now try the **Volume Up, Down** and **Mute** and see if they control your Sound Bar or Audio Device.
4. If they work, your remote is set up. If not try again from step 1 using the next code in the list.

POWER MACRO

If you have set up your Sound Bar or Audio Device using SimpleSet or Code Setup, you can now turn your TV and Audio Device both on and off using a single key. Simply hold down the Power key for 3 seconds and the remote will send the Power function to both the TV and the Audio Device / Sound Bar. If you press and release the key, it will only control the TV.

APP SHORTCUT KEYS



The One For All remote features three App Shortcut Keys which can be used to open apps on your TV. If your original remote control has a YouTube, Netflix, or Google Play key, these keys will perform the same function.

However if you try these keys and they do not work, but your TV still has the ability to watch a streaming service, you can use this key as a shortcut by programming a macro (a series of button presses) on it. You could also program the keys to access other apps on your TV.

To program the macro, you first need to know the sequence keys you use to access the service. For example, some TVs will start Netflix by pressing the Home key, then Menu Right twice, and finally the Enter key. Once you have determined the sequence for the app you want on your TV, follow these steps:

1. Sit in front of your device with It switched on (not on standby)
2. Hold down the App Shortcut key until the LED blinks twice.
3. Now perform the sequence of keys exactly as would normally. The remote will operate your TV and the macro is recorded in real time - so if it normally takes a few seconds for your device to react don't worry.
4. Once you have finished the sequence - and the Streaming Service has started on your device - hold down the App Shortcut key until the LED blinks twice and goes out. The macro is now stored.

Tips

- Make sure the OFA remote is operating the TV before programming
- If you find the Macro doesn't work as expected, you can just repeat the same sequence to reprogram
- When programming, wait for your TV to respond first, the remote will remember the timing

RESET

If you would like to reset your remote back to its default settings, please do the following:

1. Hold down the Green and Yellow keys until the LED blinks twice
2. Press 977
3. The LED will blink 4 times and the remote is now reset.

ENGLISH - PRODUCT DISPOSAL (EUROPEAN DIRECTIVE 2012/19/EU)



The crossed out wheeled bin symbol on this product ensures that this product is manufactured using high quality components that can be recycled and reused according European Directive 2012/19/EU. Please do not dispose of this product with your normal household waste, refer to local regulations for the proper collection or disposal of electrical and electronic products. This will help this will help in preventing negative effects on the environment and/or human health.

BATTERY DISPOSAL (EUROPEAN DIRECTIVE 2006/66/EC)

Please do not dispose of your batteries with your normal household waste, refer to local regulations for the proper collection or disposal. This will help preventing potential negative effects on the environment and/or human health.

GUARANTEE TERMS AND CONDITIONS UNIVERSAL ELECTRONICS warrants to the original purchaser that this product will be free from defects in materials and workmanship under normal and correct use for a period of two (2) years from the date of original purchase. This product will be repaired or if necessary, replaced free of charge if it has been proven to be defective within the two(2) year warranty period. The forwarding costs are on the account of the owner; the costs of returning the product are on the account of UNIVERSAL ELECTRONICS.

This warranty does not cover damage or failures caused by products or services not supplied by UNIVERSAL ELECTRONICS, or which result from not mounting the product according to manual instructions. This also applies when the product has been modified / repaired by others than UNIVERSAL ELECTRONICS or if a fault is the result of accident, misuse, abuse, neglect, mishandling, misapplication, faulty installation, improper maintenance, alteration, modifications, fire, water, lightning, natural disasters, wrong use or carelessness.

To obtain warranty service during the warranty period contact [...], and please note that we need your original purchase receipt so that we may establish your eligibility for service. If you have bought this product for purposes which are not related to your trade, business or profession, you may have legal rights under your national legislation governing the sale of consumer goods. This guarantee does not affect those rights. www.oneforall.com

DEUTSCH - PRODUKT-ENTSORGUNG (EU-RICHTLINIE 2012/19/EU)



Das Symbol "durchgestrichene Mülltonne" auf diesem Produkt bedeutet, dass dieses Produkt mit hochwertigen Komponenten gefertigt wurde, die gemäß der EU-Richtlinie 2012/19/EU wiederverwertet und wiederverwendet werden können. Bitte entsorgen Sie dieses Produkt nicht mit dem normalen Hausmüll, sondern beachten Sie die örtlichen Vorschriften für die ordnungsgemäße Sammlung oder Entsorgung von elektrischen und elektronischen Produkten. Dies trägt dazu bei, negative Auswirkungen auf Gesundheit und/oder Umwelt zu vermeiden.

BATTERIE-ENTSORGUNG (EU-RICHTLINIE 2006/66/EC).

Bitte entsorgen Sie Batterien nicht mit dem normalen Hausmüll, sondern beachten Sie die örtlichen Vorschriften für die ordnungsgemäße Sammlung oder Entsorgung. Dies trägt dazu bei, mögliche Gesundheits-und/oder Umweltschäden zu vermeiden.

GARANTIEBEDINGUNGEN UNIVERSAL ELECTRONICS garantiert dem Originalkäufer für den Zeitraum von zwei Jahren, ab dem Datum des Originalkaufs, die Material- und Mängelfreiheit dieses Produkts bei üblicher und korrekter Benutzung. Dieses Produkt wird kostenlos repariert oder, falls erforderlich, ersetzt, wenn es sich nachweislich innerhalb der Garantiefrist von zwei (2) Jahren als defekt erwiesen hat. Die Versandkosten gehen zu Lasten des Eigentümers, die Kosten für die Rücksendung des Produkts gehen zu Lasten von UNIVERSAL ELECTRONICS. Die Garantieabdeckung erstreckt sich geographisch auf alle Staaten, in denen wir dieses Produkt anbieten.

Diese Garantie deckt keine Schäden oder Fehler ab, die verursacht sind von Produkten oder Leistungen, die nicht von UNIVERSAL ELECTRONICS geliefert wurden, oder die daraus resultieren, dass das Produkt nicht gemäß der Bedienungsanweisungen montiert wurde. Dies gilt auch, wenn das Produkt von anderen als UNIVERSAL ELECTRONICS modifiziert / repariert wurde, oder wenn ein Defekt die Folge eines Unfalls, Missbrauchs, falscher Benutzung, Fahrlässigkeit, falscher Anwendung, falscher Installation, unsachgemäßer Wartung, Änderung, Feuer, Wasser, Blitzschlag, Naturkatastrophen oder Unachtsamkeit ist.

Bitte nehmen Sie zur Kenntnis, dass Sie uns für den Erhalt der Garantieleistung während der Garantiefrist Ihre Originalkaufquittung vorlegen müssen, damit wir Ihren Anspruch auf die Leistung überprüfen können. Wenn Sie dieses Produkt nicht für einen Zweck gekauft haben, der mit Ihrem Handel, Geschäft oder Beruf zusammenhängt, beachten Sie bitte, dass Ihnen möglicherweise gesetzliche Rechte als Verbraucher zustehen, die den Verkauf der Verbrauchsgüter betreffen. Die Garantie beeinflusst diese Rechte nicht. Wenn Sie diese Garantie in Anspruch nehmen wollen, kontaktieren Sie bitte www.oneforall.com

FRANÇAIS - MISE AU REBUT DU PRODUIT (DIRECTIVE EUROPÉENNE 2012/19/EU)



Le symbole représentant une poubelle sur roues marquée d'une croix apposé sur ce produit garantit qu'il a été fabriqué à l'aide de composants de haute qualité pouvant être recyclés et réutilisés conformément à la Directive européenne 2012/19/UE. Vous ne devez pas jeter ce produit avec les déchets ménagers courants. Reportez-vous aux réglementations locales pour connaître les procédures de collecte spécifiques aux équipements électroniques et électriques. Celles-ci ont pour objectif de minimiser les effets nocifs sur l'environnement et/ou la santé humaine.

MISE AU REBUT DES BATTERIES/PILES (DIRECTIVE EUROPÉENNE 2006/66/CE)

Vous ne devez pas jeter vos batteries/piles avec les déchets ménagers courants. Reportez-vous aux réglementations locales pour connaître les procédures de collecte spécifiques. Celles-ci ont pour objectif de minimiser les effets nocifs sur l'environnement et/ou la santé humaine.

CONDITIONS GENERALES DE GARANTIE UNIVERSAL ELECTRONICS / ONE FOR ALL garantit à l'acheteur initial que ce produit, dans des conditions normales et correctes d'utilisation, sera dépourvu de dysfonctionnement matériel et de vice de fabrication pendant une période de deux (2) ans à compter de la date d'achat originale du produit.

Si, pendant cette période de garantie de deux (2) ans, il devait s'avérer que le produit était défectueux, ce produit sera réparé ou, si nécessaire, remplacé gratuitement. Les frais d'expédition seront à la charge du propriétaire ; les frais de réexpédition seront à la charge de UNIVERSAL ELECTRONICS. Cette garantie ne couvre pas les dommages ou les dysfonctionnements provoqués par des produits ou par des services non fournis par UNIVERSAL ELECTRONICS, ou résultant d'un montage non conforme du produit à ce qui est indiqué dans le manuel d'instructions. Cette règle s'applique également si le produit a été réparé et / ou modifié par d'autres que UNIVERSAL ELECTRONICS ou si le dysfonctionnement résulte d'un accident, d'une utilisation incorrecte, d'un usage abusif, d'une négligence, d'une mauvaise manipulation, d'une application incorrecte, d'une installation incorrecte, d'une maintenance inadéquate, d'une altération, de modifications, de dommages provoqués par le feu, par l'eau, par un éclair, par une catastrophe naturelle, par une utilisation inadéquate ou par une absence d'entretien. Pour être en mesure d'obtenir le service de garantie pendant la période de garantie contactez UNIVERSAL ELECTRONICS: www.oneforall.com, et veuillez noter qu'il nous faut votre bon d'achat (facture) original afin que nous puissions établir si vous pouvez effectivement bénéficier du service de la garantie.

Si vous avez acheté ce produit sans raison commerciale ni professionnelle, veuillez noter qu'il est possible que la législation de protection des consommateurs de votre pays vous donne certains droits. Cette garantie n'affectera pas ces droits. www.oneforall.com

ESPAÑOL - ELIMINACIÓN DEL PRODUCTO (DIRECTIVA EUROPEA 2012/19/EU)



El símbolo de contenedor de basura tachado en este producto garantiza que este producto está fabricado utilizando componentes de alta calidad que pueden reciclarse y reutilizarse según la directiva europea 2012/19/UE. No deseches este producto con los residuos domésticos normales, consulte las regulaciones locales sobre la recogida o eliminación adecuada de productos eléctricos y electrónicos. De esta forma se evitarán los posibles efectos negativos sobre el medio ambiente y la salud.

AUDIO CODELIST

A.V. International	0269	Integra	1805, 2989, 2993, 1320, 3992, 0135
Acoustic Solutions	1501, 1470	Jay-tech	4146
Agile	0269	JBL	3756, 4575, 5070, 0110
Aiwa	0121, 0406, 0158, 0159	JTC	4146
Akai	4242, 0609	JVC	1400, 0074, 0464, 4411, 1199
Anam	0609	Kenwood	0313, 0027, 1400
Andersson	0493	Kogan	3654
Arcam	0641, 0269, 0189	LG	2676, 4043, 4667
Argos	4122	Linn	0269, 0189
AS	1501, 1470	Loewe	0269, 0189
Audio Agile	0269	Logik	4242
Audio Pro	3264	Logitech	2436, 1408, 3561
Audiolab	0269, 0189	Magnat	4485
Auvisio	3654	Magnavox	0189, 1269, 3282, 0269
AVI	0269	Majority	4146
B & O	0799	Marantz	2117, 0189, 0269, 4673, 0039, 0641, 1269, 3347, 4556
Bang & Olufsen	0799	Maxell	3997
Bauhn	4242	MCS	0039
Blaupunkt	3654	Medion	4242
Bose	1229, 3708, 3079, 4024, 3832	Meridian	0715
Bush	4122	Micromega	0269, 0189
Cairn	0189	Musical Fidelity	0688
Cambridge Audio	1730, 1647, 4157, 4222	Myryad	0189, 0269
Canton	3000	NAD	0320, 1093, 1743, 0609
Carver	0189, 0269	Naim	1895
Celcus	4146	Nakamichi	3296
Coby	3654	New Acoustic	Dimension
Copland	0269		0320, 1093, 1743, 0609
Curtis Mathes	0039	Nikko	0609
Denon	0004, 1360, 2857, 3347, 2516, 0272, 1260, 3380, 3639, 3947, 4111, 2681, 4551, 2502, 4025	Nubert	4331
Dicra	3654	Onkyo	1805, 0135, 1320, 2989, 2993, 3050, 4533, 3992
DIKE	5070	Optimus	0300, 0013
Dual	4134	Orbitsound	4098
Dutch Originals	5070	Otone	4242
Energy Sistem	3654	Panasonic	0309, 1779, 4007, 3425, 0308, 0367, 0039
Epworth	0121, 0406, 0158, 0159	Philips	1269, 0189, 2459, 4105, 3289, 2986, 1673, 0269, 3282, 0641
Goodmans	4146, 0609, 2151, 1199	Philips Magnavox	0189
Grundig	0189, 0269, 5174, 1199	Pioneer	1935, 0013, 1459, 3742, 0300, 1284, 3629, 3631
Harman/Kardon	1304, 0110, 1004, 3756, 4197, 0189, 0269	Polk Audio	0269, 0189
HIFI Akademie	0269, 0189	Proficient	0609
Hitachi	4590, 3050, 5130, 1199	Proson	0609
Horizon	4411		
IKEA	4050		
Inkel	0027		
Insten	2151		

AUDIO CODELIST

Pyle	4242	Teac	0609, 1199, 3253, 4242
Quasar	0039	Technics	0309, 0308, 0039, 0208
RCA	0300, 1459, 0082	TechniSat	4134, 4486
Restek	0189	Techwood	0609
Revox	0140, 0189, 0269	Teufel	4051, 3296, 3574, 4477, 2322, 4159, 4460, 4559
Rotel	0793	Thomson	1194, 3654
Samsung	2660, 2809, 1199, 2137, 3822, 1304	Thorens	0269, 0189
Sansui	0189, 0609	Toshiba	3627, 5070
Sanyo	3282	Universum	0609, 0269, 0189
Schaub Lorenz	4242	Victor	0074
Sentra	0688	Wards	0013, 0158, 0189
Sharp	3096, 5070	Yamaha	0176, 1276, 2061, 2467, 3283, 2469, 0082, 0848, 1176, 1949, 0354, 3267, 3602, 2342
Siemens	0609		
Sonos	3919		
Sony	0158, 0159, 2522, 1758		
Soundwave	0609		
Sunfire	0313		
Sungpo	3096, 5070		
T+A	2302, 1270		

Connect with us



[facebook.com/
oneforallworldwide](https://facebook.com/oneforallworldwide)



[@oneforall.worldwide](https://www.instagram.com/oneforall.worldwide)



[linkedin.com/
company/one-for-all-worldwide/](https://www.linkedin.com/company/one-for-all-worldwide/)



[youtube.com/
user/oneforallproducts](https://www.youtube.com/user/oneforallproducts)



712178
RDN 1091120
Online version

Universal Electronics BV – Europe & International
P.O. Box 3332, 7500 DH Enschede The Netherlands

URC 4912 Sony:
SONY® is a registered trademark of SONY Corporation.