

aiwa

 
Translucent Light-Up Speaker



WHAT'S INCLUDED

- AI6023 Speaker
- Power Adapter
- User's Manual with Warranty Information


A CLOSER LOOK

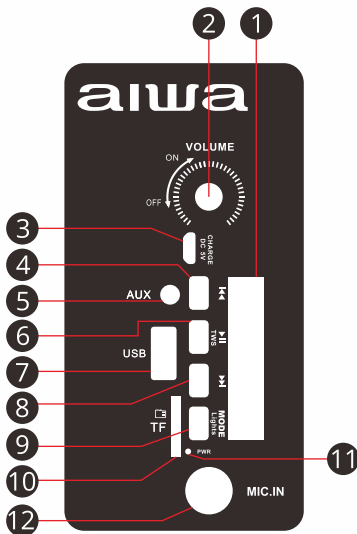


- | | |
|---------------------------------|-----------------------------|
| 1. Display Screen | 7. USB Input Port |
| 2. Power/Master Volume Knob | 8. Next Track/Next Station |
| 3. Charging Port | 9. Mode Selector/Woofer LED |
| 4. Previous Track | 10. Micro TF Card Input |
| 5. AUX Input | 11. Charging LED Indicator |
| 6. Play/Pause/FM AUTO SCAN /TWS | 12. Microphone Port |

CHARGING

 Insert one end of the included power adapter into the charging port.

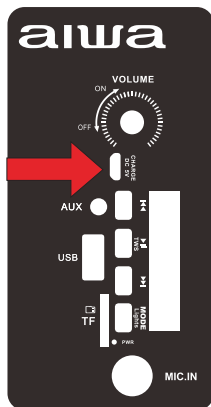

 Insert the other end into a suitable wall outlet.

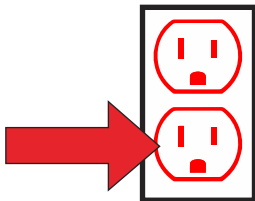


NOTES:

1. You can use your speaker while it is charging.
2. Once fully charged, your speaker can provide up to 12 hours* of playtime.


*Applicable at 50% of maximum volume. Results will be lower when the volume is higher.

 POWERING ON/OFF

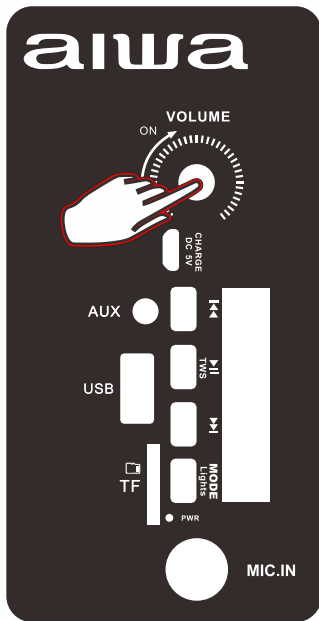

To power ON your speaker, twist the Power/Master Volume knob away from the OFF position. To turn your speaker OFF, twist the knob to the OFF position.

 SETTING MODE

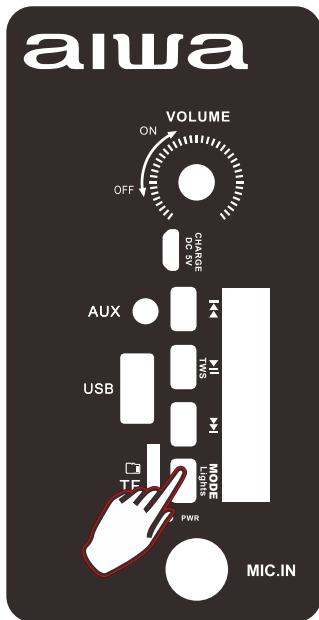

Power ON your speaker. Press the mode button repeatedly to toggle through your speaker's various modes.

The current mode will be displayed on the Display Screen.

BLUETOOTH PAIRING

 
Once powered ON, press the mode button repeatedly to set your speaker to Bluetooth mode.



Go to the Bluetooth settings menu on your phone. Make sure that Bluetooth is turned on. Connect to the device listed as "AI 6023."


NOTE: Disconnect through your connected device or by changing modes.

LISTENING TO MUSIC

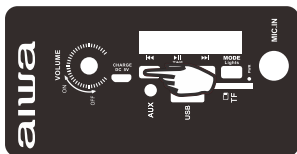


Previous Track Button:

 - Press to go back to the last track in a playlist while using a USB, Micro TF card, or the speaker's Bluetooth functions.
- Press to access the previous saved station while using FM Radio Mode.

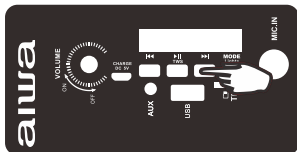


Next Track Button:

 - Press to go to the next track in a playlist while using a USB, Micro TF card, or the speaker's Bluetooth functions.
- Press to go to the next saved station while using FM Radio Mode.

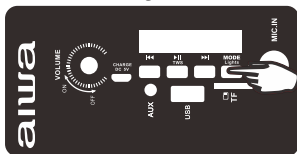


Mode Selector/Woofer LED:

 - Press and hold for three seconds to turn the woofer LED on or off.
- Press to cycle between the different modes available on the speaker.

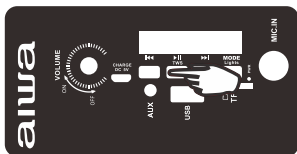


Play/Pause Button:

 - Press to play or pause a track while using a USB, Micro TF card, or the speaker's Bluetooth functions.
- Press to auto-scan nearby FM channels while using FM Radio Mode.

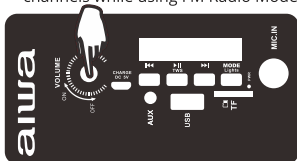

Power/Master Volume Knob:

 - Twist the Master Volume knob to increase or decrease volume.
- Twist the knob to the OFF position to turn OFF the speaker.

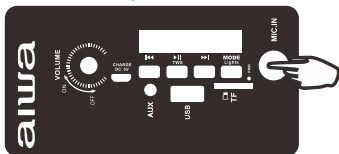

Microphone Port:

- You can connect a compatible microphone to the speaker through the microphone port.

ADDITIONAL FEATURES

USB Input Port

Plug a USB thumb drive into the USB Input Port on your speaker. To play from the USB, you must set the speaker to the corresponding mode. Your speaker can play .mp3 music files from your thumb drive. The maximum storage size of the USB flash drive cannot exceed 64 GB.

Note: Connecting to a computer will not work. Files will not be visible.

Micro TF Card Input

Slide a Micro TF Card into the Slot on your speaker. Your speaker can play .mp3 music files from the card inserted.

AUX IN Port

Connect one end of a 3.5mm Aux cable (not included) to the Aux In port on your speaker. Connect the other end to the headphone jack on your audio device. To listen to music using a wired connection, select the corresponding mode.

Note: Do not connect an amplifier or amplifier signal to avoid damaging the speaker.

FM Radio

To use FM Radio mode to listen to music from local radio stations, set the speaker to the corresponding mode. Press the play/pause button to scan and save available FM stations. Press the previous track and next track buttons to change stations.

TWS Pairing

TWS pairing allows the connection of two AI6023 speakers together on one device. After connecting to one speaker, set the second speaker to Bluetooth, but do not connect to any device. Press and hold the Play/Pause button on the first connected speaker for approximately three seconds to pair together.

You can then go to the Bluetooth settings menu on your phone. Make sure that Bluetooth is turned on. Connect to the device listed as 'AI 6023'.

SAFETY PRECAUTIONS

When using your speaker, basic safety precautions should always be followed including:

1. READ ALL INSTRUCTIONS BEFORE USING YOUR SPEAKER.
2. Do not submerge your speaker in water.
3. Only clean using a clean cloth.
4. Do not allow children to play with this product. This product contains small pieces that can be a choking hazard. Parental supervision is advised.
5. Do not expose this product to excessive heat or fire.
6. Do not expose this product to temperatures above 100°F. Keep out of direct sunlight.
7. Do not attempt to repair this product yourself. Contact a qualified service center if the product is in need of service.
8. Do not drop, crush, or expose this product to excessive physical force.
9. This product is not intended for commercial use.
10. When charging, keep all charging cables well ventilated. Do not keep your charging cable in contact with flammable materials such as bedding, linens or synthetic fabrics.

Maintenance and Care

-Use a soft cloth or paper towel to clean your speaker. Never use any harsh chemicals or detergents for cleaning. Make sure your speaker is dry before charging.

-When your speaker is not in use, it should be stored in a cool, dry place.

-Never tug or yank on a cable while it is connected to your speaker. Connect and disconnect cables as carefully as possible.

-Never expose your speaker to high temperatures, extreme cold.

-Please recycle or dispose of your speaker properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your speaker for further information.



CAUTION

BATTERY WARNING:

- The device is equipped with an integrated lithium ion battery. The battery cannot be replaced. Do not attempt to remove the battery from the device.
- Do not dispose of in fire or expose to excessive heat.
- Do not crush, puncture, incinerate, or short circuit external contacts.
- Please recycle or dispose of the battery properly. Contact your local recycling facilities and/or the manufacturer for further information.

FCC STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- The device has been evaluated to meet general RF exposure requirement.
- The device can be used in portable exposure condition without restriction.

SPECIFICATIONS

Bluetooth Version: V5.3

Working Range: 10 m

Play Time: 12 hours*

Power Output: 8W

*** (At 50% volume)**

WARRANTY

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered By Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:

Call (800) 592-9541 or visit our website at www.aiwa.co.

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address of the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepaid.



AIWA
Edison, NJ 08817
www.aiwa.us.com

© 2024 Aiwa Acquisitions LLC. All rights reserved. AIWA and associated marks are owned by Aiwa Acquisitions and used under license.
Keep all relevant information for future reference.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Sakar International is under license. Other trademarks and trade names are those of their respective owners."