



Performance Series

Honeywell HDCS Video Surveillance System User Manual

Table of Contents

1	Overview and Environment.....	1
	Overview	1
	Performance.....	1
	Environments	2
2	Installation and Initialization	3
	Installation	3
	Policy Confirmation	6
	Initialization.....	7
3	Settings.....	8
	Login Interface.....	8
	Main Interface	9
	User.....	11
	Adding a Role.....	11
	Modifying a Role	12
	Deleting a Role.....	12
	Adding a User	13
	Modifying a User.....	14
	Deleting a User	14
	Switching a User	14
	Devices.....	14
	Adding a Device.....	14
	Modifying a Device	18
	Deleting a Device.....	19
	Device Configuration	21
	Event Configuration	23
	Notify	25
	Link Video.....	26
	Alarm Output.....	27
	Defence Time.....	28
	Event View	29

	Tour & Task	30
	Adding a Task Plan	30
	Modifying a Task Plan	34
	Deleting a Task Plan.....	34
	System Configuration.....	34
4	Live View.....	38
	Live Viewing.....	39
	Video Settings.....	40
5	Playback	42
	Playing Back the Device Recordings.....	44
	Smart Search	46
	Video Settings	48
	Playing Back the Device Pictures.....	49
	Playing Back the Local Recordings.....	50
	Playing Back the Local Pictures	52
	Exporting the Device Recordings.....	52
	Exporting the Device Pictures	53
	Exporting the Local Recordings.....	54
6	Log.....	55
	Client Log.....	56
	Device Log.....	56
7	Advanced.....	57
	Video Wall	57
	Configuring the Favorite	58
	Setting the Video Wall and Output.....	60
	Setting a Tour	62
	E-Map.....	64
	Adding a New E-map	65
	Modifying a E-Map.....	67
	Deleting a E-map.....	70
	Liveview E-map.....	71

Welcome

Thank you for choosing our Video Surveillance System--HDCS!

This user manual is designed to be a reference tool for operation of your system.

Here you can find detailed operation information about HDCS.

1 Overview and Environment

This chapter contains the following sections:

- [Overview](#) on page 1.
- [Performance](#) on page 1.
- [Environments](#) on page 2.

Overview

HDCS is a video surveillance system, which is designed for DVR, NVR and Decoder on managing security surveillance devices conveniently and efficiently. It supports Live View, Playback, Download, Video Wall, E-map and other services. The main features of HDCS are listed as below:

- View real-time video of several camera channels.
- View the playback video files from various cameras.
- Support multiple scheduled arms to realize auto PC guard.
- Support e-map: clearly view and manage all devices at different locations.
- Support video wall plan setup: output video to the video wall.
- Support extension applications: send out alarm information to external programs.

Performance

System supports up to 256 devices and 2000 video channel connection, up to 64-channel live view in a single screen and maximum 256-channel in 4 screens.

Environments

Table 1-1

Item	Requirements
OS	Windows 7/ Windows 8.1/Windows 10
CPU	Intel® Core™ 2 Duo 3.0GHz or above, Recommended Intel Core i3-4150 3.5GHz or above (for 64ch live view)
Display card	Intel HD Graphics 4400 equivalent or above, and support DirectX 9.0 or higher.
Network card	100Mbps or higher (1Gbps recommended)
Memory	Recommended 4GB or above (for 64ch live view)
Displayer Resolution	1024×768 or above.
Hard Drive	80GB free space or above

2 Installation and Initialization


This chapter contains the following sections:

- [Installation](#) on page 3.
- [Initialization](#) on page 7.

Installation

1. Double click “HDCS_Setup.exe” and the following window is displayed:

 Figure 2-1

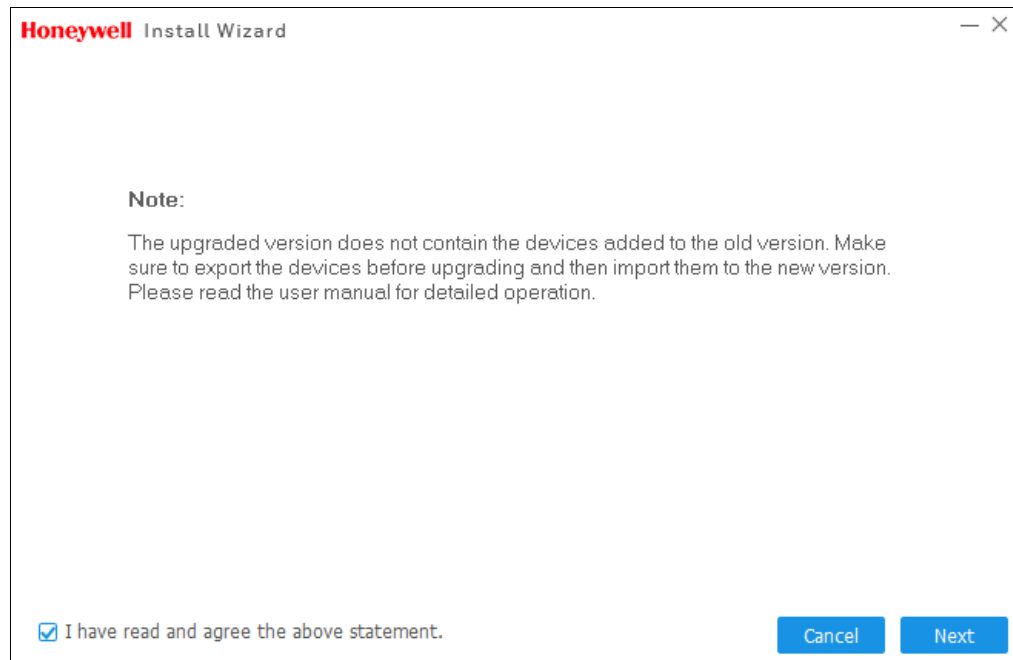

2. For the new user, please ignore the **Note**; for the old user, please read the **Note** carefully. Check the checkbox below and then click **Next** to continue.

Figure 2-2




3. Select the language and check the Agreement checkbox. Click **Next** to continue.



4. Check the HDCS checkbox and click **Next** to continue.

 Figure 2-3

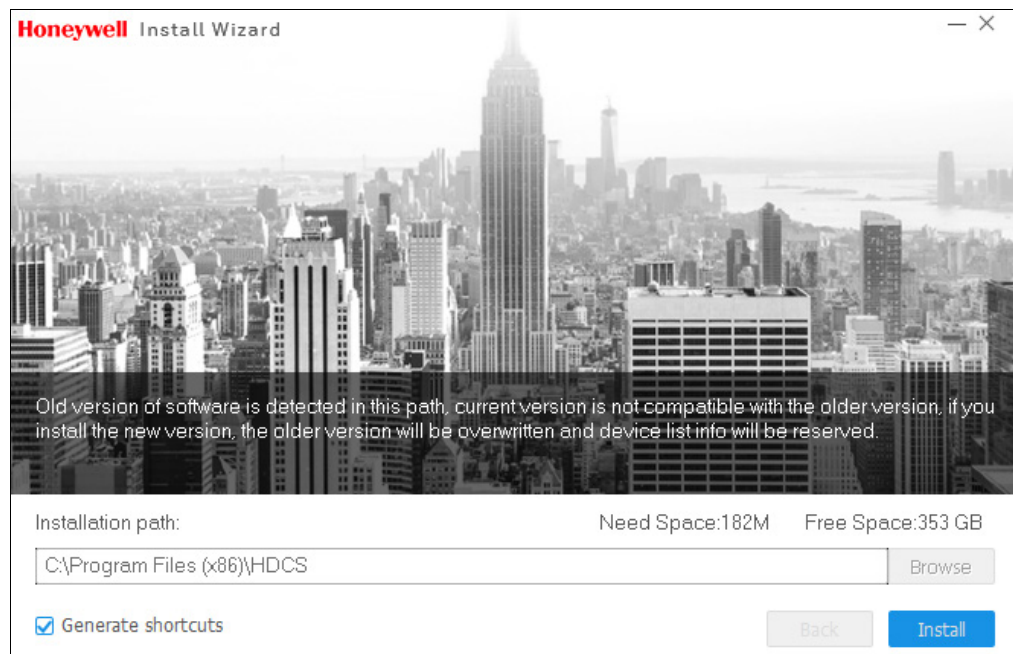


5. Select the installation path and click **Install** to continue.

Figure 2-4



6. During the installation process, you can click **Cancel** to exit. After installation, the following window is displayed:

 Figure 2-5

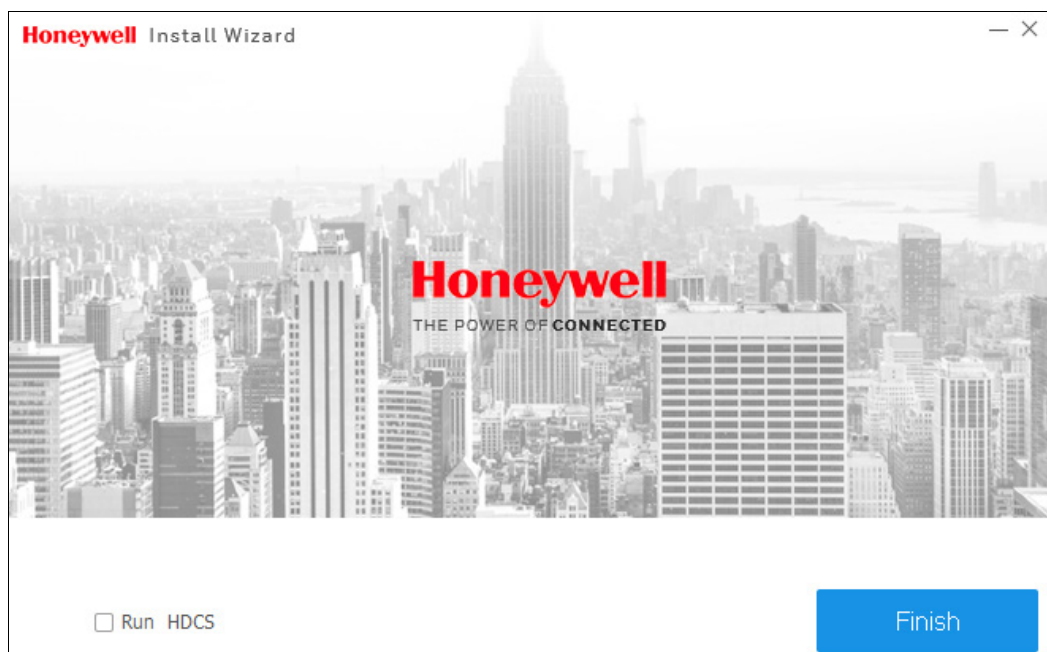


7. Click **Finish** to complete the installation.

Policy Confirmation

When the software runs for the first time, the Privacy Policy & Protection Guideline window will pop up for your confirmation. Click the checkbox below and click **OK** to continue. The policy source file can be found in the installation path. If you click **Cancel**, you confirm to exit the HDCS software.

 
Figure 2-6

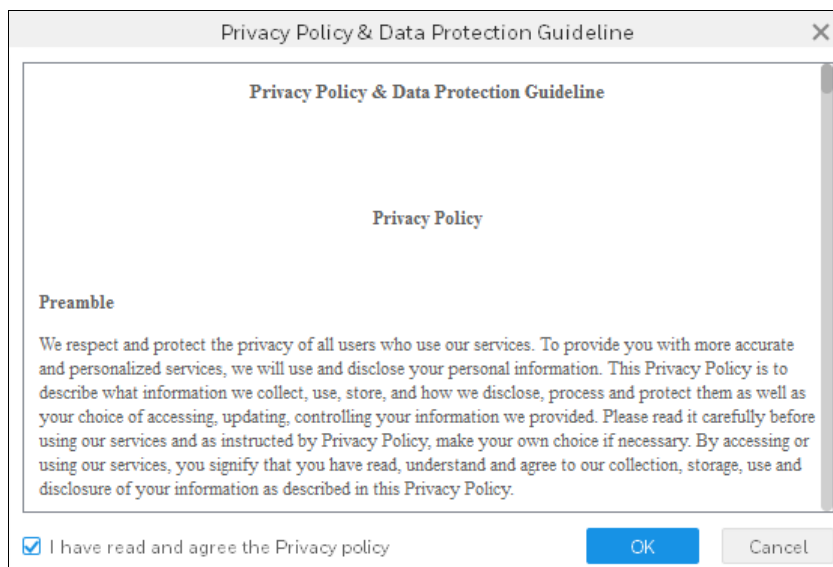

Initialization

Before you get started, make sure to complete the initialization to set the password.

 
Figure 2-7

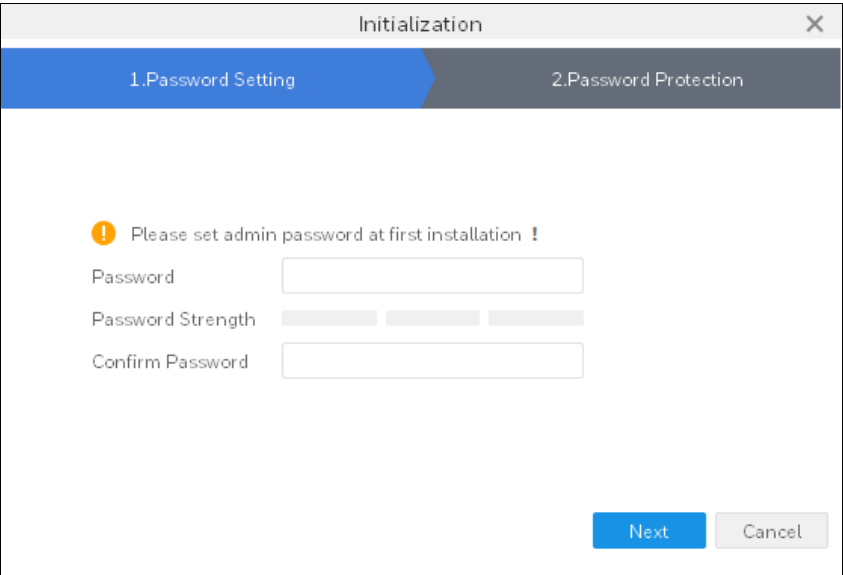

The screenshot shows a window titled "Initialization" with a close button (X) in the top right corner. The window has a progress bar at the top with two steps: "1.Password Setting" (highlighted in blue) and "2.Password Protection" (greyed out). Below the progress bar, there is a yellow warning icon and the text "Please set admin password at first installation !". There are three input fields: "Password", "Password Strength" (which is a progress bar with three segments), and "Confirm Password". At the bottom right, there are two buttons: "Next" (blue) and "Cancel" (grey).

1. Set the login password and comfirm the password. Click **Next**.

 Figure 2-8

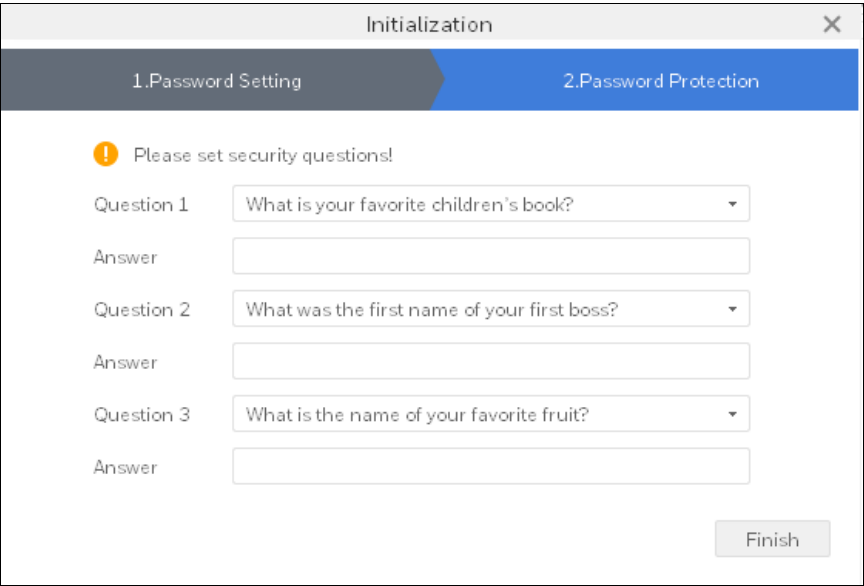

The screenshot shows the same "Initialization" window, but now the "2.Password Protection" step is highlighted in blue, and "1.Password Setting" is greyed out. Below the progress bar, there is a yellow warning icon and the text "Please set security questions!". There are three sets of questions, each with a dropdown menu for the question and a text input field for the answer. The questions are: "Question 1: What is your favorite children's book?", "Question 2: What was the first name of your first boss?", and "Question 3: What is the name of your favorite fruit?". At the bottom right, there is a "Finish" button (grey).

2. Set the security questiones and click **Finish** to complete the initialization.

3 Settings

This chapter contains the following sections:


- [Login Interface](#) on page [8](#).
- [Main Interface](#) on page [9](#).
- [User](#) on page [11](#).
- [Device](#) on page [14](#).
- [Device Configuration](#) on page [21](#).
- [Event Configuration](#) on page [23](#).
- [Tour & Task](#) on page [30](#).
- [System Configuration](#) on page [34](#).

Login Interface



Double click HDCS icon , and the login interface is displayed:

 Figure 3-1

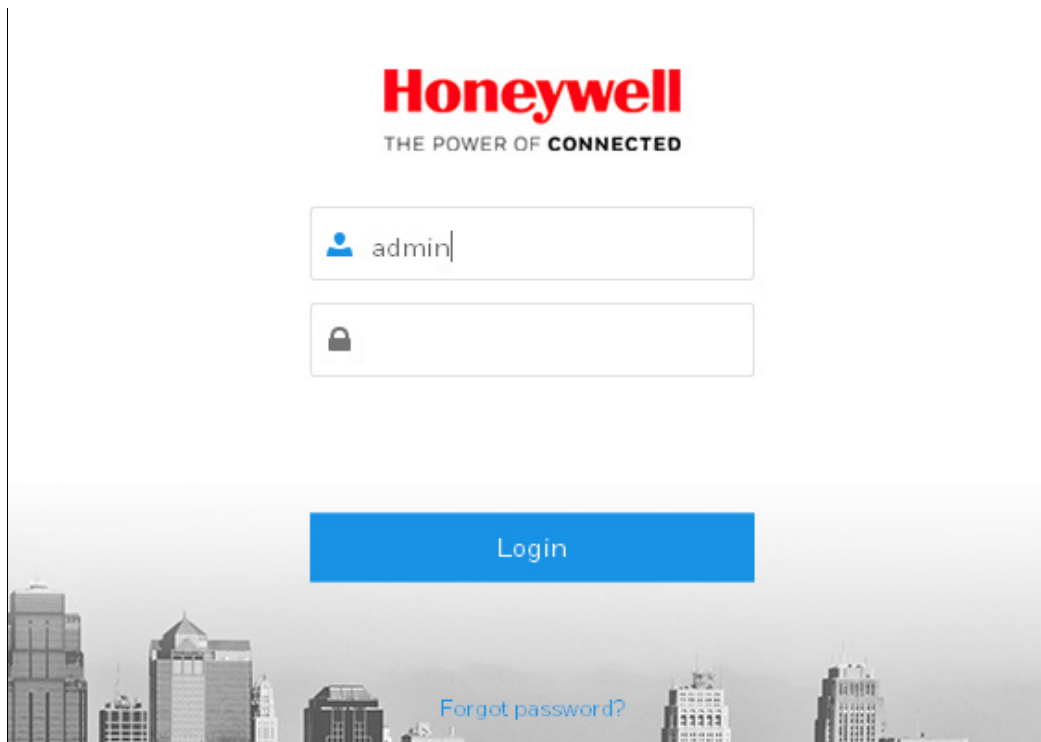The image shows the Honeywell login interface. At the top, the Honeywell logo is displayed in red, with the tagline "THE POWER OF CONNECTED" in black below it. Below the logo, there are two input fields. The first field has a blue user icon on the left and the text "admin" inside. The second field has a grey lock icon on the left and is empty. Below these fields is a large blue button with the word "Login" in white. At the bottom of the interface, there is a link that says "Forgot password?" in blue text. The background of the interface features a grey city skyline.

 : enter the user account

 : enter the corresponding password to log in.


Note

If it is your first time to run HDCS, both default user name and password are “admin”. “Admin” is a super administrator and cannot be removed. You can add, modify or delete the other users.”

Main Interface

Click **Login** to go to the main interface:

 Figure 3-2

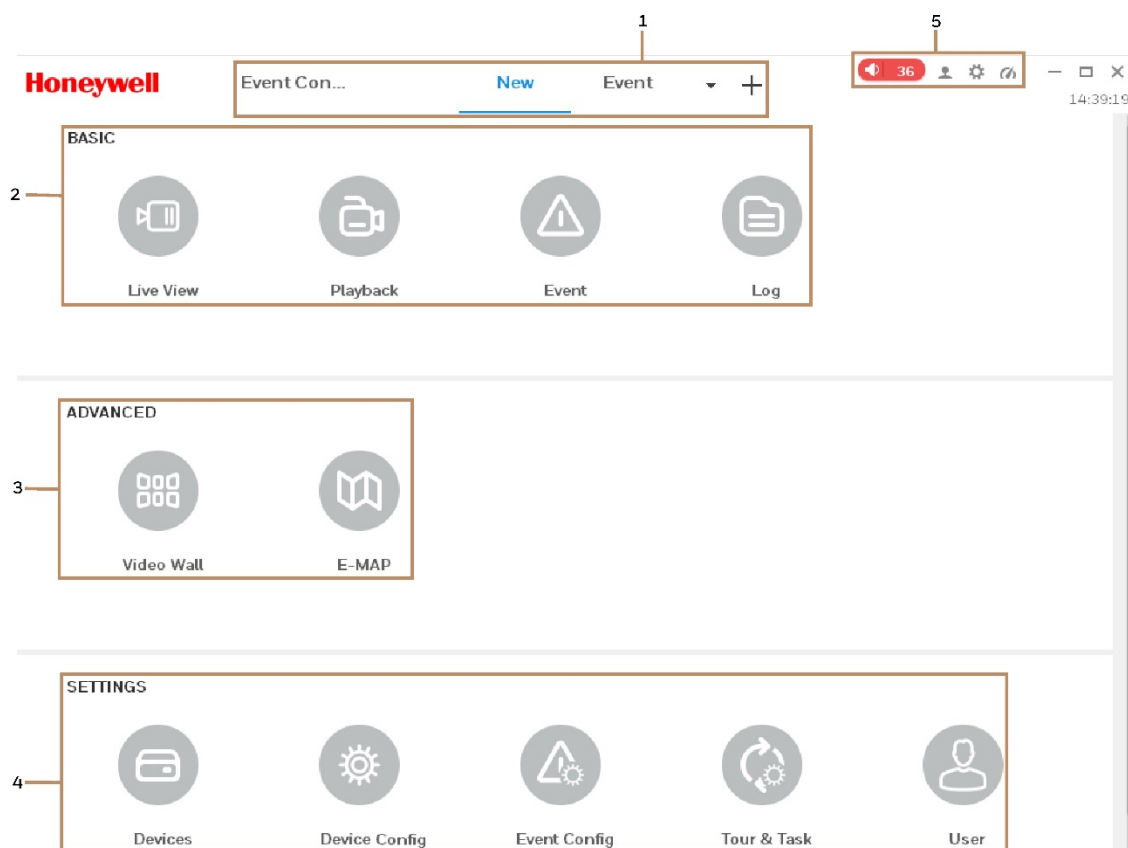

Please refer to the following sheet for detailed information.

Table 3-1

SN	Parameter	Function
1	Menu	Here you can view main page icons and current open function icons. Click + button to add a function icon on the top pane.
2	Basic	It includes Live View, Playback, Event and Log.
3	Advanced	It includes Video Wall, and E-map.
4	Settings	It includes Devices, Device CFG, Tour & Task, Video Wall, Account, , etc.
5	Other Information	It is to display the software version, system configuration and occupation status of CPU and RAM. .


User

You can add, modify and delete system users and roles, and set user's authorities and role's authorities.



Click **User** on the **SETTINGS** pane in [Figure 3-2](#) to go to the following interface:

 Figure 3-3

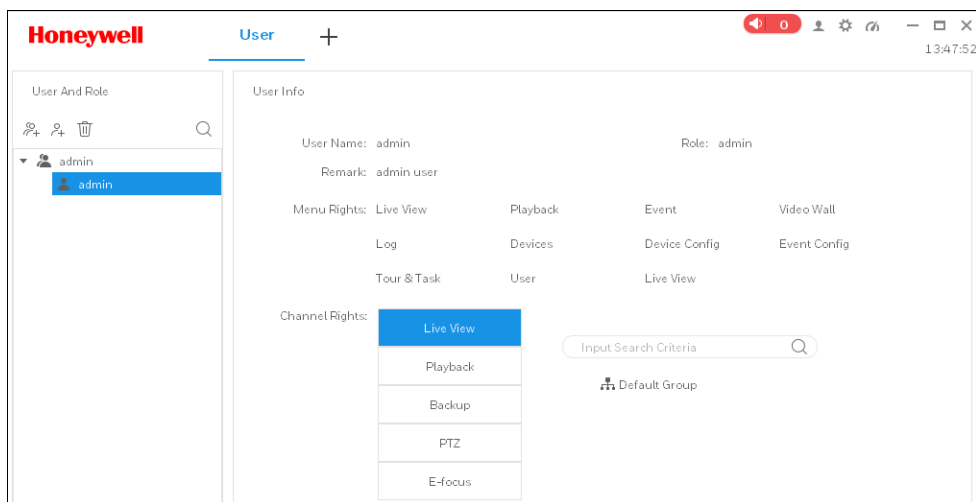

Adding a Role

1. Click  in [Figure 3-3](#) and the following interface is displayed:

Figure 3-4

Role Info

Role Name:

Remark:

Menu Rights:

☒ Check All
 ☒ Live View
 ☒ Playback
 ☒ Event
 ☒ Video Wall
 ☒ Log
 ☒ Devices
 ☒ Device Config
 ☒ Event Config
 ☒ Tour & Task

Channel Righ...

Live View

Playback

Backup

PTZ

E-focus

☐ Default Group

- Enter a role name and check the corresponding menu rights of the role. Enter remarks if necessary.
- Select the channel rights and click **Save**.

Note

- The defaulted role **admin** cannot be modified and deleted.
- When a user of the corresponding role logs in to the client, the system only shows the authorized menu rights.

Modifying a Role

Select a role and click  to modify a role.


Deleting a Role

Select a role and click  .

Adding a User

1. Click  in [Figure 3-3](#) and the following interface is displayed:

 Figure 3-5

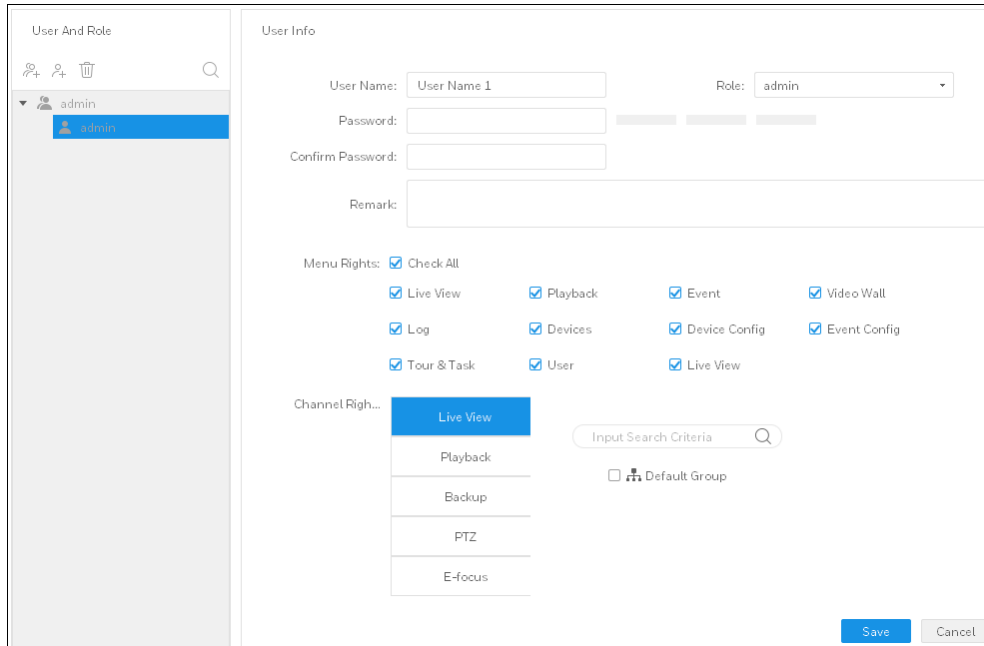

2. Refer to the following table to set the user's parameters.

Table 3-2

Parameter	Description
Username	Enter the user name. The username cannot be the same as the existing username.
Role	Select a user role from the dropdown list or click  to add a new role.
Password Confirm	Enter the user's password and confirm the password.
Remark	Description of the user information.
Menu Rights	Check the box to select corresponding rights for the current user. If the new user's role is admin, the system checks all rights by default.
Channel Rights	Select the user's channel rights.

3. Click **Save**.

Modifying a User

Select a user and click  to modify a user.

Deleting a User

Select a user and click .

Switching a User

To switch a user, click  on the top right corner in [Figure 3-2](#) and select Switch User.

Devices

You can add a single device or a batch of devices (i.e. DVR, NVR) automatically or manually.

Note Adding IP camera is not recommended.

Adding a Device


There are three ways to add devices:

1. Auto Adding Devices;
2. Manually Adding Devices;
3. Batch Import Devices.



Click  on the **SETTINGS** pane in [Figure 3-2](#) to go to the following interface:

 Figure 3-6

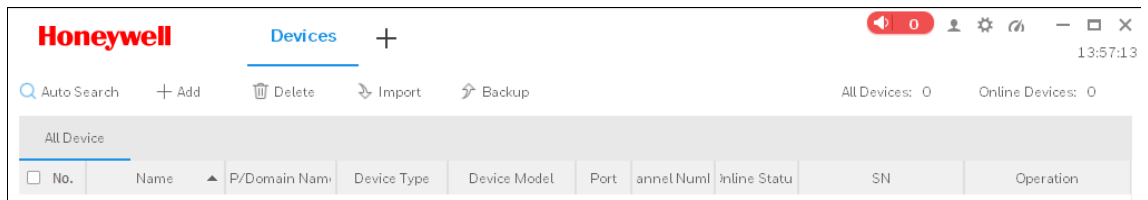


Adding Devices Automatically

Auto adding devices applies to searching a batch of devices by device IP segment.


1. Click **Auto Search** in [Figure 3-6](#) and the following window is displayed:

 Figure 3-7

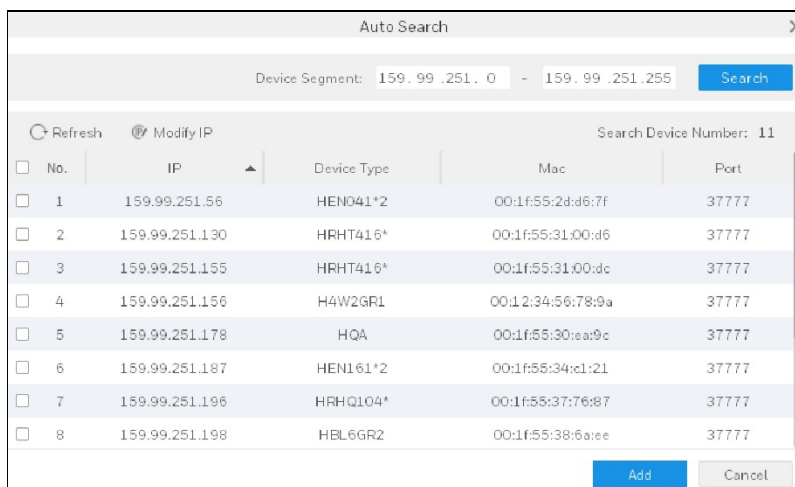


2. Set the device IP segment and click **Search** to search the devices that are within the segment.
3. Check the devices that you want to add and click **Add**. A confirmation window pops up.

 Figure 3-8

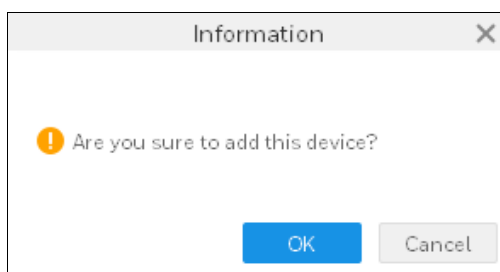


4. Click **OK** and a login window pops up. Enter the username and password.

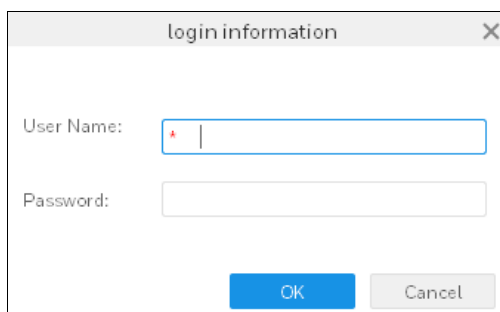 Figure 3-9

 
A dialog box titled "login information" with a close button (X) in the top right corner. It contains two input fields: "User Name:" and "Password:". Below the input fields are two buttons: "OK" (blue) and "Cancel" (gray).

 
5. Click **OK** and the added device is displayed in the device list.

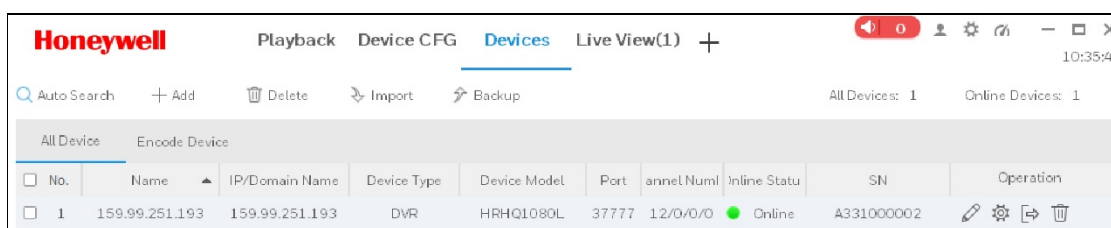Figure 3-10


The Honeywell web interface for device management. The top navigation bar includes "Playback", "Device CFG", "Devices" (selected), and "Live View(1)". Below the navigation bar, there are tabs for "All Device" and "Encode Device". A table lists the devices with columns: No., Name, IP/Domain Name, Device Type, Device Model, Port,annel Numl, Inline Statu, SN, and Operation. The table shows one device with IP 159.99.251.193, Device Type DVR, and Device Model HRHQ1080L. The status is "Online".

No.	Name	IP/Domain Name	Device Type	Device Model	Port	annel Numl	Inline Statu	SN	Operation
1	159.99.251.193	159.99.251.193	DVR	HRHQ1080L	37777	12/0/0/0	Online	A331000002	[Edit] [Refresh] [Delete]

6. To modify the IP of a device, select a device in [Figure 3-7](#) and click **Modify IP**.

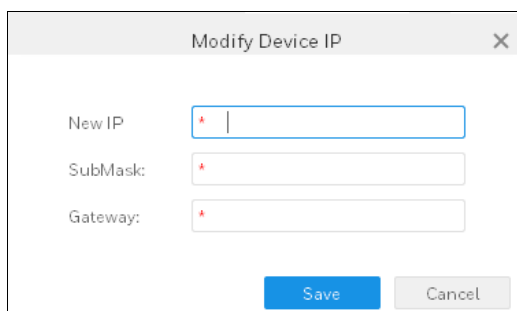Figure 3-11


A dialog box titled "Modify Device IP" with a close button (X) in the top right corner. It contains three input fields: "New IP", "SubMask:", and "Gateway:". Below the input fields are two buttons: "Save" (blue) and "Cancel" (gray).


7. Enter the new IP, sub mask and gateway. Click **Save**.

Manually Adding Devices

Manually adding devices applies to adding a single device.

1. Click **Add** in [Figure 3-6](#) and the following window is displayed:

 Figure 3-12

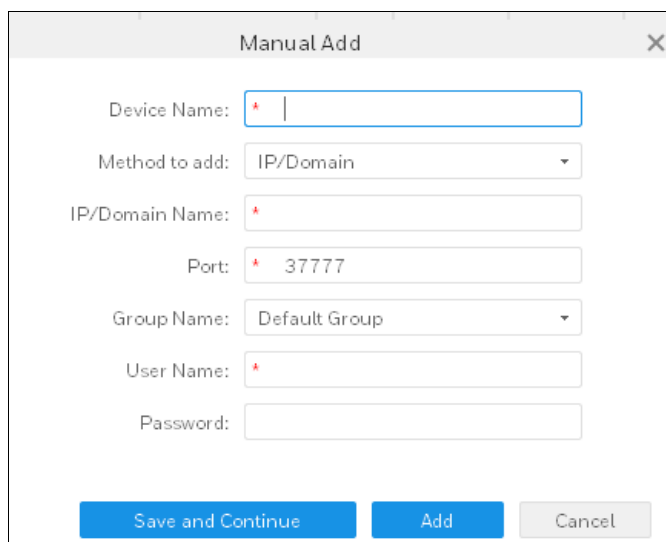

The 'Manual Add' dialog box contains the following fields and controls:

- Device Name:** A text input field with a red asterisk indicating it is required.
- Method to add:** A dropdown menu currently set to 'IP/Domain'.
- IP/Domain Name:** A text input field with a red asterisk.
- Port:** A text input field containing '37777' with a red asterisk.
- Group Name:** A dropdown menu currently set to 'Default Group'.
- User Name:** A text input field with a red asterisk.
- Password:** A text input field.
- Buttons:** 'Save and Continue' (blue), 'Add' (blue), and 'Cancel' (grey).


2. Enter the corresponding information and click **Add**.
3. Click **Save and Continue** to add the next device; click **Cancel** to exit.

Batch Import Device

You can prepare the device configuration file (.xml format) in advance and import it to the system.

1. Click **Import** in [Figure 3-6](#) and the following window is displayed:

 Figure 3-13

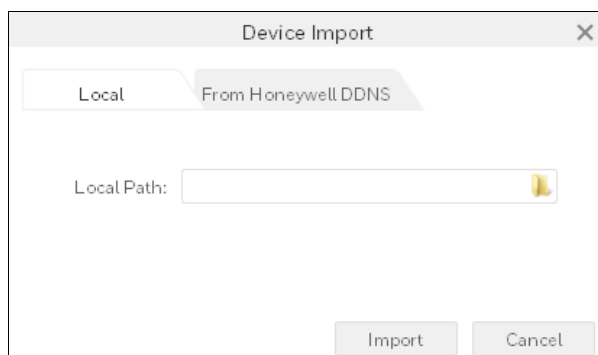

The 'Device Import' dialog box features two tabs: 'Local' and 'From Honeywell DDNS'. The 'Local' tab is active, showing a 'Local Path:' label and a file selection icon. At the bottom are 'Import' and 'Cancel' buttons.

- Click the **Local** tab to select the device configuration file (.xml format) locally.
 - Click the **From Honeywell DDNS** tab and enter the username and the password of the device.
2. Click **Import**. When the devices are successfully imported, system shows a message. Click **OK**.

After a device is added, system auto logs in to the device. The Online Status shows Online if login successfully, otherwise it shows "Offline".

- Click  to modify the device;


- Click  to go to the Device Configuration interface;
- Click  to log out the device manually.
- Click  to log in the device manually.
- Click  to delete the device.
- Click  to modify the channel number.

Backup

You can back up the configuration file of all the devices.

1. In [Figure 3-6](#) and click **Backup**. The following window is displayed:

 Figure 3-14

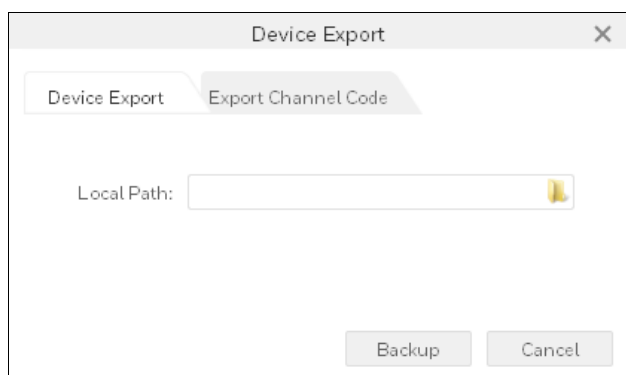


- Click the **Device Export** tab. Select a target path and click **Backup**. The exported file contains User name, Port and IP/Domain Name.
- Click **Export Channel Code** tab. Select a target path and click **Backup**. The exported file contains Device Name, IP, Channel Name and Channel No..

Modifying a Device

1. In [Figure 3-6](#), click the modify icon  of the device that you want to modify. The following window is displayed:

 Figure 3-15

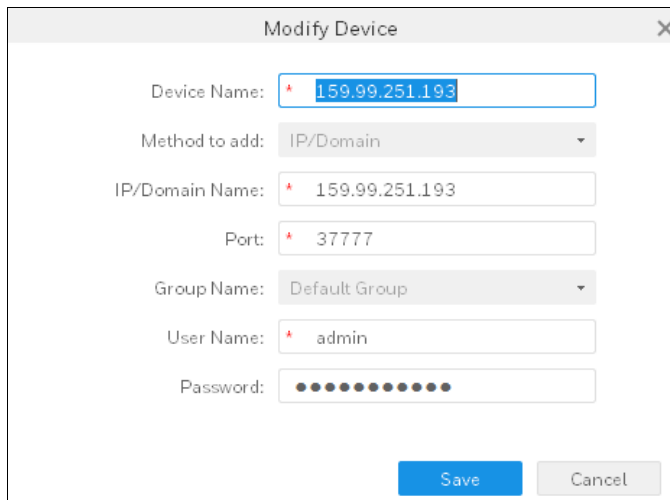

The 'Modify Device' dialog box contains the following fields and controls:

- Device Name:** A text field with a red asterisk and the value '159.99.251.193'.
- Method to add:** A dropdown menu showing 'IP/Domain'.
- IP/Domain Name:** A text field with a red asterisk and the value '159.99.251.193'.
- Port:** A text field with a red asterisk and the value '37777'.
- Group Name:** A dropdown menu showing 'Default Group'.
- User Name:** A text field with a red asterisk and the value 'admin'.
- Password:** A password field with 12 dots.
- Buttons:** 'Save' (blue) and 'Cancel' (grey) buttons at the bottom right.


2. Change the device information and click **Save**.

Deleting a Device

Single Deleting

1. Select a device and click  in [Figure 3-10](#) and the following window is displayed:

 Figure 3-16

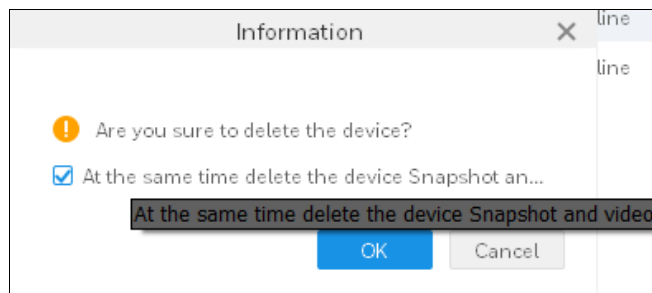

The 'Information' dialog box displays the following content:


- Title Bar:** 'Information' with a close button (X).
- Message:** 'Are you sure to delete the device?' with a yellow warning icon.
- Checkbox:** 'At the same time delete the device Snapshot and video' (checked).
- Buttons:** 'OK' (blue) and 'Cancel' (grey) buttons.

2. Check **At the same time delete the device snapshot and video** if needed and click **OK** to delete the device.

Batch Deleting

1. Select more than one devices and click **Delete** in [Figure 3-10](#). The following window is displayed:

 Figure 3-17

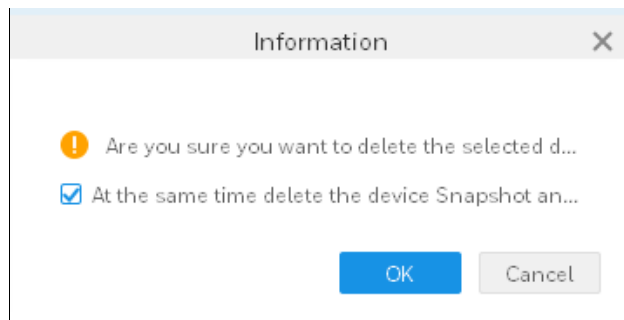

2. Check **At the same time delete the device snapshot and video** if needed and click **OK** to delete the devices.

Note

Hover mouse on the non-completed displayed text to obtain the full text. See [Figure 3-16](#).


Device Configuration

You can update the device's software version, login to the web version, and configure the camera, network, PTZ, event, storage, system of the device.



Click **Device CFG** on the **SETTINGS** pane in [Figure 3-2](#) to go to the following interface.

 Figure 3-18

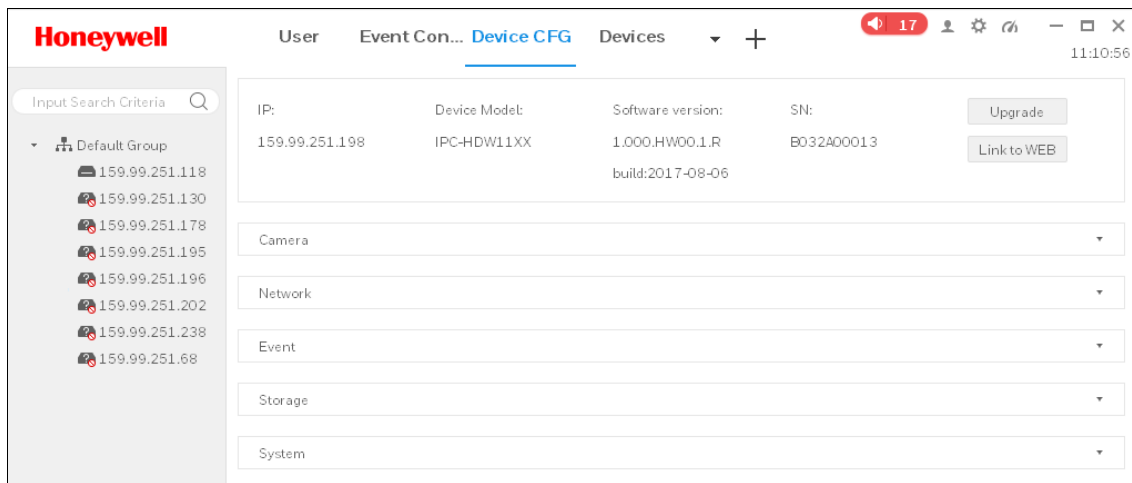

Upgrade: Select a device and click **Upgrade** to upgrade the device software.

Link to WEB: Select a device and click **Link to WEB** to login to the web version.

Camera

Click **Camera** to expand the option.

Figure 3-19




Click each tab to further configure the detailed parameters correspondingly.

Network

Click **Network** to expand the option.

 Figure 3-20

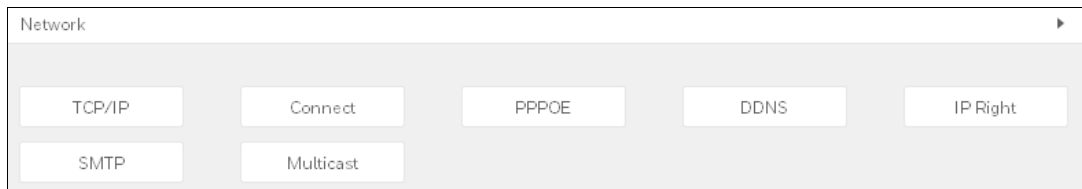


Click each tab to further configure the detailed parameters correspondingly.

Event

Click **Event** to expand the option.

 Figure 3-21

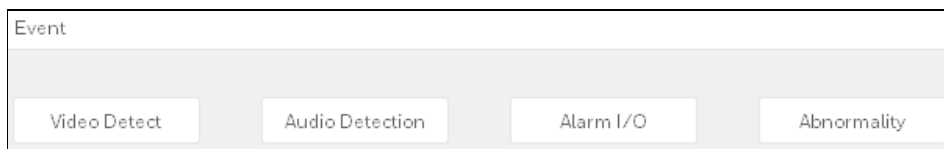


Click each tab to further configure the detailed parameters correspondingly.

Storage

Click **Storage** to expand the option.

 Figure 3-22

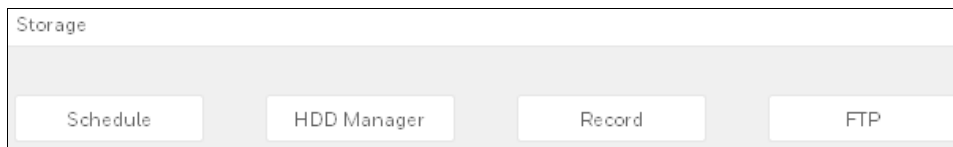


Click each tab to further configure the detailed parameters correspondingly.

System

Click **System** to expand the option.

 Figure 3-23

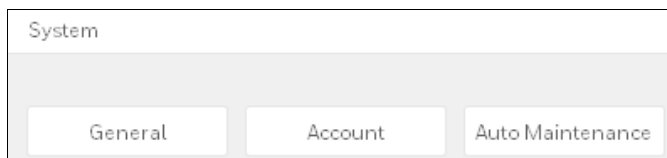


Click each tab to further configure the detailed parameters correspondingly.

Event Configuration



Click **Event Config** on the **SETTINGS** pane in [Figure 3-2](#) to go to the following interface:

 Figure 3-24

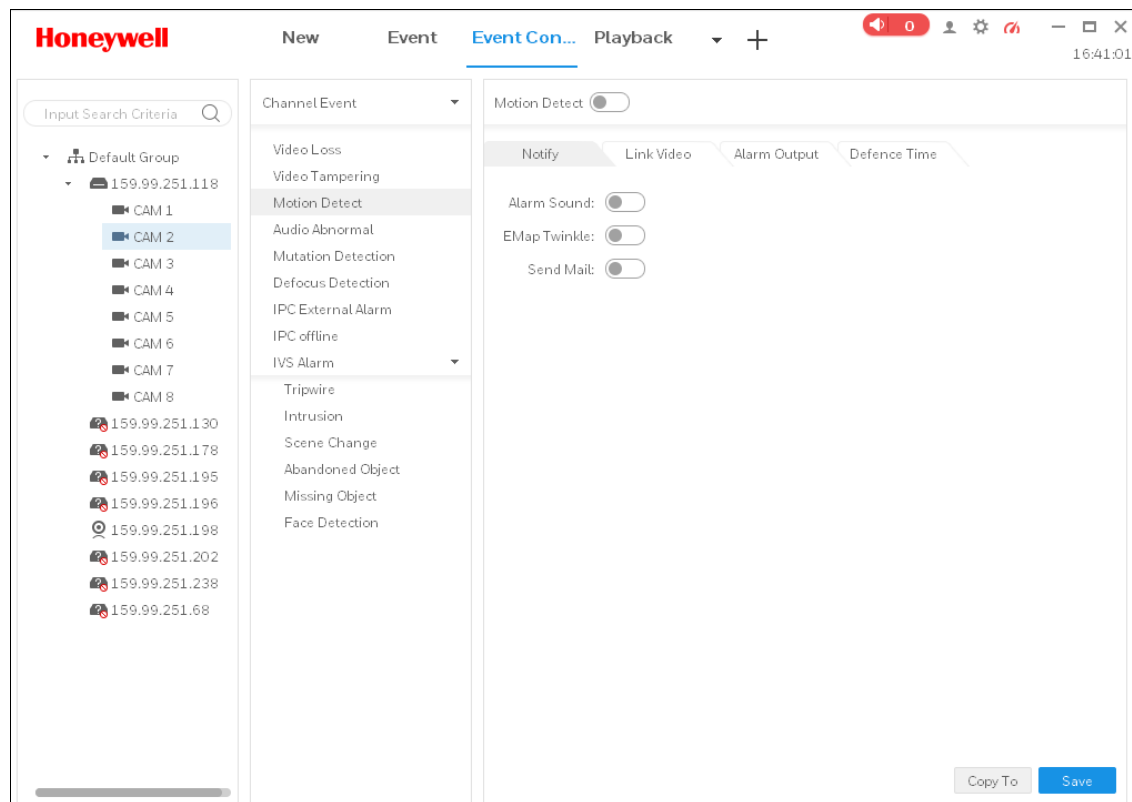

Events was shown variously based on different devices. Refer to the following table for detailed information.

Table 3-3

Event Type	Event	Description
Channel event	Video Loss	The network is abnormal.
	Video Tampering	The video is tampered.
	Motion Detect	The object is moving.
	Audio Abnormal	The audio connection is abnormal.
	Mutation Detection	The sound is suddenly changed.
	Defocus detect	Defocus occurs.

	IPC External Alarm		For only NVR/HCVR. Check the external alarm input of IPC which is connected to the NVR/HCVR.
	IPC Offline Alarm		For only NVR/HCVR. Event occurs when the IPC is disconnected to the NVR/HCVR.
	IVS Alarm	Tripwire	When the object crosses line from the set direction.
		Cross warning zone	When the object enters or leaves the area, or the target object appears in the region.
		Scene Change	When the scene is changed.
		Abandoned Object Detection	When the monitoring screen have left more than the target time set by the user.
		Missing Object Detection	When the monitoring screen is removed over a certain period of time.
		Face detection	When the monitor screen detects a person's face.
		Loitering detection	When the target object continuously appears in the monitoring area longer than the set time.
		Crowd Gathering Estimation	When the crowd gathered in the monitoring area.
		Fast Moving	Calculate target actual speed and when target moving speed exceeds the set speed, event is triggered.
		Parking Detection	Event is generated when the vehicle in stationary time exceeds a set time.
External Event	Alarm input 1 to input <i>N</i> are different according to device alarm input structure.		Event is generated when there is external alarm input.
Device Event	No Disks		Event is generated when the device does not have storage devices.


Disk Fault	Event is generated when the device has hard disk failures.
Disk Full	Event is generated when the device disk is full.
Invalid Access	When the login password you enter are consecutively incorrect, and reach the limit, event is triggered.
Device Offline	When the device is offline.
Voltage Alarm	When the voltage is higher or lower than the preset.

Notify

If the **Notify** function is enabled, system will alarm, twinkle on map or send an email when an event occurs.

1. Select a device and an event type (take **Video Loss** as an example) in [Figure 3-24](#). The following interface is displayed:

 Figure 3-25

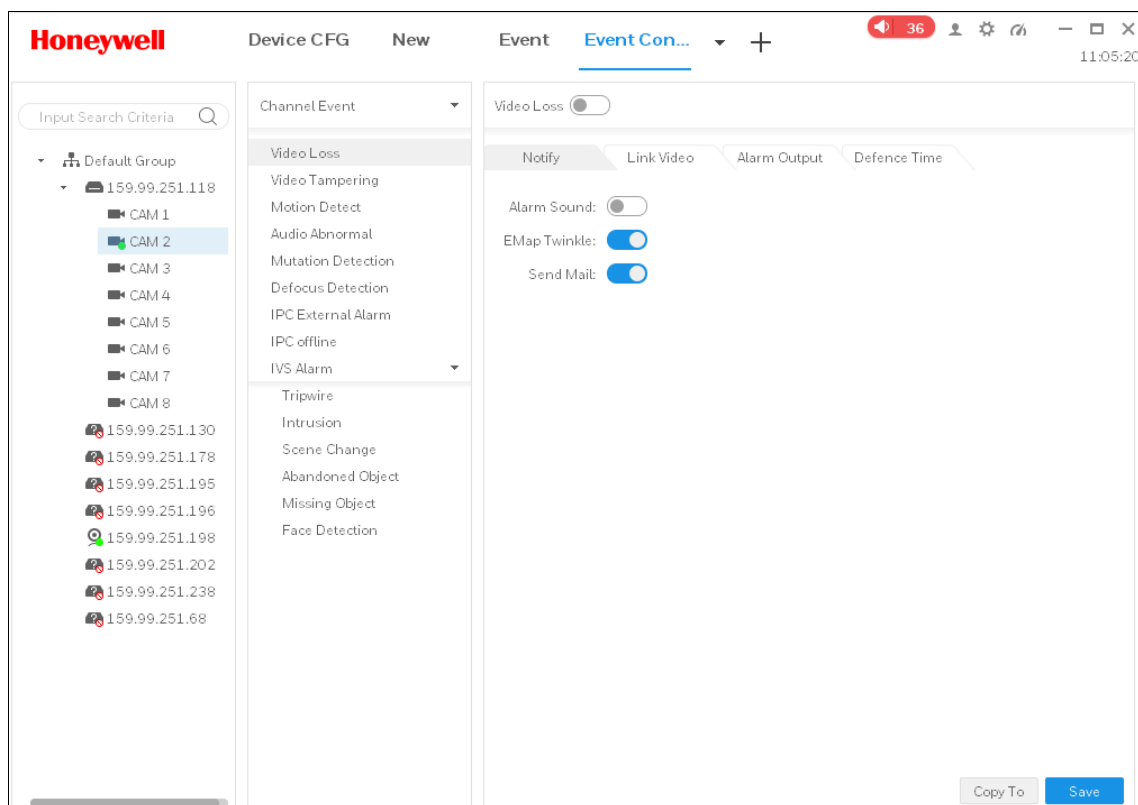


2. Click **Video Loss**  to enable the event type.
3. Select the **Notify** tab and click  to enable **Alarm Sound**, **E-map Twinkle** or **Send Email** functions.
4. Click **Save** or click **Copy** to duplicate the settings to other devices.

Link Video

If the **Link Video** function is enabled, system will link to a corresponding camera's live view or record when an event occurs.

1. Select a device and an event type (take **Video Loss** as an example) in [Figure 3-24](#). The following interface is displayed:

 Figure 3-26

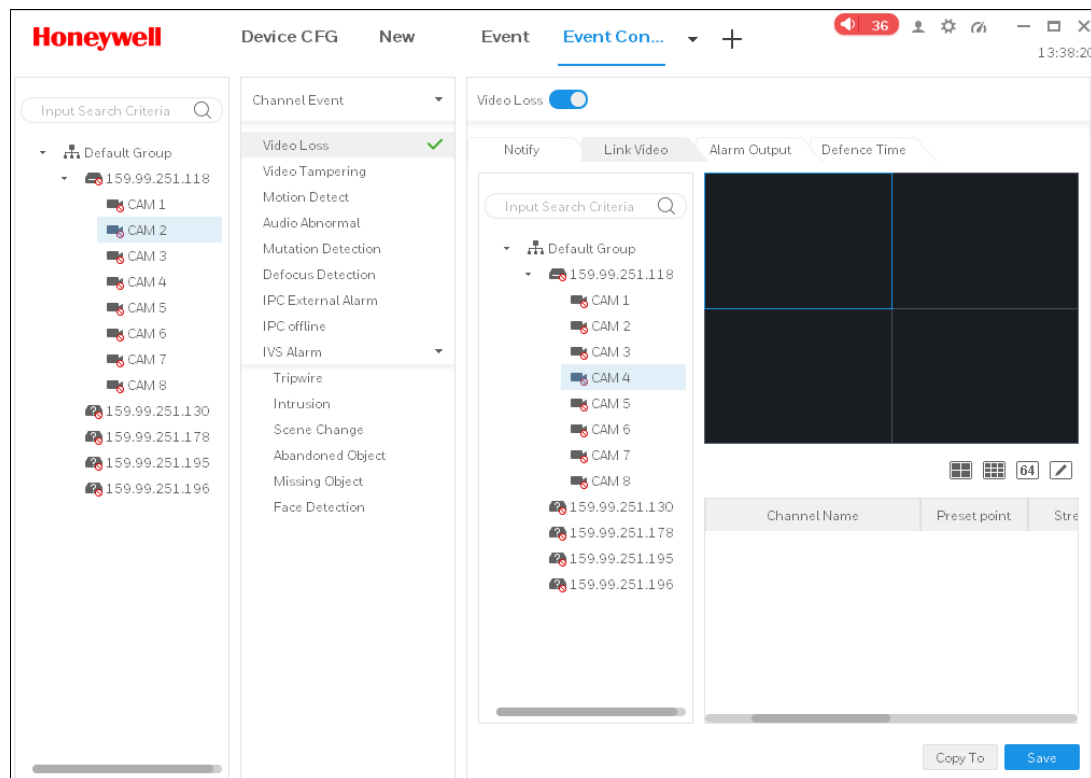

2. Click **Video Loss**  to enable the event type.
3. Select the **Link Video** tab. Select a video window and double click a camera you want to link to or directly drag it to the window. You can set the window layout on



4. In the linked camera list, you can set the following items:
 - Set Preset Point


- Set Stream Type
 - Set Record Duration
 - Enable /Disable Auto Open Video
 - Enable /Disable Record
 - Delete the camera
5. Click **Save** or click **Copy** to duplicate the settings to other devices.

Alarm Output

If the **Alarm Output** function is enabled, system will link to a corresponding camera alarm output when an event occurs.

1. Select a device and an event type (take **Video Loss** as an example) in [Figure 3-24](#). The following interface is displayed:

 Figure 3-27

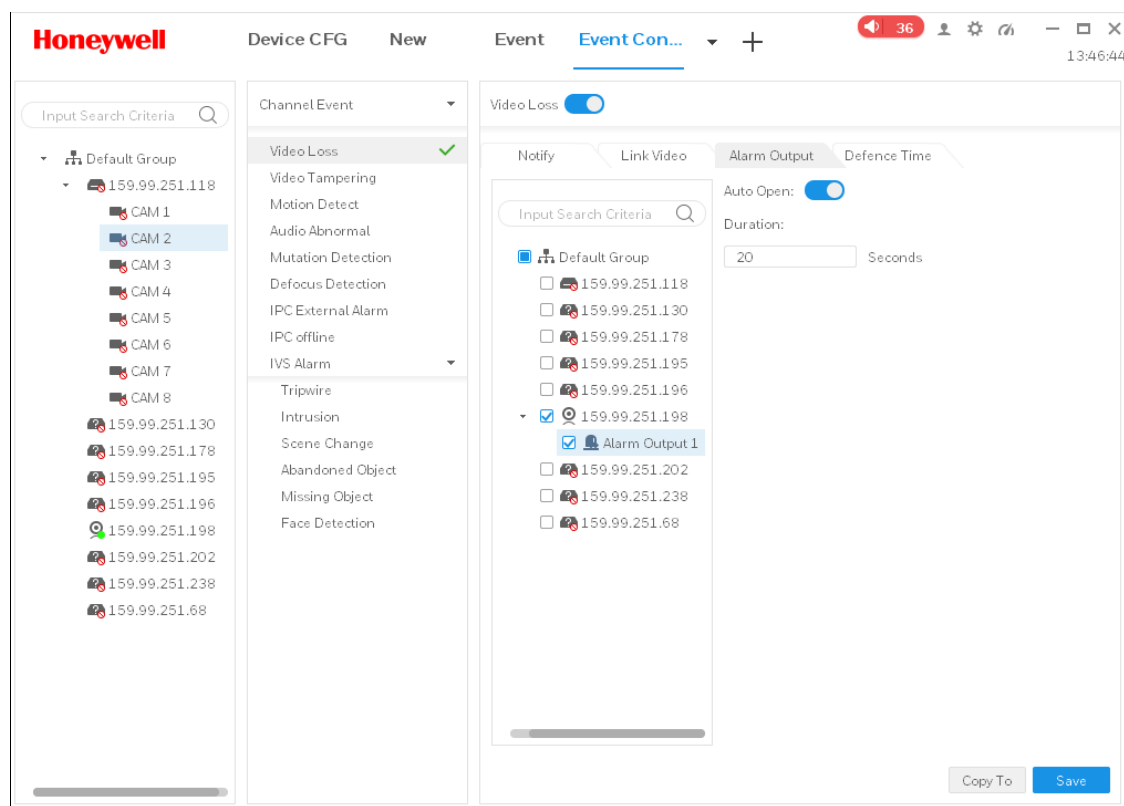


2. Click **Video Loss**  to enable the event type.
3. Select the **Alarm Output** tab and select the target IP camera by double clicking it.
4. Click  to enable/disable **Auto Open** and manually set the duration time.
5. Click **Save** or click **Copy** to duplicate this settings to other device.

Defence Time

Event is armed all-day by default. You can set the arm/disarm period.


1. Select a device and an event type (take **Video Loss** as an example) in [Figure 3-24](#). The following interface is displayed:

 Figure 3-28

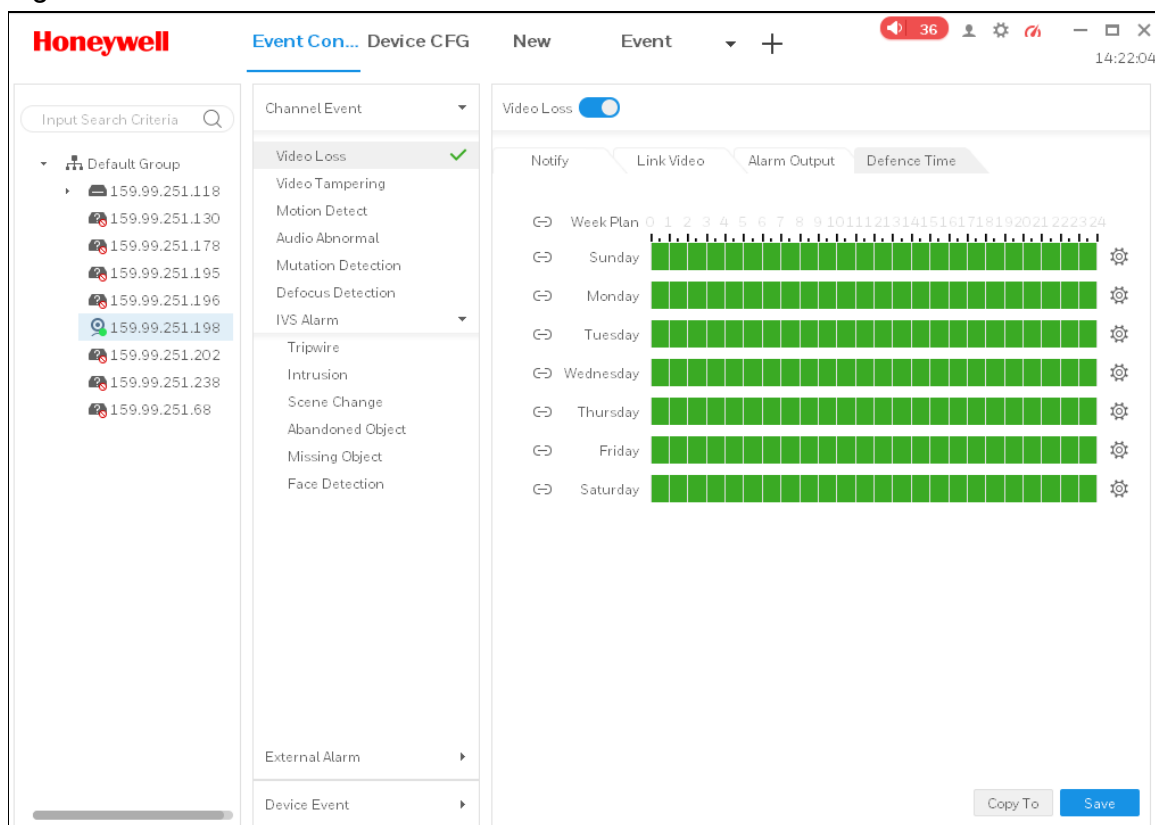

1. Click **Video Loss**  to enable the event type.
2. Select the **Defence Time** tab and use mouse to draw the corresponding period on the time bar directly. You can also click  to set the period in the following pop-up box.

 Figure 3-29

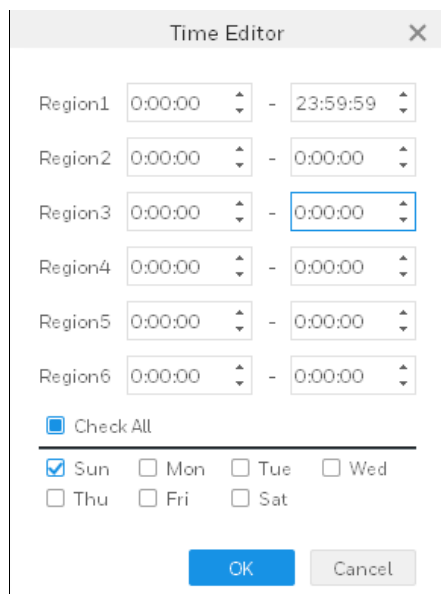

The Time Editor dialog box contains six rows for Region1 through Region6. Each row has two time input fields separated by a minus sign. Region1's second field is set to 23:59:59. Region3's second field is highlighted with a blue border. Below the regions is a 'Check All' checkbox and a section for selecting days of the week: Sun (checked), Mon, Tue, Wed, Thu, Fri, and Sat. At the bottom are OK and Cancel buttons.


Event View

You can view the alarm event information.



Click **Event** on the **BASIC** pane in [Figure 3-2](#) to go to the following interface:

 Figure 3-30

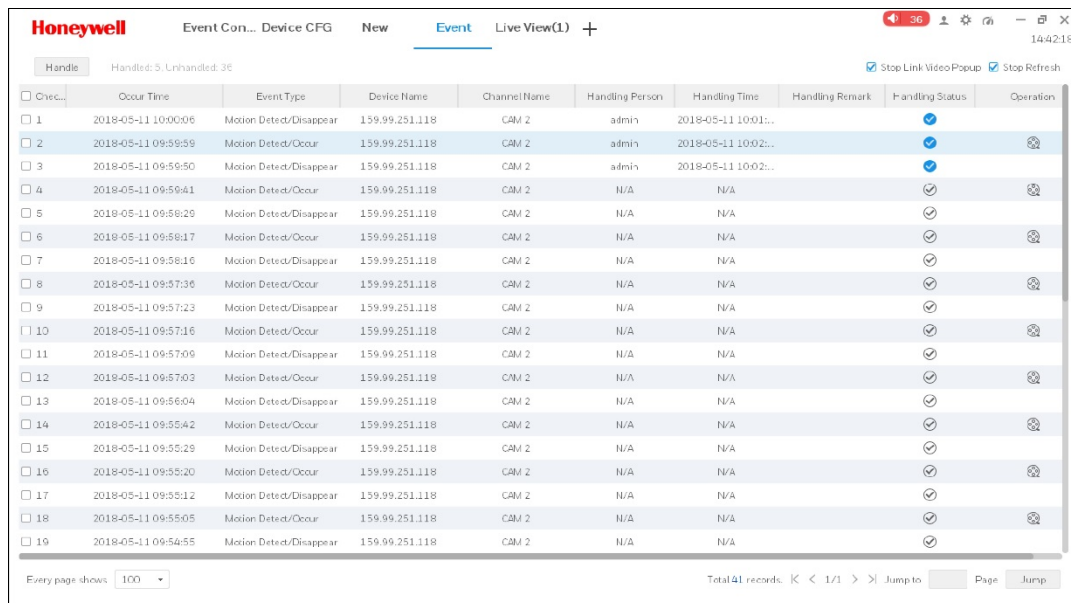

The Honeywell Event View interface shows a table of alarm events. The table has columns for Occur Time, Event Type, Device Name, Channel Name, Handling Person, Handling Time, Handling Remark, Handling Status, and Operation. The first three columns are highlighted in blue. The table contains 19 rows of event data. At the bottom, there is a pagination bar showing 'Total 41 records' and a 'Jump to' field.

	Occur Time	Event Type	Device Name	Channel Name	Handling Person	Handling Time	Handling Remark	Handling Status	Operation
☐ 1	2018-05-11 10:00:06	Motion Detect/Disappear	159.99.251.118	CAM 2	admin	2018-05-11 10:01:...		✓	
☐ 2	2018-05-11 09:59:59	Motion Detect/Occur	159.99.251.118	CAM 2	admin	2018-05-11 10:02:...		✓	
☐ 3	2018-05-11 09:59:50	Motion Detect/Disappear	159.99.251.118	CAM 2	admin	2018-05-11 10:02:...		✓	
☐ 4	2018-05-11 09:59:41	Motion Detect/Occur	159.99.251.118	CAM 2	N/A	N/A		✓	
☐ 5	2018-05-11 09:58:29	Motion Detect/Disappear	159.99.251.118	CAM 2	N/A	N/A		✓	
☐ 6	2018-05-11 09:58:17	Motion Detect/Occur	159.99.251.118	CAM 2	N/A	N/A		✓	
☐ 7	2018-05-11 09:58:16	Motion Detect/Disappear	159.99.251.118	CAM 2	N/A	N/A		✓	
☐ 8	2018-05-11 09:57:36	Motion Detect/Occur	159.99.251.118	CAM 2	N/A	N/A		✓	
☐ 9	2018-05-11 09:57:23	Motion Detect/Disappear	159.99.251.118	CAM 2	N/A	N/A		✓	
☐ 10	2018-05-11 09:57:16	Motion Detect/Occur	159.99.251.118	CAM 2	N/A	N/A		✓	
☐ 11	2018-05-11 09:57:09	Motion Detect/Disappear	159.99.251.118	CAM 2	N/A	N/A		✓	
☐ 12	2018-05-11 09:57:03	Motion Detect/Occur	159.99.251.118	CAM 2	N/A	N/A		✓	
☐ 13	2018-05-11 09:56:04	Motion Detect/Disappear	159.99.251.118	CAM 2	N/A	N/A		✓	
☐ 14	2018-05-11 09:55:42	Motion Detect/Occur	159.99.251.118	CAM 2	N/A	N/A		✓	
☐ 15	2018-05-11 09:55:29	Motion Detect/Disappear	159.99.251.118	CAM 2	N/A	N/A		✓	
☐ 16	2018-05-11 09:55:20	Motion Detect/Occur	159.99.251.118	CAM 2	N/A	N/A		✓	
☐ 17	2018-05-11 09:55:12	Motion Detect/Disappear	159.99.251.118	CAM 2	N/A	N/A		✓	
☐ 18	2018-05-11 09:55:05	Motion Detect/Occur	159.99.251.118	CAM 2	N/A	N/A		✓	
☐ 19	2018-05-11 09:54:55	Motion Detect/Disappear	159.99.251.118	CAM 2	N/A	N/A		✓	

It lists up to 1000 latest real-time alarm messages.

Table 3-4

Parameter	Function
Stop Link Video Popup	Check it and system does not pop up a video window when an alarm occurs.
Stop Refresh	Check it and system does not refresh new messages.
Handle	Select an event and click Handle . The “Handling Status” of this event becomes handled ().
 17	Click  to mute the alarm sound when an alarm occurs. The figure (17) represents the number of the unhandled messages.


Tour & Task

You can set task plan and monitor tour among different windows.



Click **Tour & Task** on the **SETTINGS** pane in [Figure 3-2](#) to go to the following interface:

 
Figure 3-31

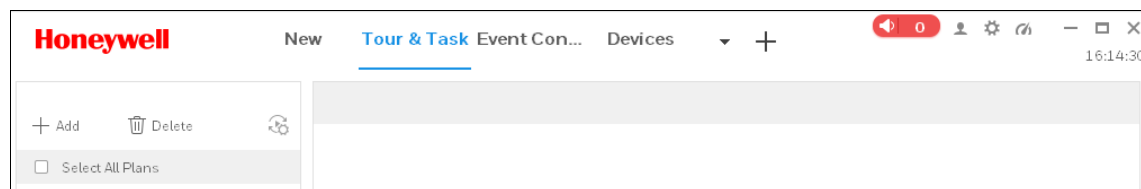

Adding a Task Plan


1. Click **Add** and the following interface is displayed:

 Figure 3-32

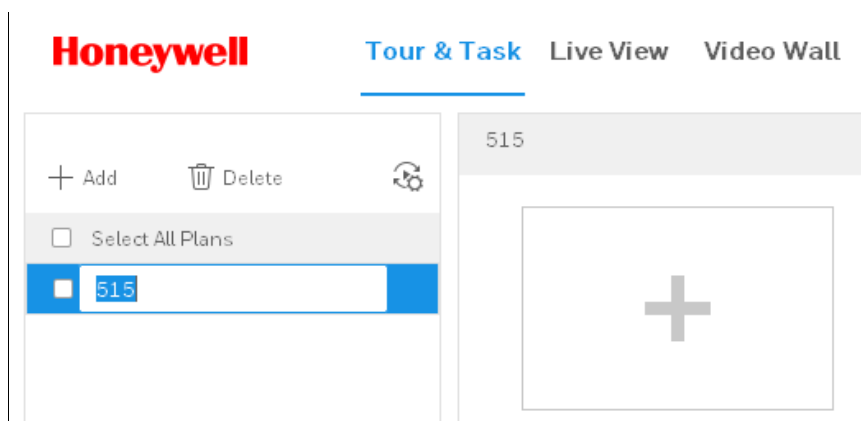


2. Enter the name of the new task plan.
3. Set the task.
 - a. Click **+** in [Figure 3-32](#) and the following interface is displayed:

 Figure 3-33

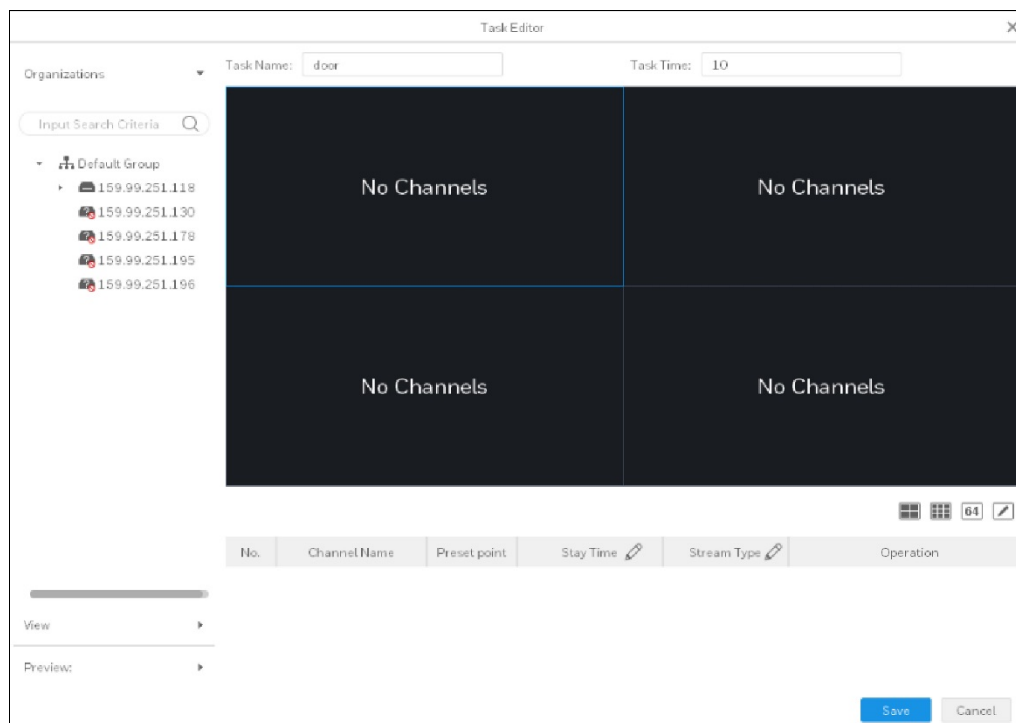


- b. Enter the task name and the task time.
- c. Click     to set the window layout.
- d. Drag device(s) on the left pane to the video window. The following interface is displayed:

 Figure 3-34

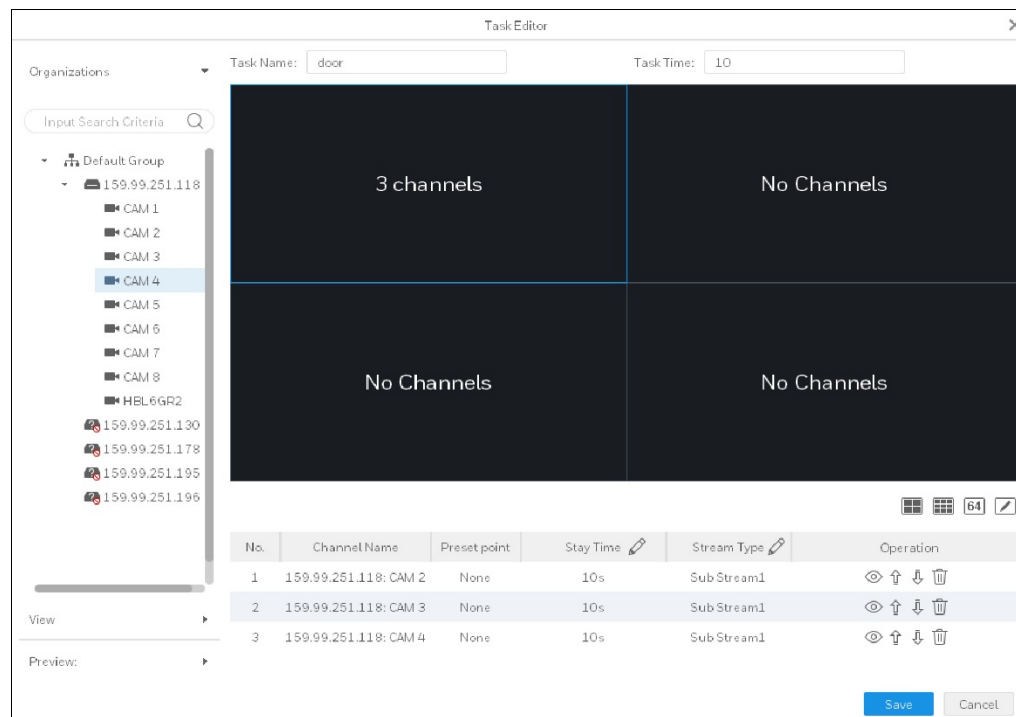


- e. Set the preset point, stay time and stream type by double clicking the corresponding field.

 Figure 3-35

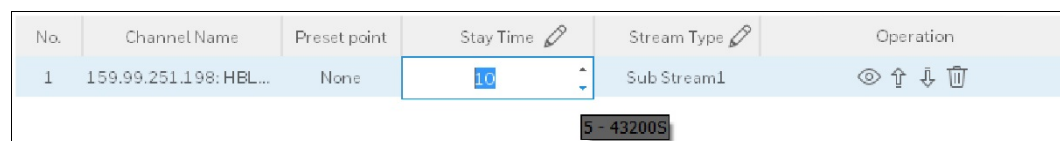

- Click to display the live view or e-map information in the left live view window.
 - Click or to adjust the device order in the task. The device order determines the corresponding video order played in the task.
 - Click to delete the corresponding device.
- f. Click **Save** to save the current settings and the new task plan is displayed in the Tour & Task interface.

 Figure 3-36

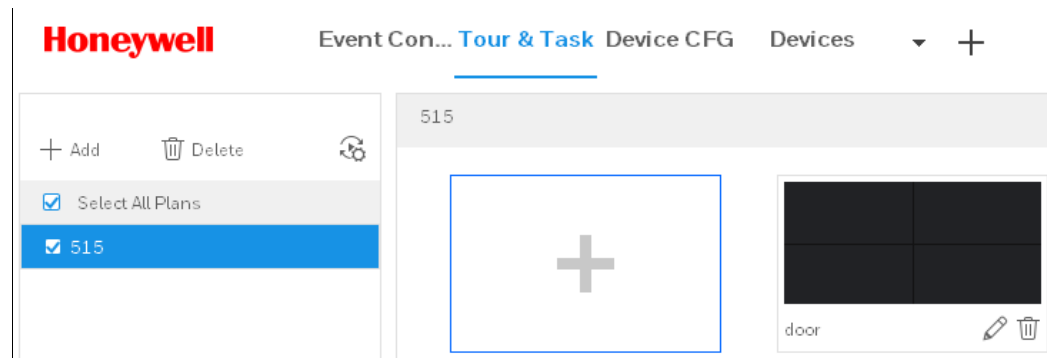


4. Set the tour schedule.

a. Click  and the following interface is displayed:

Figure 3-37

The screenshot shows the 'Scheduled Tour Setting' dialog box. It includes a 'Plan Type' section with 'Day Plan' selected. Below this is a 'Task Plan' dropdown set to '515', and 'Start Time' and 'End Time' fields set to '00:00:00' and '23:59:59' respectively. An 'Add' button is present. At the bottom, there is a table with columns: Task Plan, Start Time, End Time, and Operation. The 'Save' and 'Cancel' buttons are at the bottom right.

- b. Select Plan Type.
- c. Select the Task Plan from the dropdown list.
- d. Set the start time and end time.
- e. Click **Add**.

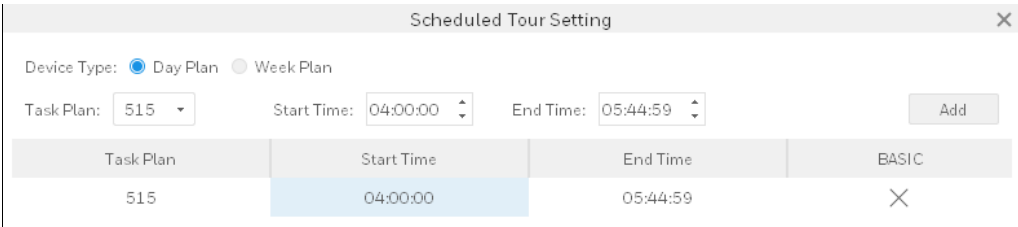 Figure 3-38


Scheduled Tour Setting

Device Type: ☒ Day Plan ☐ Week Plan

Task Plan: 515 Start Time: 04:00:00 End Time: 05:44:59 Add

Task Plan	Start Time	End Time	BASIC
515	04:00:00	05:44:59	X

5. Click **Save** to complete the task plan adding.

Modifying a Task Plan

To modify a task plan, double click the task plan name or click  in [Figure 3-36](#).

Deleting a Task Plan


To delete a task plan, click  in [Figure 3-36](#).

System Configuration

You can set up basic information, live view, playback, event, log, system, language and etc.

Click  on the main interface (see [Figure 3-1](#)) to go to the system configuration interface:

 Figure 3-39

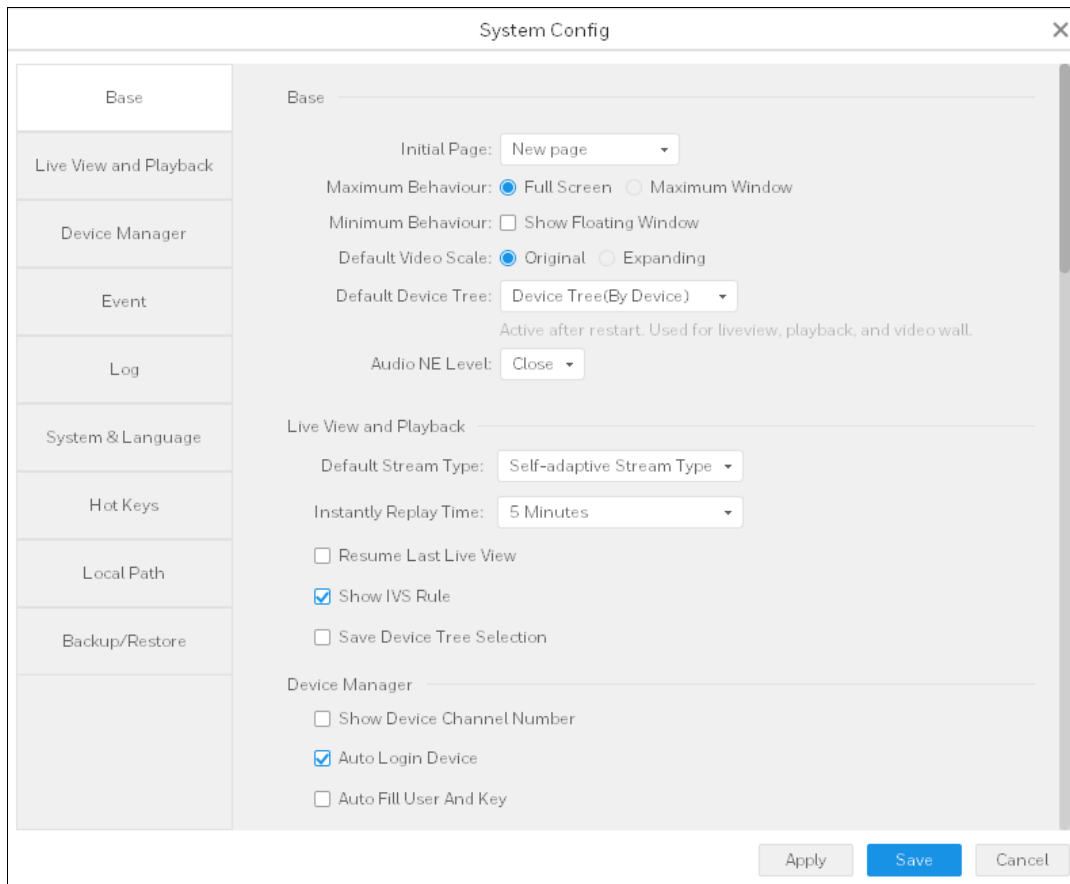

Refer to the following table for detailed information.

Table 3-5

Menu	Parameter	Description
Base	Initial Page	Select from the drop-down list to set up the page shown when you open the software.
	Maximum Behavior	Select the options that how the video window can be maximized.
	Minimum Behavior	Check this option to display floating window when the software is minimized.
	Default Video Scale	Select from the drop-down list to set up the default ratio of the live view or playback video.
	Default Device Tree	Select from the drop-down list to set up in which order the devices are listed, by device or by channel.

Live View and Playback	Audio NE Level	Select from the drop-down list to set up the audio NE level.
	Default Stream Type	Select from the drop-down list to set up the default stream type.
	Instantly Replay Time	Select from the drop-down list to set up the instant replay time of the live view screen.
	Resume Last Live view	Check this option, system records the video window status when it is logging out, and resume the video when it is logged in the next time.
	Show IVS Rule	Check this option to enable the IVS rule option in the right-click menu.
	Save Device Tree Selection	Check this option to save the device as selected status after the video searching.
Device	Show Device Channel Number	Check this option to show the device channel number.
	Auto Login Device	Check this option, the system automatically logs in the added device when the system is restarted.
	Auto Fill User and Key	Check this option, the system automatically logs in the added device without manually enter the username and password.
Event	Loop	Check this option to enable looping alarm when an event occurs.
	Global Wav	- Check this option and select one audio file for all kinds of alarms. - Uncheck this option and select different types of audio file for different kinds of alarms.
	SMTP	Check this option and the system will send an email when an event occurs.
	Log Saved Time	Enter a number in the field to set up the log saved time.

System and Language	Network Ability	Select the actual network performance from the drop-down list.
	Auto Check Time	Check this option to set up from what time to start synchronizing the device time with your local PC time.
	Check Time	Click it to synchronize the device time with your local PC time immediately.
	Language	Select from the drop-down list to set up the language of the system.
Hotkeys		Double click the hotkey column and then enter the hotkey on the keyboard to set up the hotkey.
Local Path	Pic Path	Click it to set up the picture storage path.
	Record Path	Click it to set up set the recording storage path.
Backup/Restore	Backup	Click Backup to back up the configuration.
	Restore	Click Restore and select the configuration file to restore the configuration.

4 Live View

This chapter contains the following sections:


- [Live Viewing](#) on page 39.
- [Video Settings](#) on page 40.

After devices are added, you can check the live view from the connected devices and modify the video settings.



Click **Live View** on the **BASIC** pane in [Figure 3-2](#) to go to the following interface:

 
Figure 4-1

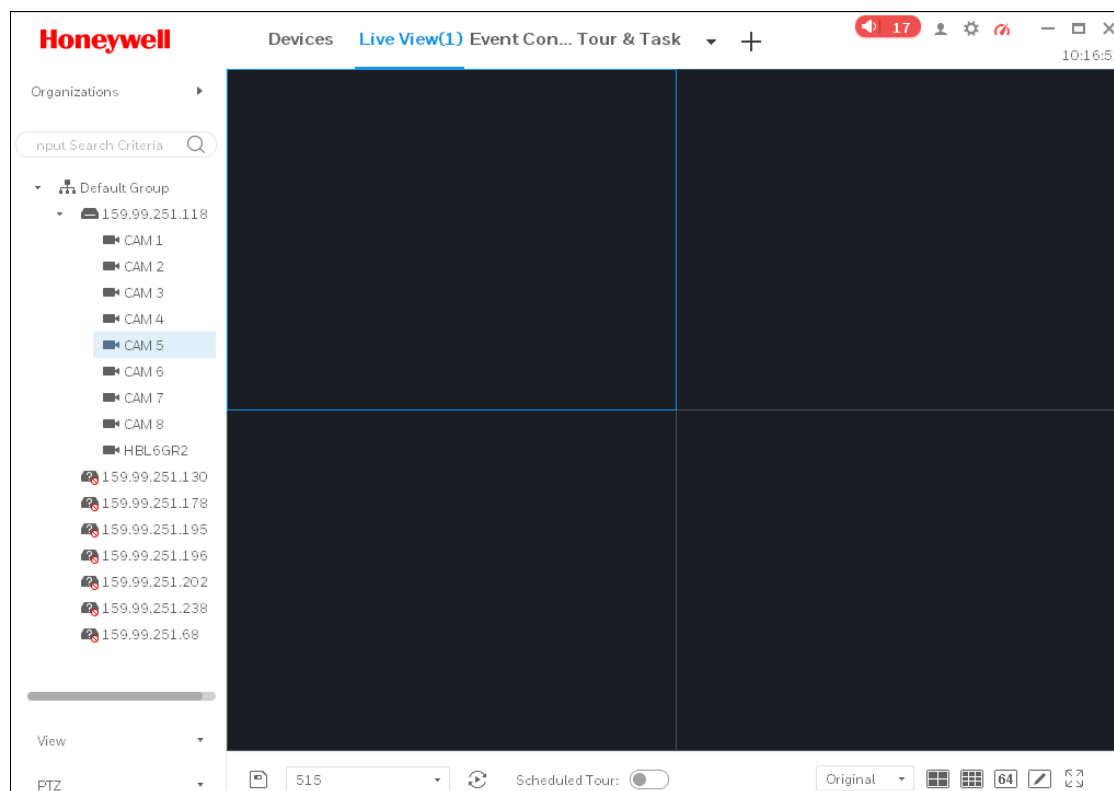

Live Viewing

Select a window and double click a camera on the left pane or drag it to the window to view the video.

 Figure 4-2

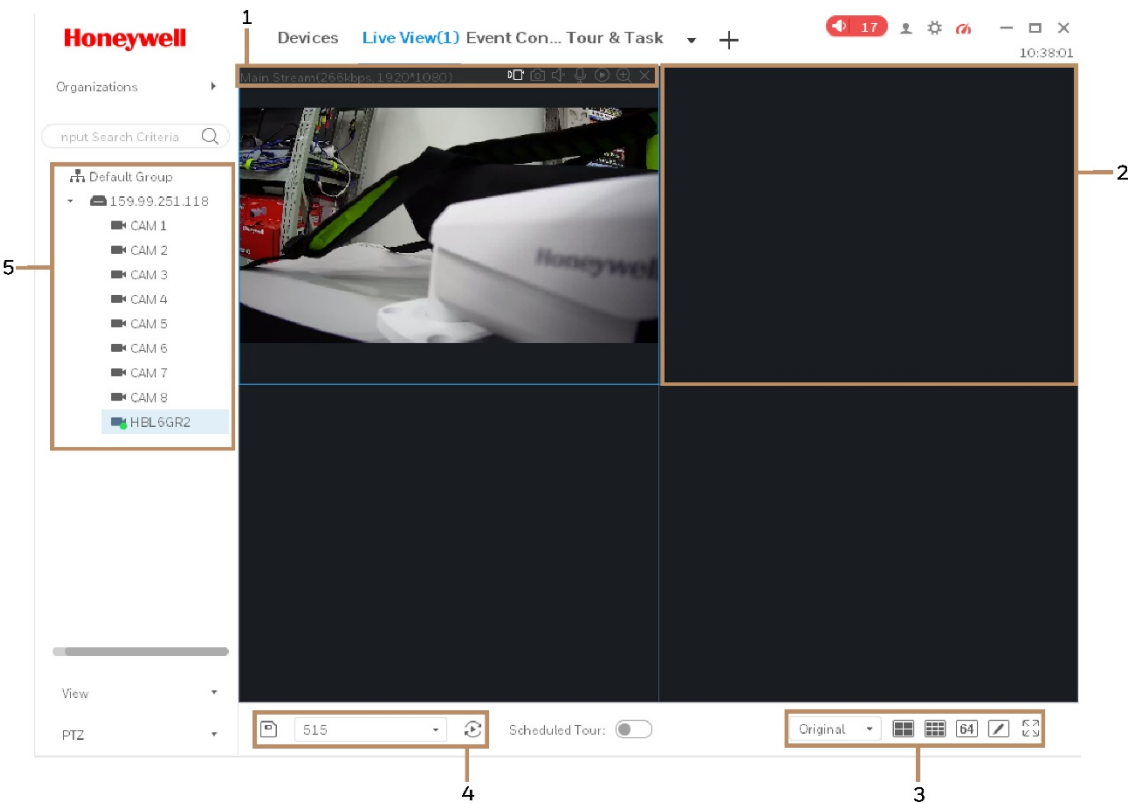

Refer to the following table for detailed information.

Table 4-1


SN	Item	Description
1	Bit stream information and shortcut operation menu	- Local Record. - Snapshot. - Audio. - Audio Talk. - Instant Replay. - Zoom In - Close the video.
2	Video Window	Real-time video

SN	Item	Description
3	Window Layout	   : Click it to set 4-window, 9-window and 64-window layout.
		 : Select a window layout and then click this button to customize its setup.
		 : Adjust the video scale.
		 : Full screen.
4	Intelligent Button	 : Save the current liveview window layout as a view. You can double click the view name to recall the window layout under View tab.
		 : Start tour plan. See Tour & Task on page 30.
		 : Close tour plan.
5	PTZ (PTZ dome cameras or fisheye cameras)	You can set camera direction, zoom in, zoom out, and iris, etc. Click More Functions to set Preset, Tour, Pan, Scan, Pattern, Aux and Wiper.
6	Device List	Right click a device to select main stream/sub stream, modify the channel name or go to the configuration interface.

Video Settings

Right click a live view window and the following window is displayed:

 Figure 4-3

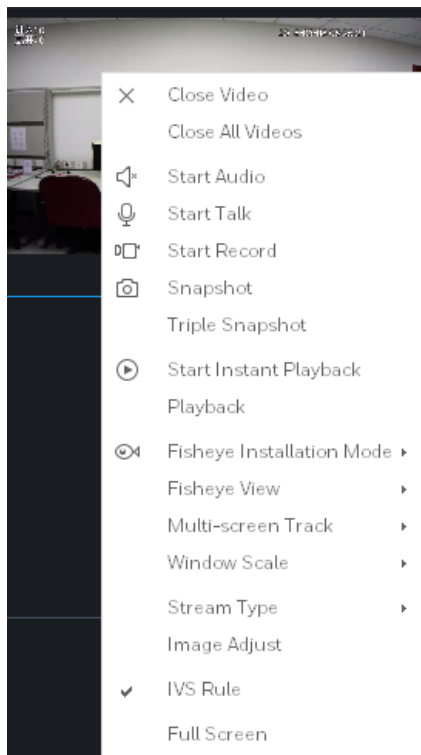

Select corresponding options to set the video.

5 Playback

This chapter contains the following sections:

- [Playing Back the Device Recordings](#) on page [44](#).
- [Playing Back the Device Pictures](#) on page [49](#).
- [Playing Back the Local Recordings](#) on page [50](#).
- [Playing Back the Local Pictures](#) on page [52](#).
- [Exporting the Device Recordings](#) on page [52](#).
- [Exporting the Device Pictures](#) on page [53](#).
- [Exporting the Local Recordings](#) on page [54](#).

You can playback the recordings or pictures that stored in the devices or in the local directory and export them to local computer.



Click **Playback** on the **BASIC** pane in [Figure 3-2](#) to go to the following interface:

Figure 5-1

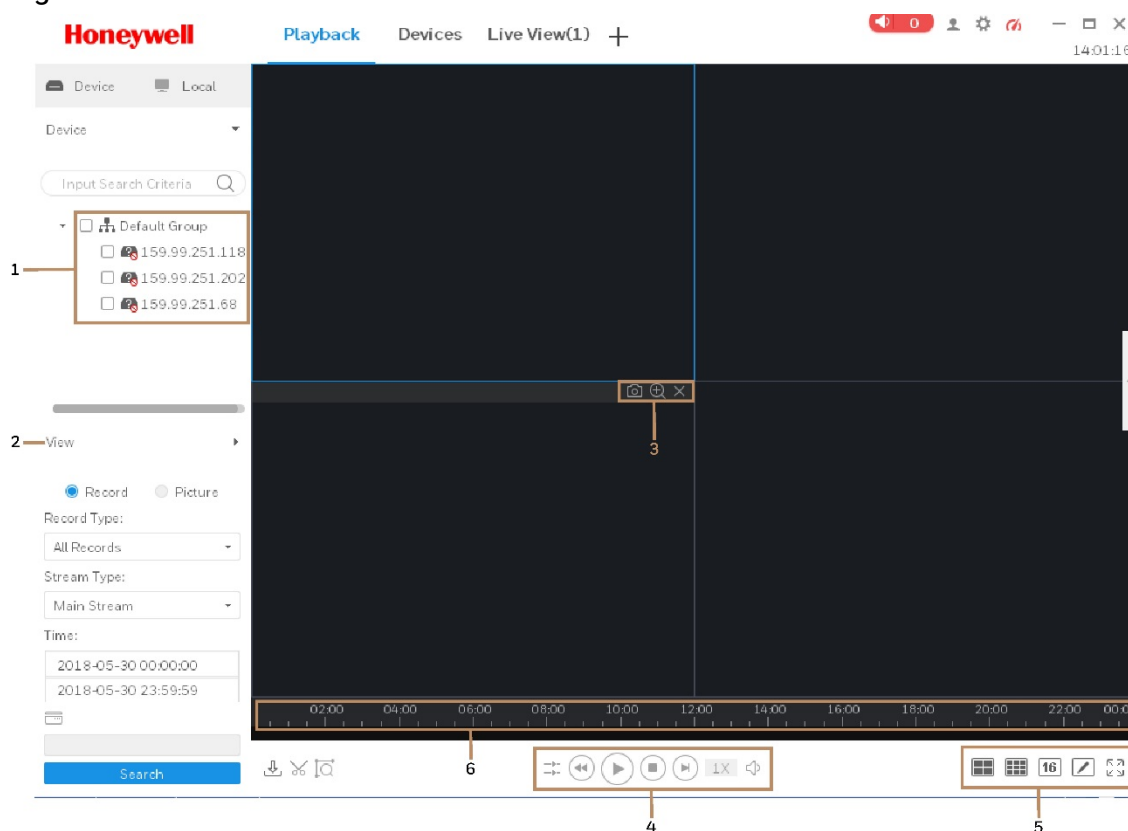 


Table 5-1


SN	Item	Description
1	Device List	Right click the device and select Logout to disconnect the device. After logging out, right click the device and select Login to reconnect to the device.
2	View	Play back videos with certain window layout. See Intelligent Buttons of Figure 4-1 .
3	Window Shortcut Key	 : Snapshot.  : Digital zoom  : Close the current window.

4	Playback Control	•  : Switch playback and pause. •  : Stop playback. •  : Play back forward frame by frame. •  : Adjust the playback speed. Note: the playback speed is subject to the capacity of bandwidth. If it is unable to perform 16x playback, check and upgrade the bandwidth capacity accordingly. •  : Turn on/off the audio and adjust the volume. •  : Play back videos of all windows from the same point of time. •  : Play back the selected window only.
5	Window Layout	•    : Set 4-window, 9-window or 64-window layout. •  : Select a window layout and click this button to customize the window layout. •  : Full screen.
6	Time Bar Control	Scroll mouse to zoom in /zoom out the timeline.

Playing Back the Device Recordings


1. Click **Device** option and select device(s) in the **Device** list or a view in the **View** list.

 Figure 5-2

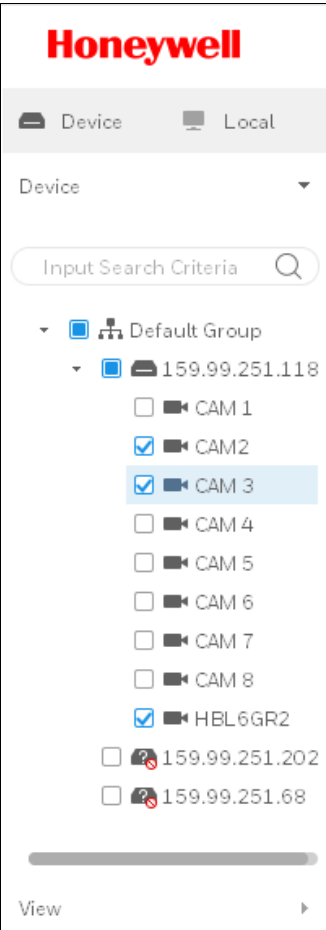


2. Select the **Record** option under the **View** list and set the record type, stream type, start time and end time.

 Figure 5-3

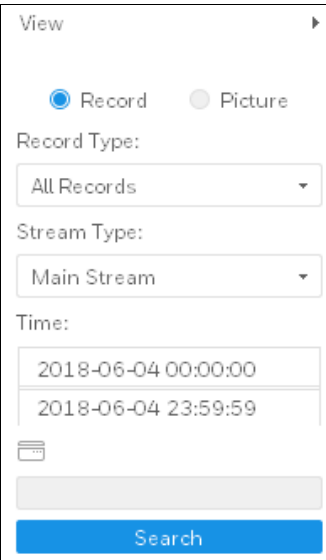

- Click **Search** to search the recording and click  to play the recording.

 
Figure 5-4

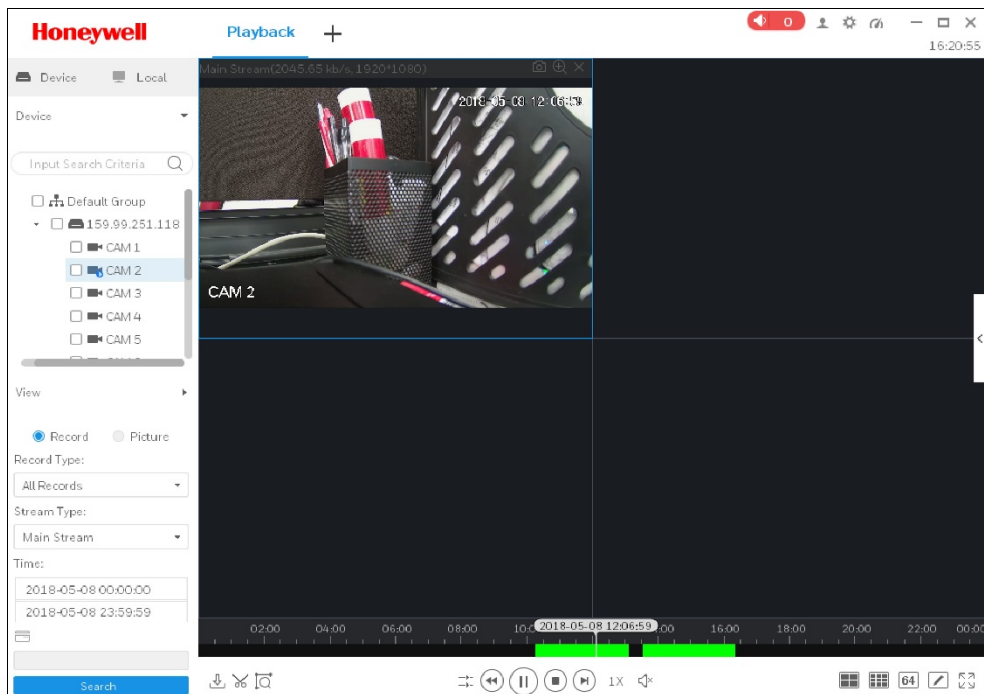

Smart Search


- Click  at the bottom of [Figure 5-4](#) to smart search motion detection. System shows motion detection window:

 Figure 5-5

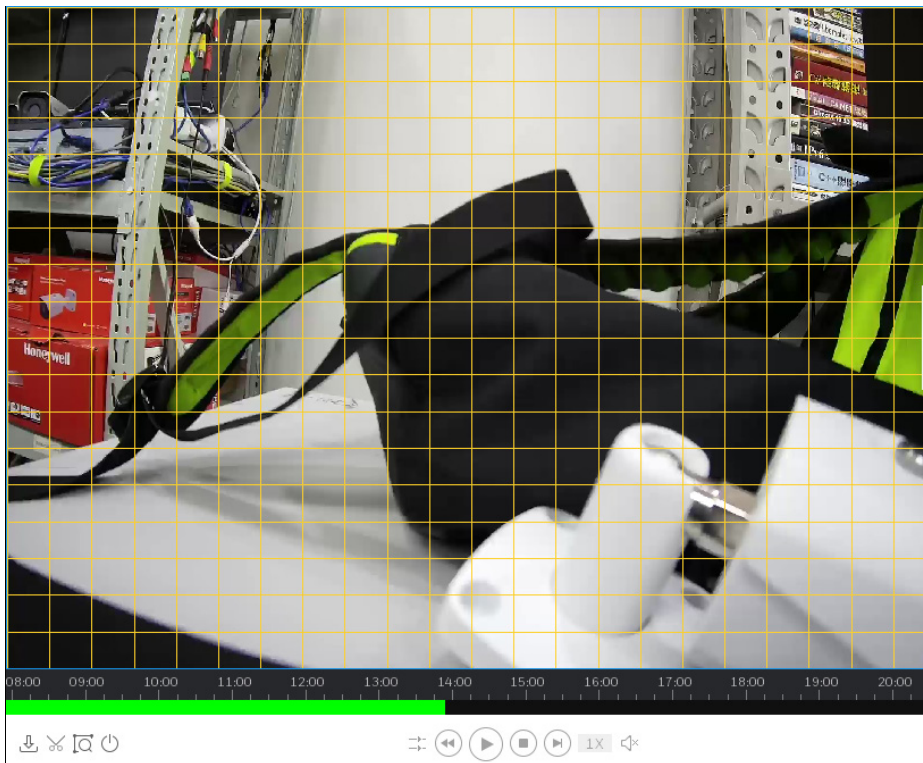


2. Drag an area as a motion detection time range.

  Figure 5-6

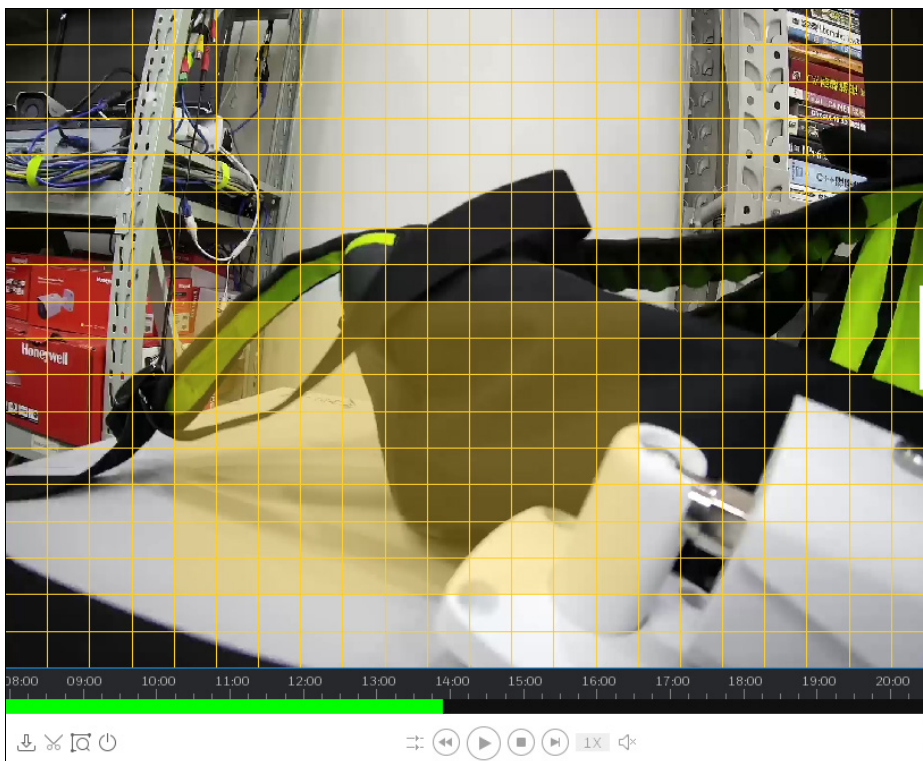

 
- Click  again to search the motion detection video within the time. The purple areas on the time bar in [Figure 5-7](#) represent the motion detection videos found.

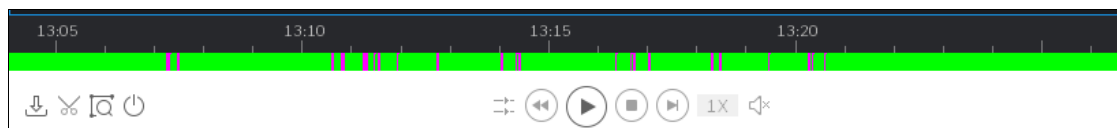Figure 5-7

- Click  to play the motion detection video.
- Click  to exit smart search.

Video Settings

Right click a playback window and the following window is displayed:

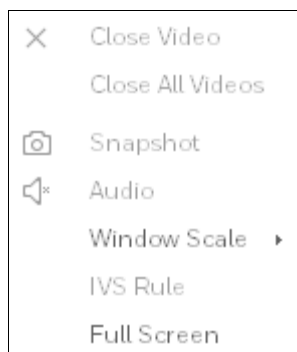Figure 5-8

Refer to the following table for detailed information.

Table 5-2


Item	Function
Close Video	Close the window.
Close All Videos	Close all the windows.
Snapshot	Snapshot current window and save one picture.
Audio	Enable/disable audio function.
Window Scale	Adjust window scale. Right click the playback window and select the video aspect ratio from the window scale menu.
IVS Rule	Enable / disable the IVS function.

Item	Function
Full Screen	Switch to full screen mode. You can right click the window and select Exit Full Screen or press Esc to exit.

Playing Back the Device Pictures

1. Click **Device** option and select device(s) in the **Device** list or a view in the **View** list.

 Figure 5-9

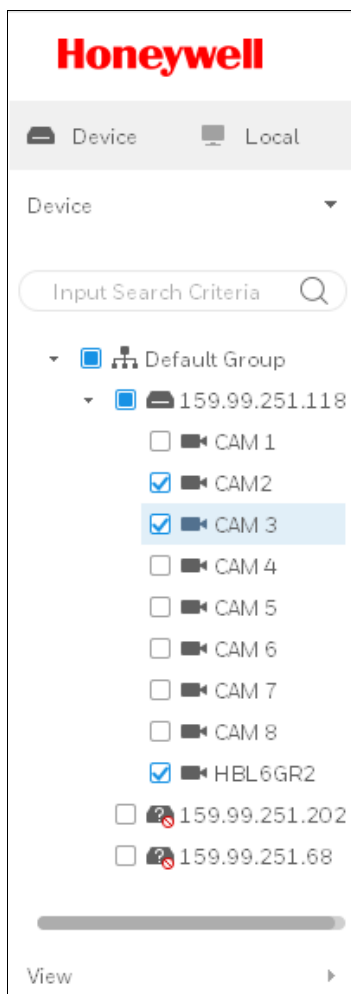


2. Select the **Picture** option under the **View** list and select the start time and end time.

Figure 5-10

3. Click **Search** to search the recordings and click  on the right to expand or collapse the result list.

 Figure 5-11

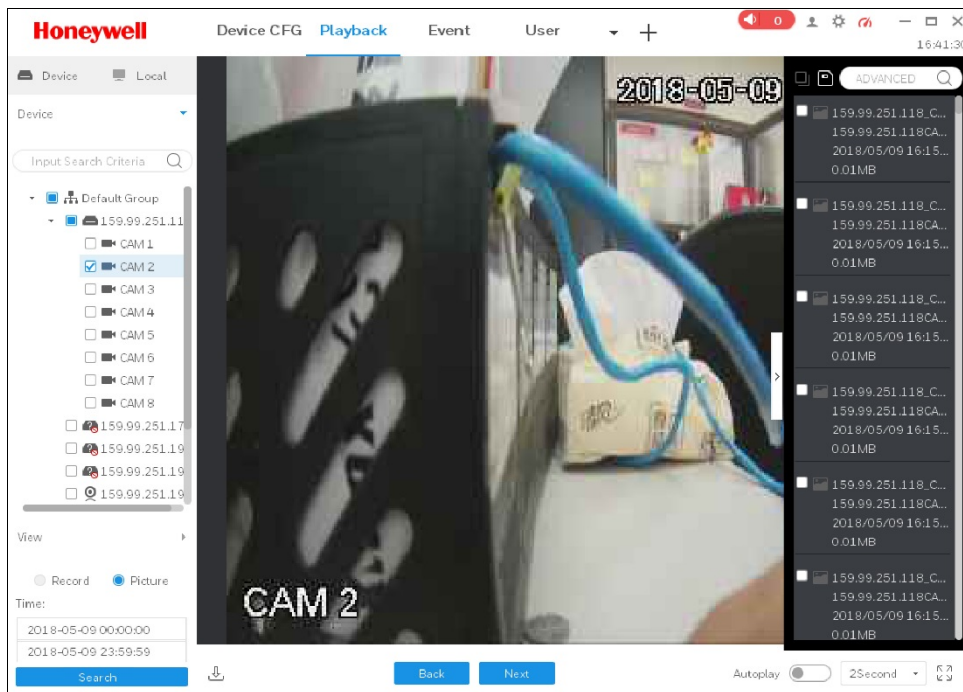


4. Click **Back** or **Next** to view pictures manually or click  and set the time interval to view pictures automatically.

Playing Back the Local Recordings

1. Click the **Local** option in [Figure 5-1](#) and click the **Record** tab to expand the recording list.

 Figure 5-12

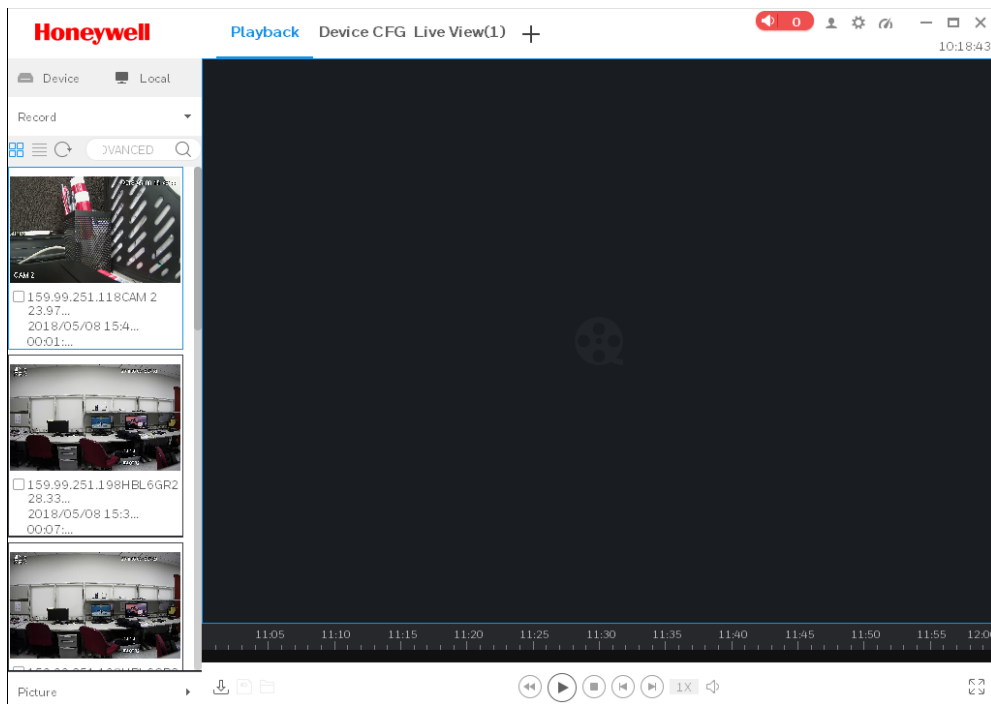

2. Click  or  to switch the displaying mode between list and thumbnail. Click  to refresh the list.
3. Check a recording and click  to play back.


Figure 5-13



Playing Back the Local Pictures

1. Click the **Local** option in [Figure 5-1](#) and click the **Picture** tab to expand the picture list.

 Figure 5-14

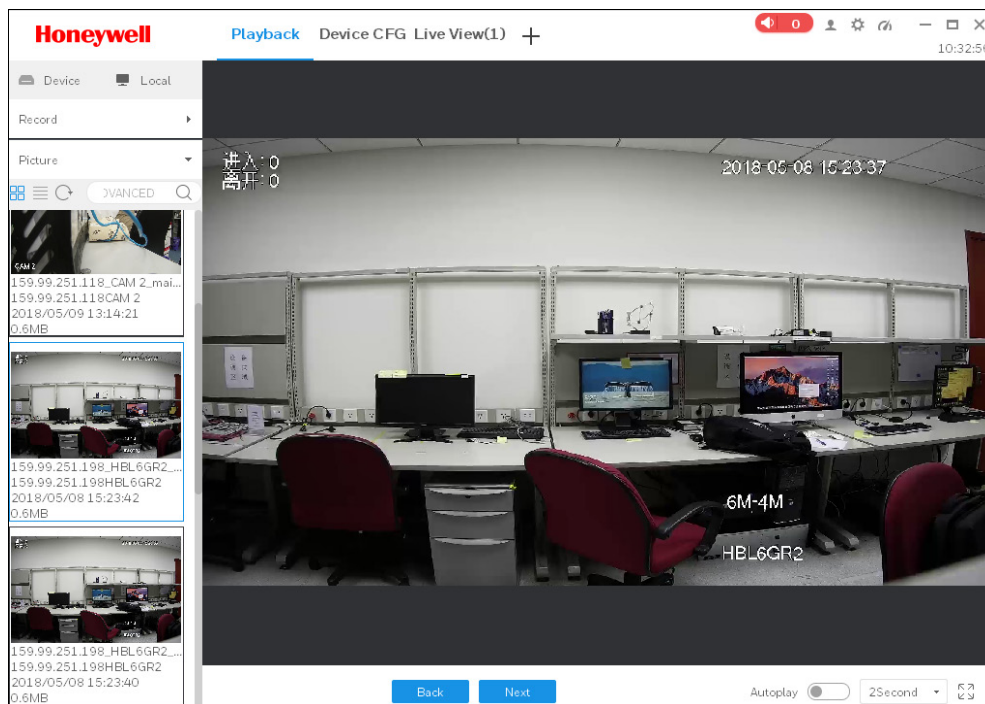


2. Click **Back** or **Next** to view pictures manually or click **Autoplay** ☐ and set the time interval to view pictures automatically.

Exporting the Device Recordings

Refer to step 1-6 of [Playing Back the Device Recordings](#) on page 44 to play back the recordings.


5. Click  and the system randomly selects a recording clip (1-minute by default). Drag the red dot (circled in red) to adjust the start time and the end time of the recording.

 Figure 5-15

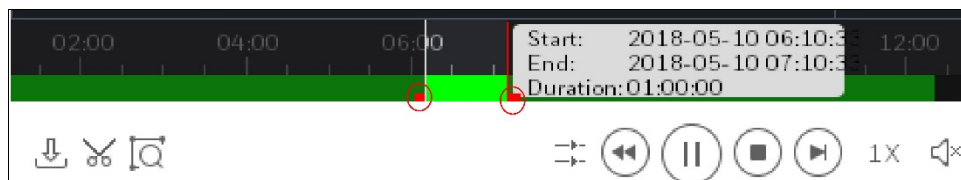


6. Click  again to export the recording clip.

 Figure 5-16

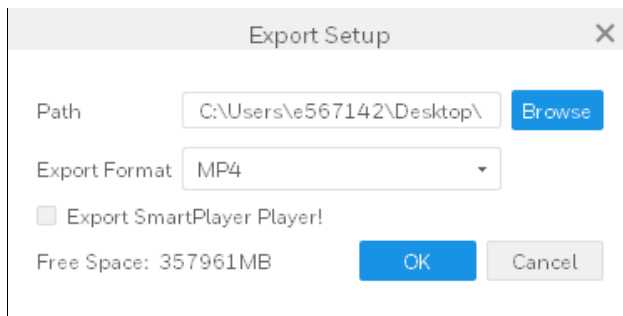

7. Set the storage path and set the export format as **MP4** and click **OK**. Check the below Export SmartPlayer Player to download and install Smart Player if needed.
8. Click  in [Figure 5-15](#) to check the exporting progress and the exported items.

 
Figure 5-17

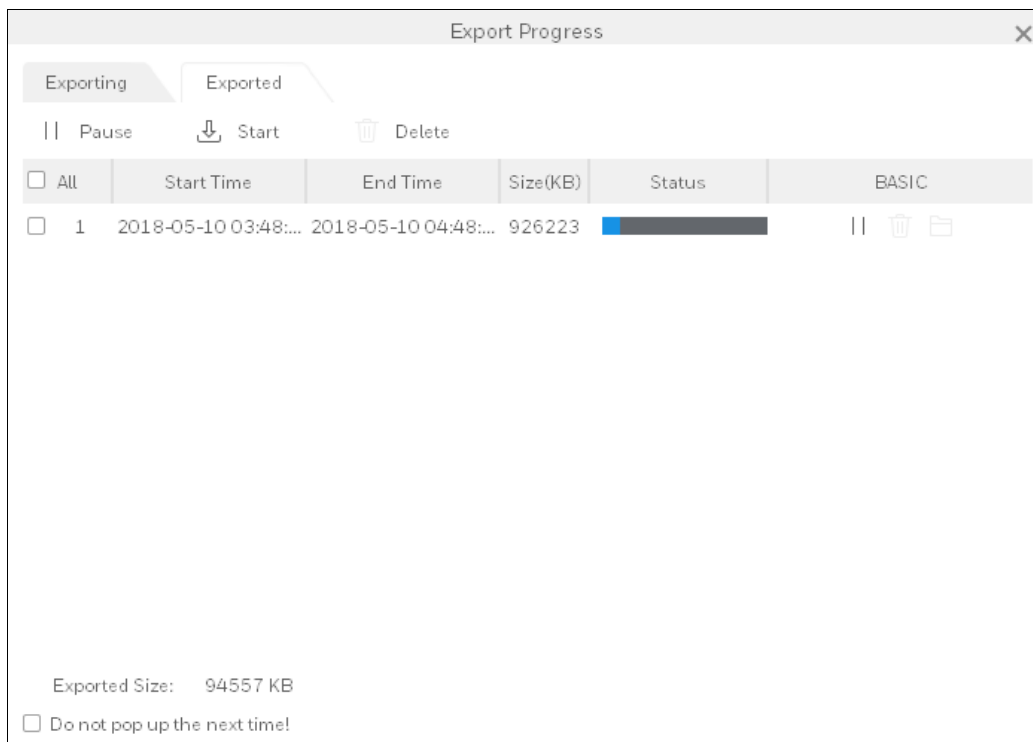

Exporting the Device Pictures

Refer to step 1-6 of [Playing Back the Device Pictures](#) to play back the pictures.

7. Select the target picture(s) and click . The following window is displayed:

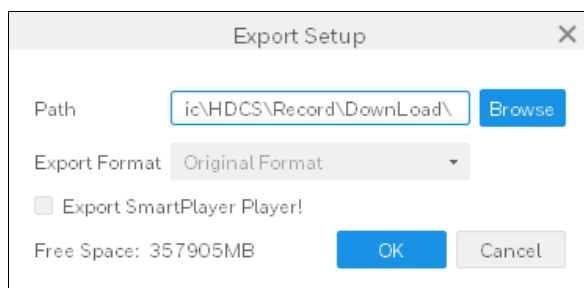 
Figure 5-18

8. Set the storage path and click **OK**. Check the below Export SmartPlayer Player box to download and install Smart Player if needed.
9. Click  to check the exporting progress and the exported items.

Exporting the Local Recordings

Refer to step 1-3 of [Playing Back the Local Recordings](#) on page 50 to play back the recordings.

4. Select the target recordings and click , the following window is displayed:

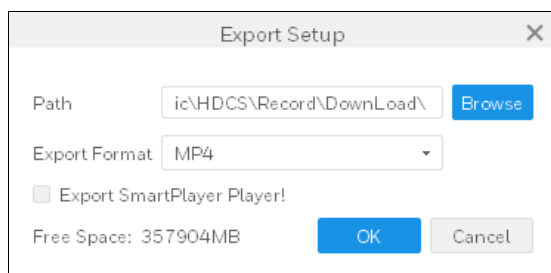 Figure 5-19

5. Set the storage path and set the exported format as **MP4** and click **OK**. Check the below Export SmartPlayer Player box to download and install Smart Player if needed.
6. Click  to check the exporting progress and the exported items.

6 Log

This chapter contains the following sections:

- [Client Log](#) on page 56.
- [Device Log](#) on page 56.

You can search and back up the client log or the device log.



Click **Log** on the **BASIC** pane in [Figure 3-2](#) to go to the following interface:

Figure 6-1

Honeywell New **Log** Event Playback 15 16:29:18

Time: 2018/05/17 00:00:00
2018/05/17 23:59:59

Log Type: System Log
All

Key words:

ADVANCED Backup

No.	Time	User Name	Event Type	Device Name	Chann
-----	------	-----------	------------	-------------	-------

Every page shows 100

Navigation: < 1/1 > Jump to Page Jump

Client Log

1. Click  in *Figure 6-1*.
2. Set the start time, end time, log type and device.
3. Click **Search**.
4. Click **Backup** to back up all the log to local directory.

Device Log

1. Click  in *Figure 6-1*.
2. Set the start time, end time, log type and key words.
3. Click **Search**.
4. Click **Backup** to back up all the log to local directory.

7 Advanced

This chapter contains the following sections:

- [Video Wall](#) on page 57.
- [E-Map](#) on page 64.

Video Wall

Video can be output on video wall if video wall configuration is set.


Note

To operate the video wall function, decoder(s) must be connected to the system in advanced..



Click **Video Wall** on the **ADVANCED** pane in [Figure 3-2](#) to go to the following interface.

 Figure 7-1

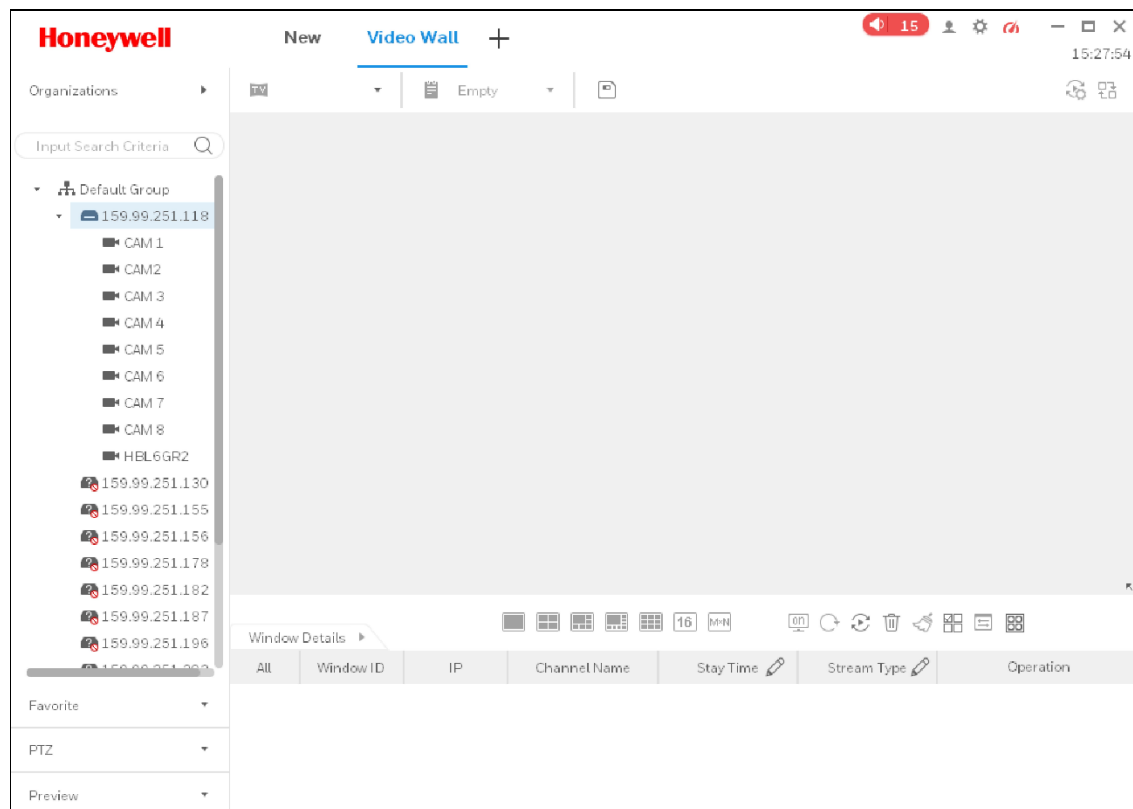


Configuring the Favorite

Adding a Favorite


1. Click the **Favorite** tab in [Figure 7-1](#) and click **New Favorite**. The following window is displayed:

 Figure 7-2

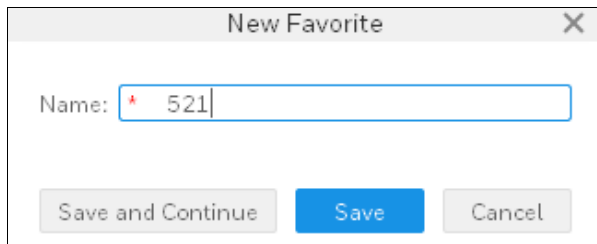


2. Enter the favorite name and click **Save**. The newly added favorite is displayed in the favorite list. Click **Save and Continue** to add another favorite.
3. Right click the favorite name and select **Manage Favorite**. The following interface is displayed:

 Figure 7-3

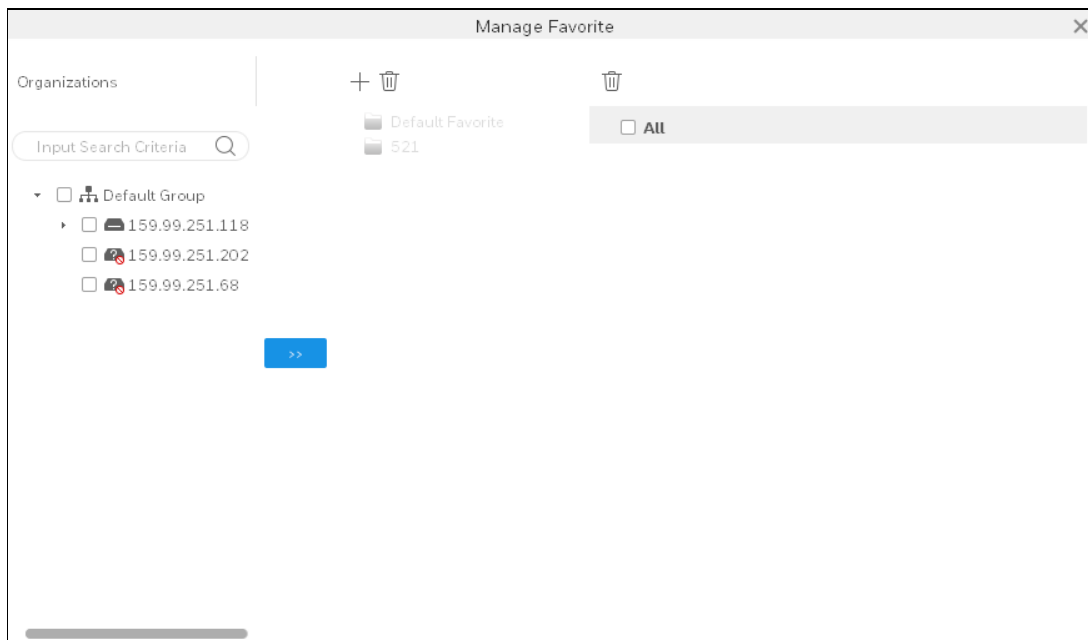

4. Select device(s) from the organization list on the left pane and select a favorite folder on the middle pane. Click  to add the device(s) to the favorite folder.

 Figure 7-4

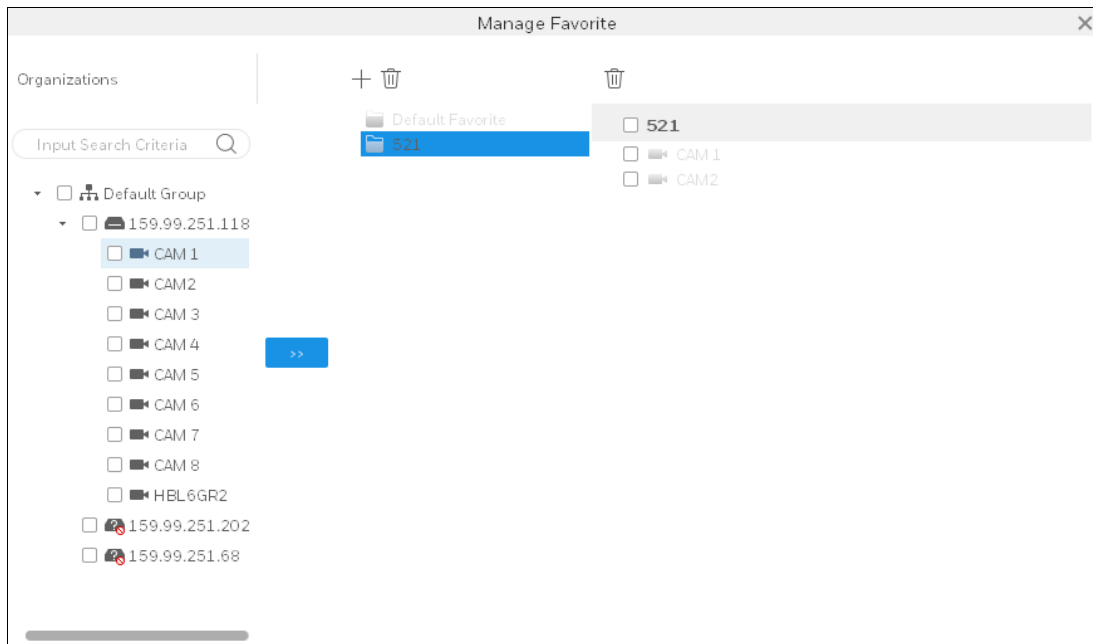

5. Click  to exit the **Manage Favorite**.

Deleting a Favorite

Perform one of the following two methods to delete a favorite.

- Select a favorite folder on the middle pane in [Figure 7-4](#) and click  above.
- Right click a favorite name in [Figure 7-1](#) and select **Delete Favorite**.

Note The default favorite folder cannot be deleted.

Deleting a Device in a Favorite

Perform one of the following two methods to delete a device in a favorite.

- Select a favorite folder on the middle pane in [Figure 7-4](#) and select device(s) under the favorite on the right pane, and then click  above.
- Right click a device name in a favorite in [Figure 7-1](#) and select **Delete View**.

Modifying a Favorite Name


Right click a favorite name in [Figure 7-1](#) and select **Change Favorite Name**.

Setting the Video Wall and Output

Before setting the video wall, make sure the decoder is correctly added.


1. Click  in [Figure 7-1](#) and then click . The following interface is displayed:

 Figure 7-5

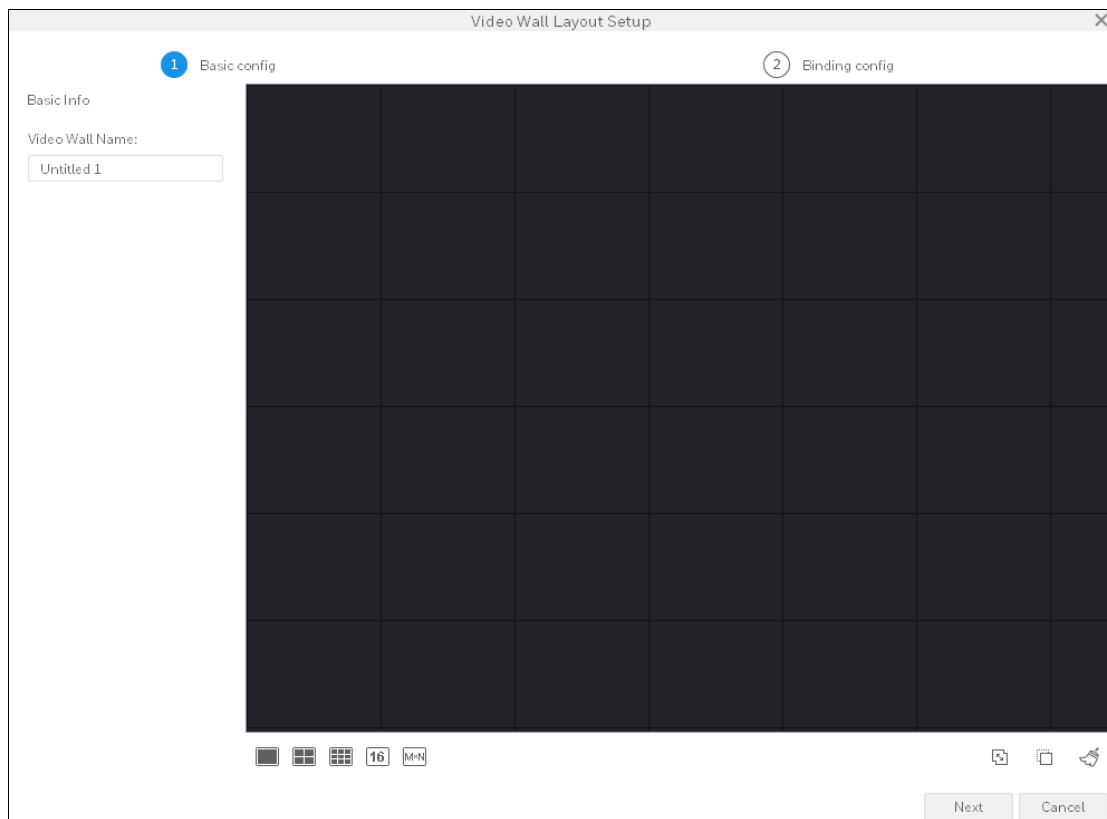


2. Enter the video wall name on the left pane.
3. Set the video wall layout:
 - a. Click      to select the number of screens and click anywhere of the window to place the screens to the desired area. You can set the layout by dragging each screen.

 Figure 7-6

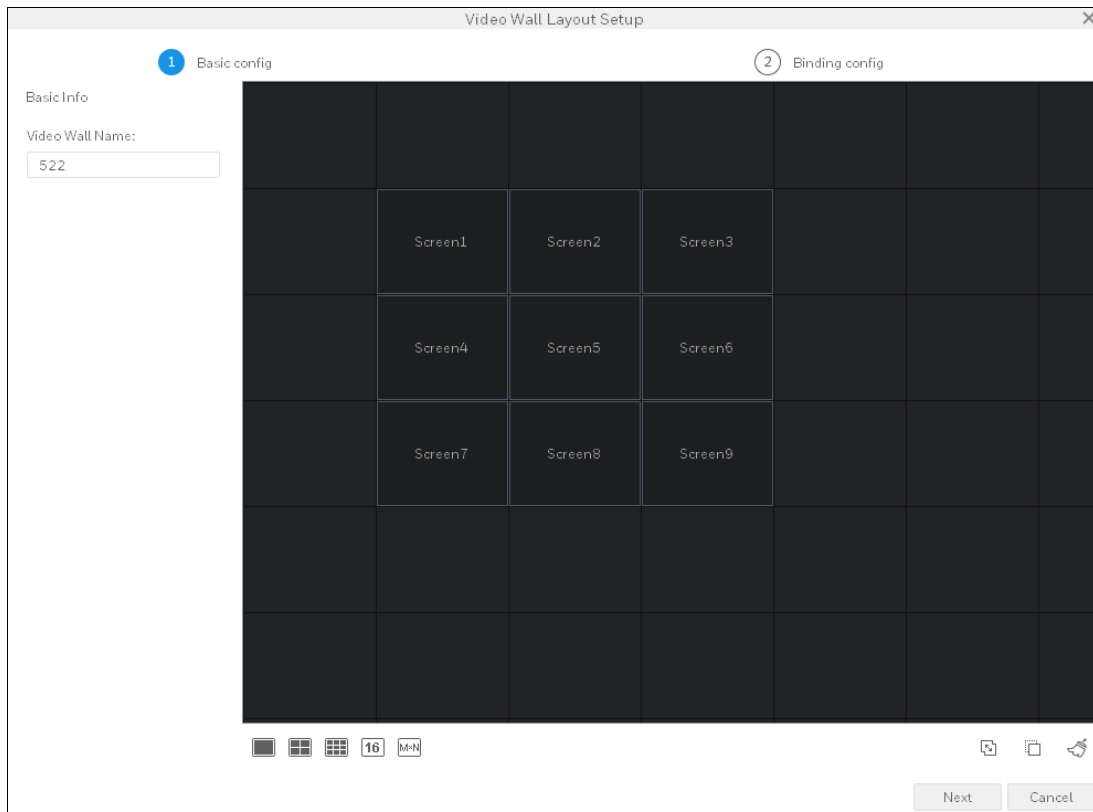

- Click  to splice screens which are next to each other.
 - Click  to cancel splicing the screens.
 - Click  to remove all the screens and layouts.
4. Click **Next** and the following interface is displayed:

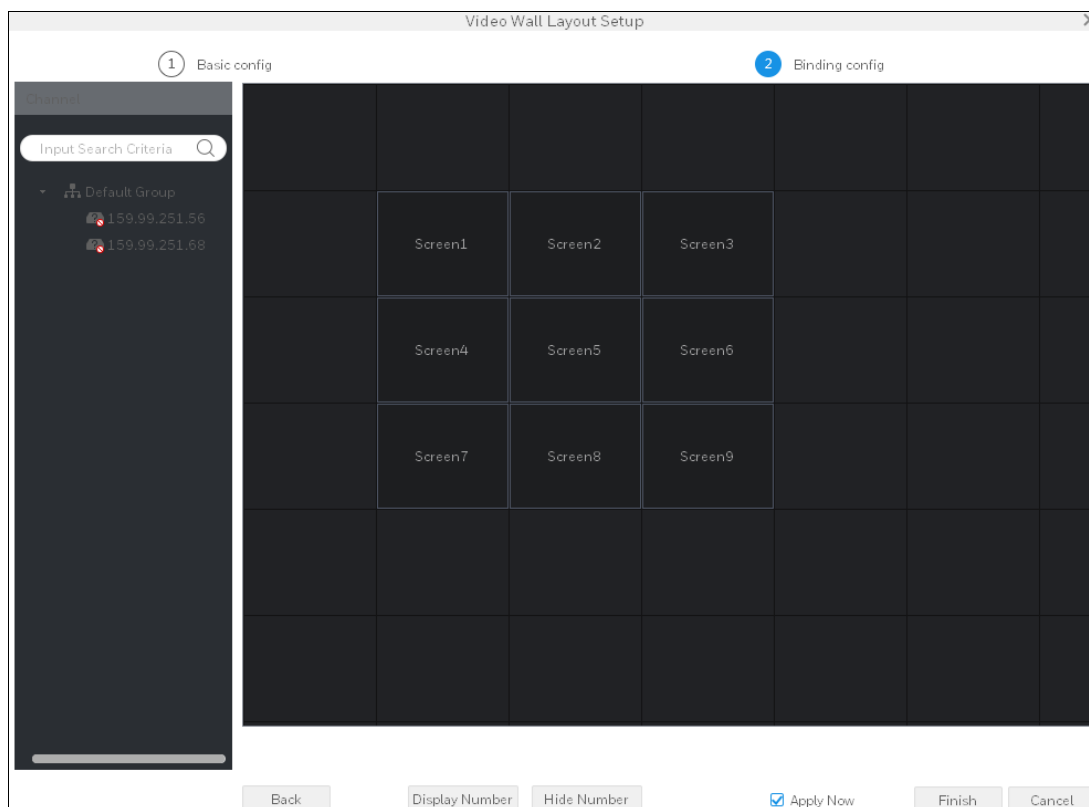 Figure 7-7


5. Drag an encoder on the left pane to a screen. Repeat this operation to bind the rest encoders and screens.
 - To show the screen No., click **Display Number**.
 - To hide the screen No., click **Hide Number**.
 - To unbind the screen to a decoder, right click the screen and select **Cancel Binding**.
6. Click **Apply Now** to apply the settings immediately and the interface turns to the video wall. Click **Finish** to complete the settings.

Setting a Tour

Perform the following steps to set up a tour.

1. Select a video wall layout in [Figure 7-1](#) and bind it to devices.
2. Click , and the following window is displayed:

 
Figure 7-8

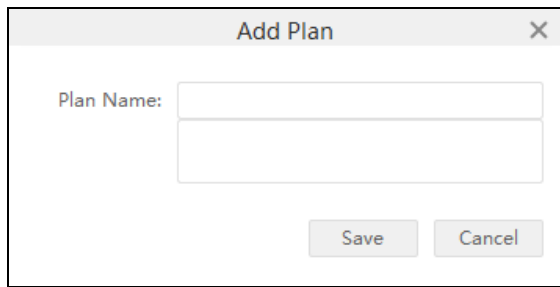

The 'Add Plan' dialog box features a title bar with the text 'Add Plan' and a close button (X). Inside, there is a label 'Plan Name:' followed by a text input field. Below the input field is a larger, empty rectangular area. At the bottom right, there are two buttons: 'Save' and 'Cancel'.

3. Enter the plan name and click **Save**.
4. Click  and the following window is displayed:

 Figure 7-9

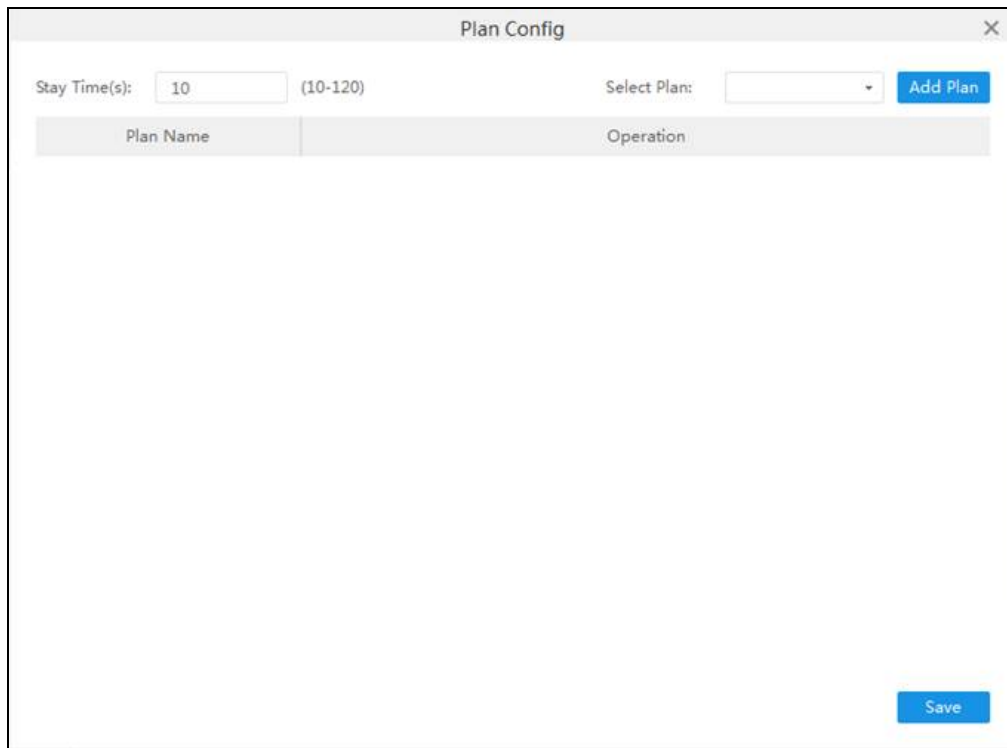

The 'Plan Config' window has a title bar with 'Plan Config' and a close button (X). It contains a 'Stay Time(s):' label with a text input field containing '10' and a range '(10-120)' to its right. To the right of this is a 'Select Plan:' label with a dropdown menu and a blue 'Add Plan' button. Below these elements is a table with two columns: 'Plan Name' and 'Operation'. The table is currently empty. At the bottom right corner, there is a blue 'Save' button.

5. Set the stay time and select the plan from the dropdown list.
6. Click **Add Plan** and **Save**.
7. Click  to enable the scheme tour or click  to disable the scheme tour.


E-Map


On the map, you can check the added device's location and live view. When an alarm occurs to the added device, there are dynamic indications on the map.



Click **E-MAP** on the **ADVANCED** pane in [Figure 3-2](#) to go to the following interface:

  Figure 7-10

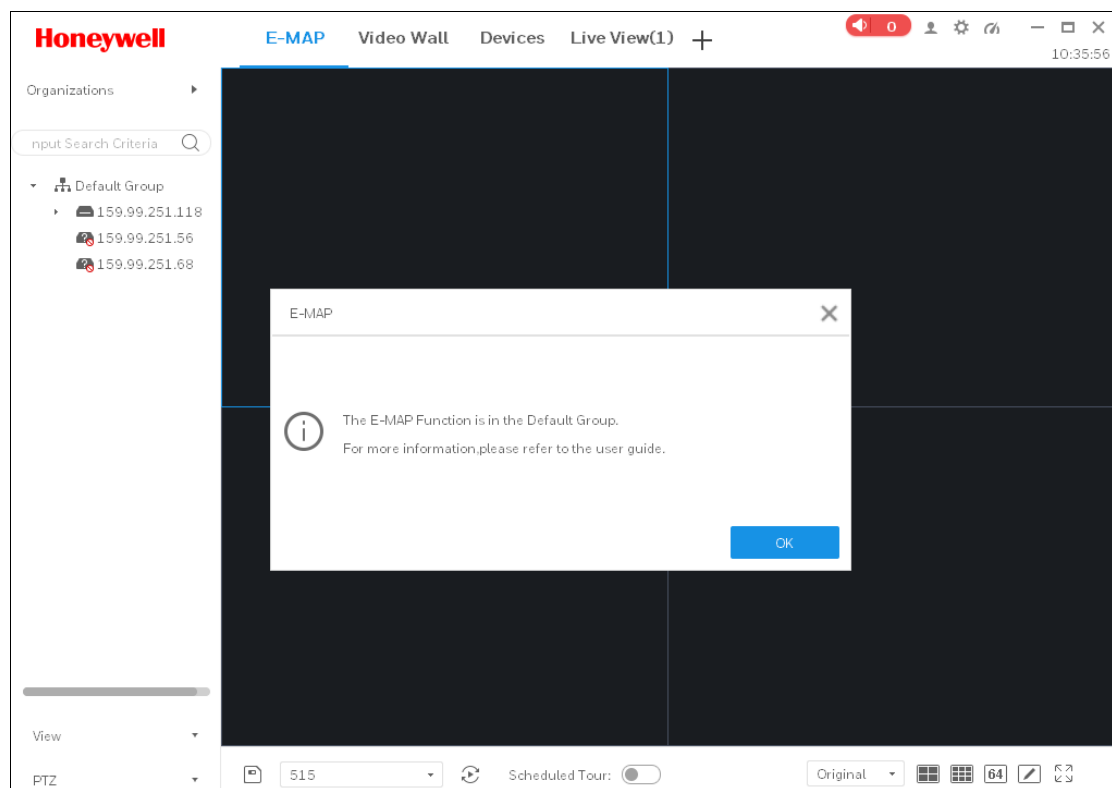


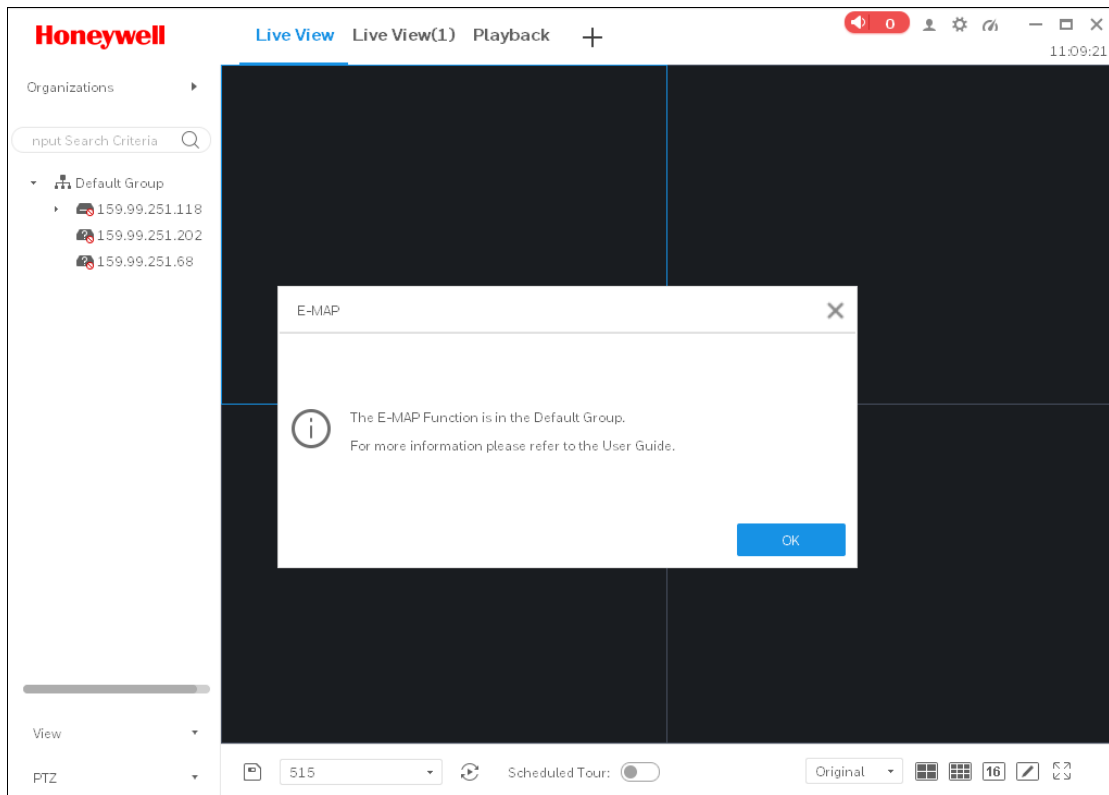

Adding a New E-map


1. Right click the Default Group on the left pane and select **New Map**. The following window is displayed:

 Figure 7-11

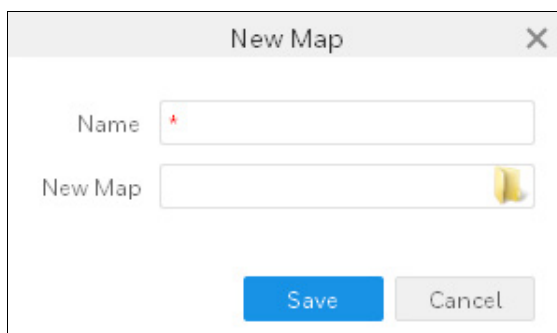


2. Enter the name and select a picture.
3. Click **Save** and the following interface is displayed:

 Figure 7-12

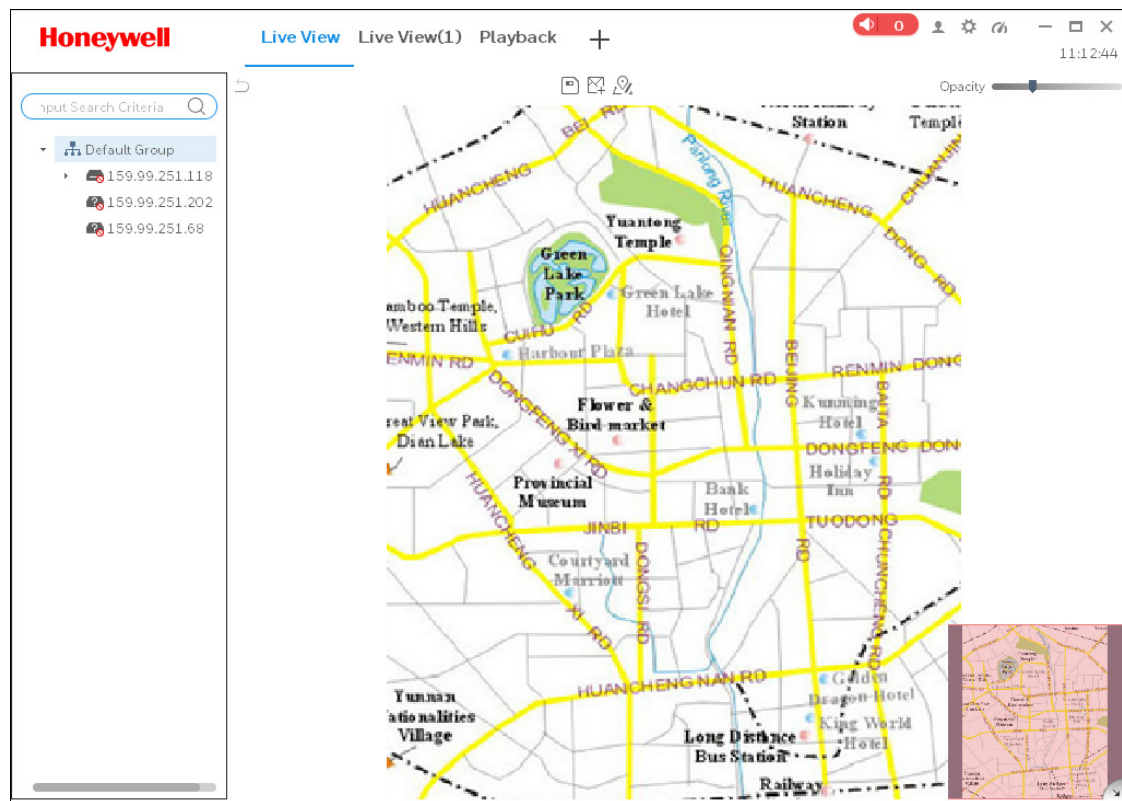


- Click **Opacity**  to adjust the transparency.
 - Click  at the lower right corner to collapse the top view and click  to expand the top view.
4. Drag device(s) on the left pane in [Figure 7-12](#) to the map:

 Figure 7-13

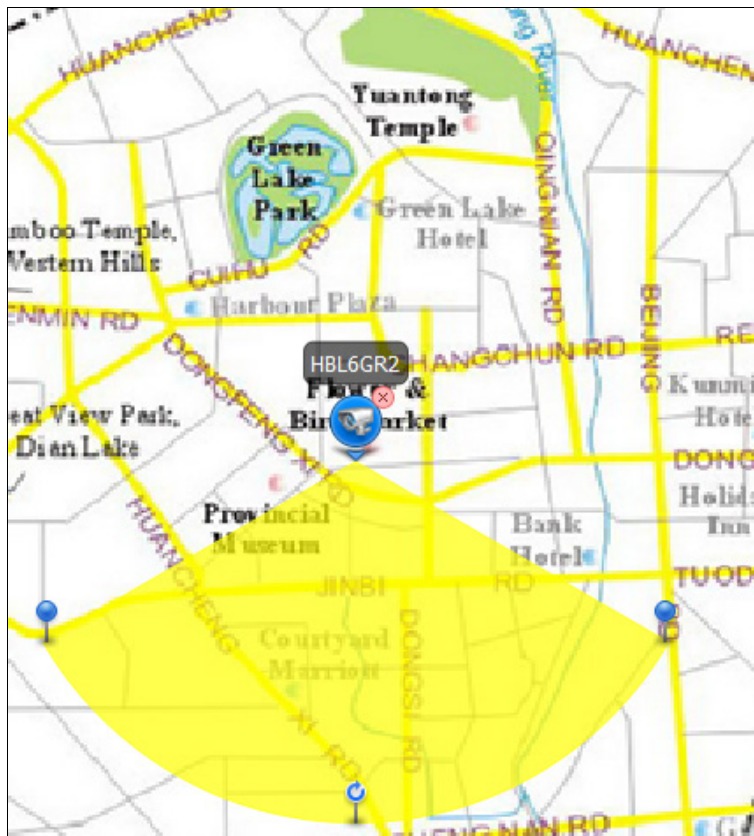

5. Drag  to adjust the monitoring range.
6. Click  to save this e-map. The newly added e-map is displayed in the Default Group on the left pane.

 Figure 7-14

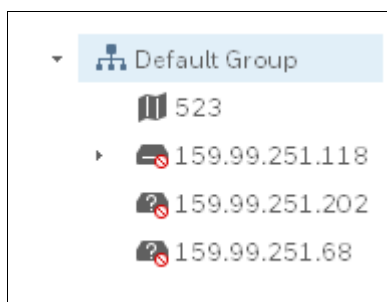


Modifying a E-Map

Changing the Map

Click  in [Figure 7-12](#) to change the map with a new map.

 Figure 7-15

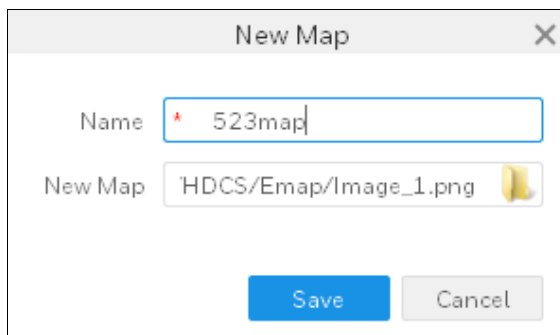


A dialog box titled "New Map" with a close button (X) in the top right corner. It contains two input fields: "Name" with a red asterisk and the text "523map" entered, and "New Map" with the file path "HDCS/Emap/Image_1.png" and a folder icon. At the bottom are "Save" and "Cancel" buttons.

Adding a New Hot Zone

1. Click  in [Figure 7-12](#) to add a new hot zone.

 Figure 7-16

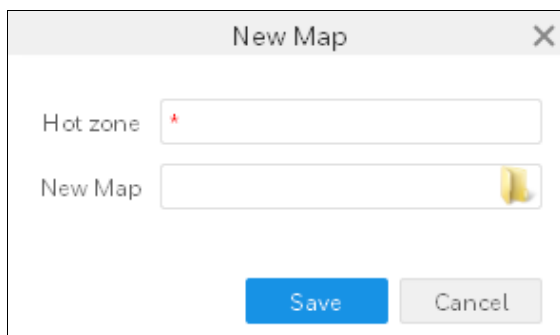

A dialog box titled "New Map" with a close button (X) in the top right corner. It contains two input fields: "Hot zone" with a red asterisk and an empty text box, and "New Map" with an empty text box and a folder icon. At the bottom are "Save" and "Cancel" buttons.


2. Enter the hot zone name and select a hot zone picture. Click **Save** and the following interface is displayed:

Figure 7-17



Double click the hot zone icon to show its map.

 
Figure 7-18

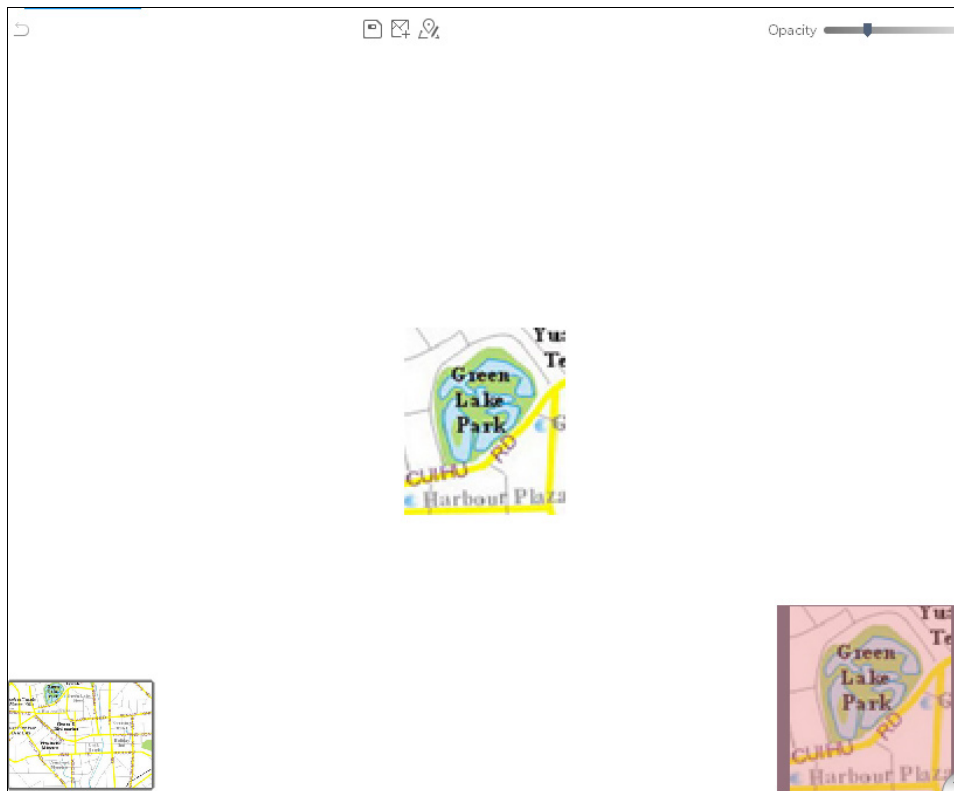

Click the e-map thumbnail at the lower left corner to switch back to the E-map.

3. The newly hot zone is displayed under the e-map folder on the left pane.

 Figure 7-19

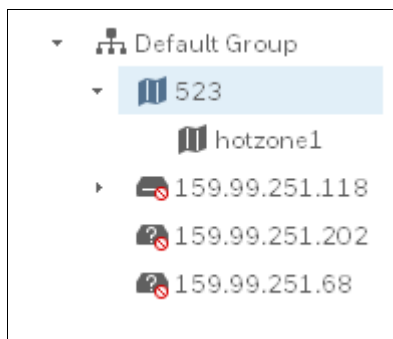


Deleting a E-map

Right click an e-map name in [Figure 7-20](#) and select **Delete**.

Liveview E-map


1. Drag an e-map from Default Group to a window on Live View interface.

 Figure 7-20

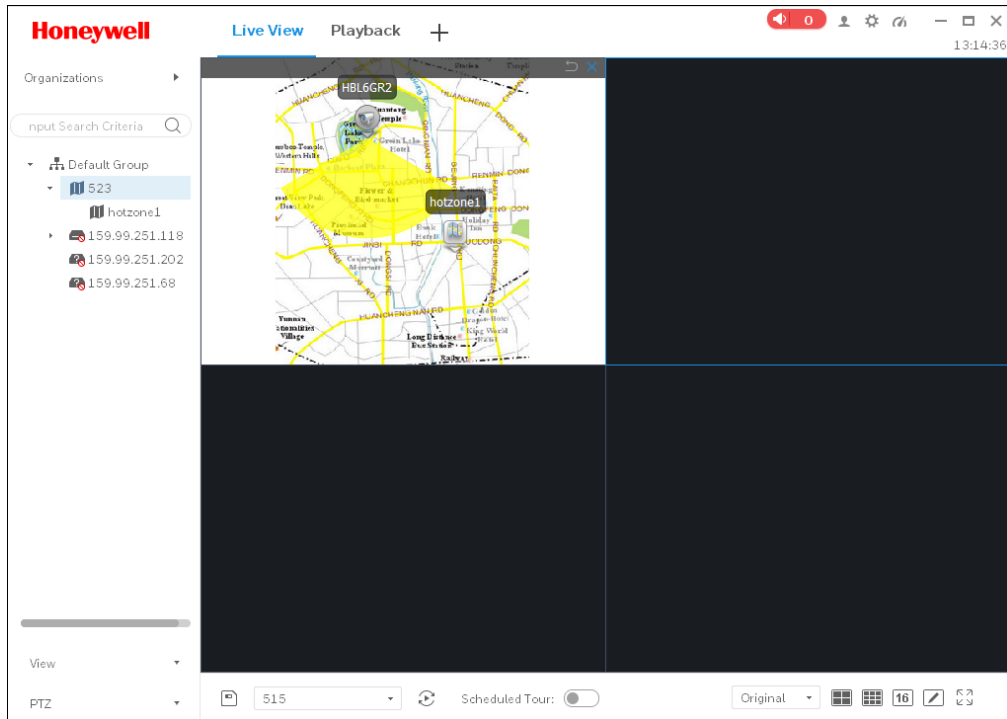

2. Click the camera icon on the map to view the video in a pop-up window.

 Figure 7-21

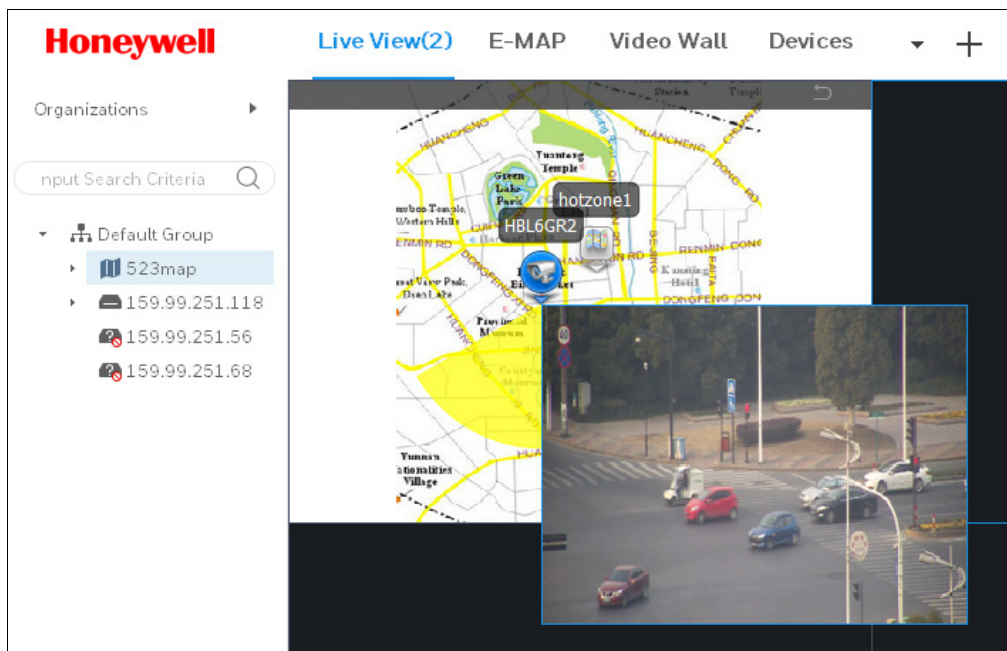

**Honeywell Security Products Americas
(Head Office)**

2700 Blankenbaker Pkwy,
Suite 150 Louisville, KY
40299, USA
www.honeywell.com/security
☎ +1 800 323 4576

Honeywell Security Europe/South

Africa Aston Fields Road, Whitehouse
Industrial Estate Runcorn, WA7 3DL,
United Kingdom
www.honeywell.com/security/uk
☎ +44 (0) 1928 754 028

**Honeywell Security Products Americas
Caribbean/Latin America**

9315 NW 112th Ave.
Miami, FL 33178, USA
www.honeywell.com/security/clar
☎ +1 305 805 8188

Honeywell Security Asia Pacific

Building #1, 555 Huanke Road,
Zhang Jiang Hi-Tech Park, Pudong
New Area, Shanghai, 201203, China
www.asia.security.honeywell.com
☎ +86 400 840 2233

Honeywell Security Middle East/N.

Africa Emaar Business Park, Sheikh
Zayed Road Building No. 2, Office No.
301
Post Office Box
232362 Dubai, United
Arab Emirates
www.honeywell.com/security/me

☎ +971 (0) 4 450 5800

Honeywell Security Northern Europe

Ampèrestraat 41
1446 TR Purmerend, The
Netherlands
www.honeywell.com/security/nl
☎ +31 (0) 299 410 200

Honeywell Security Deutschland

Johannes-Mauthe-Straße 14
72458 Albstadt, Germany
www.honeywell.com/security/de
☎ +49 (0) 7431 801-0

Honeywell Security France

Immeuble Lavoisier
Parc de Haute
Technologie 3-7 rue
Georges Besse 92160
Antony, France
www.honeywell.com/security/fr
☎ +33 (0) 1 40 96 20 50

Honeywell Security Italia

SpA Via della Resistenza
53/59 20090 Buccinasco
Milan, Italy
www.honeywell.com/security/it
☎ +39 (0) 2 4888 051

Honeywell Security España

Avenida de Italia, nº 7, 2ª planta
C.T. Coslada
28821 Coslada, Madrid, Spain
www.honeywell.com/security/es
☎ +34 902 667 800

Honeywell

www.honeywell.com/security
+1 800 323 4576 (North America only)
<https://www.honeywellsystems.com/ss/techsupp/index.html>

Document 800-24464 Rev A –07/2018

© 2018 Honeywell International Inc. All rights reserved. No part of this publication may be reproduced by any means without written permission from Honeywell. The information in this publication is believed to be accurate in all respects. However, Honeywell cannot assume responsibility for any consequences resulting from the use thereof. The information contained herein is subject to change without notice. Revisions or new editions to this publication may be issued to incorporate such changes.