 


ATTITUDE

REFRIGERATOR
Instruction Manual

Model: AT16B

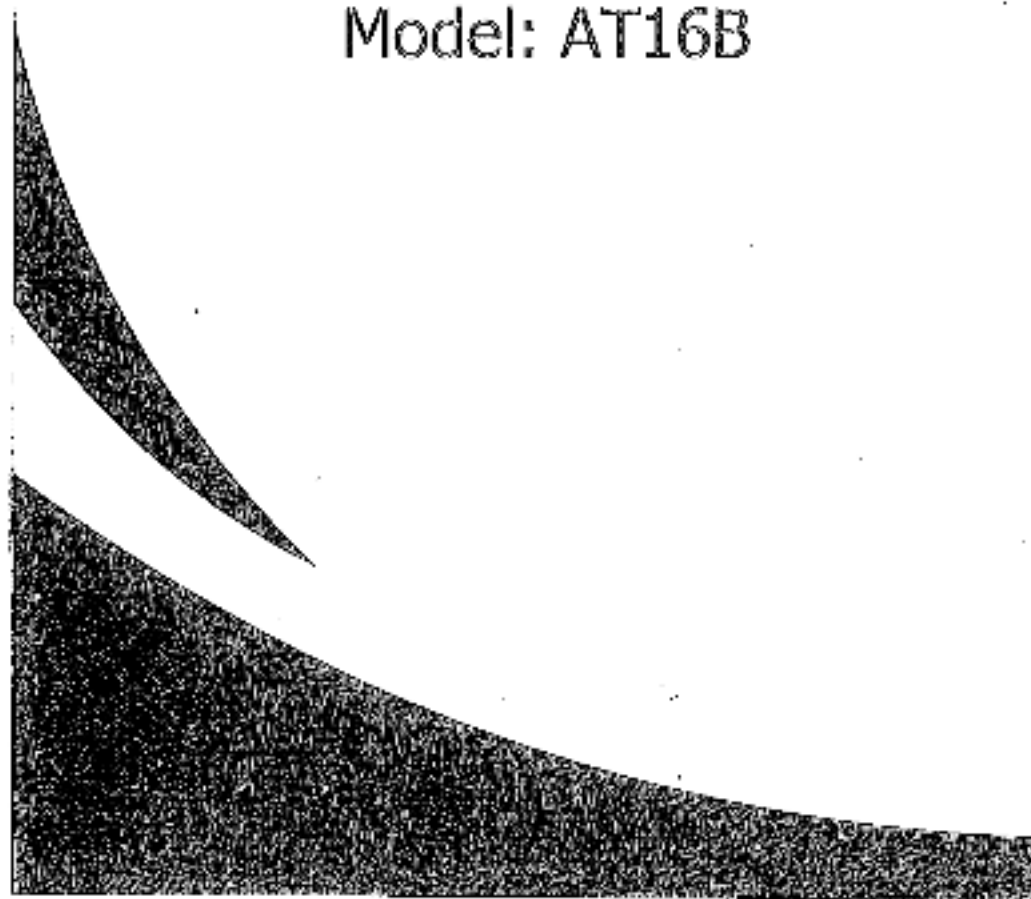

CONTENTS

1 Safety warnings	
1.1 Warning	1
1.2 Meaning of safety warning symbols	2
1.3 Electricity related warnings	2
1.4 Related warnings for use	3
1.5 Warnings related to placing items	4
1.6 Warnings related to disposal	4
2 Proper use of refrigerator	
2.1 Names of components	5
2.2 Temperature Control	5
2.3 Move	6
2.4 Placement	6
2.5 Start to use	6
2.6 Energy saving tips	6
3 Maintenance of refrigerator	
3.1 Disconnect the refrigerator	7
3.2 Stop using the refrigerator	7
3.2 Clean the refrigerator	7
4 Trouble shooting	8

DEAR CUSTOMER:

Thank you for buying this refrigerator. To ensure that you get the best results from your new refrigerator, please take time to read through the simple instructions in this booklet. Please ensure that the packing material is disposed of in accordance with the current environmental requirements.

When disposing of any refrigerator equipment please contact your local waste disposal department for advice on safe disposal. This appliance must be only used for its intended purposes.

1 Safety warnings

1.1 Warning



Warning: risk of fire / flammable materials

RECOMMENDATIONS:

This appliance is intended to be used in household and similar applications such as staff canteen areas in shops, offices and other working environments; farm houses and by clients in hotels, motels and other residential type environments; bed and breakfast type environments; catering and similar non-retail applications.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance. The appliance has to be unplugged after use and before carrying out user maintenance on the appliance.

WARNING: Risk of fire / flammable materials.

WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

WARNING: Do not damage the refrigerant circuit.

WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

WARNING: Please attention the refrigerator according to local regulations for its use flammable blowing gas and refrigerant.

Do not use extension cords or ungrounded (two prong) adapters.

DANGER: Risk of child entrapment. Before you throw away your old refrigerator:

- Take off the door

- Leave the shelves in place so that children may not easily climb inside

The refrigerator must be disconnected from the source of electrical supply before attempting the installation of accessory.

Refrigerant and cyclopentane foaming material used for the refrigerator are flammable.

Therefore, when the refrigerator is serviced, it shall be kept away from any fire source and be recovered by a special recovering company with corresponding qualification rather than be disposed by combustion, so as to prevent damage to the environment or any other harm.

1.2 Meaning of safety warning symbols



Prohibition symbols

The symbols indicate prohibited matters, and these behaviors are forbidden. Non-compliance with the instructions may result in product damages or endanger the personal safety of users.



Warning symbols

The symbols indicate matters that must be followed, and these behaviors must be strictly executed in line with the operation requirements. Non-compliance with the instructions may result in product damages or endanger the personal safety of users.

 


Note symbols

The symbols indicate matters to pay attention to, and these behaviors shall be specially noted. Due precautions are needed or minor or moderate injuries or damages of the product will be caused.

This manual contains lots of important safety information which shall be absorbed by the users.


1.3 Electricity related warnings

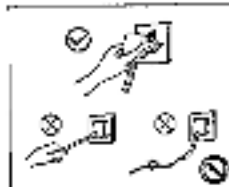

• Do not pull the power cord when pulling the power plug of the two-terminal refrigerator. Please firmly grasp the plug and pull out it from the socket directly.

• Do not damage the power cord under any condition so as to ensure safety use, do not use when the power cord is damaged or the plug is worn.

 • Worn or damaged power cord shall be replaced in main factory-authorized maintenance stations.

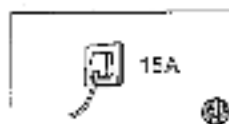


• Please use a dedicated three-hole power socket which is 15A or more and the power socket shall not be shared with other electrical appliances.

• The power plug should be firmly contacted with the socket or else fire might be caused. Please ensure that the grounding electrode of the power socket is equipped with a reliable grounding line.




 • Please turn off the valve of the leaking gas and then open the doors and windows. In case of leakage of gas and other flammable gases. Do not use plug the combined refrigerator and other electrical appliances causing that sparks may cause a fire.

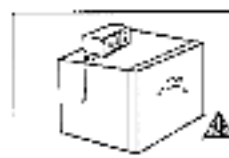


• To ensure safety, it is not recommended that to place regulators, rice cookers, microwave ovens and other appliances at the top of the refrigerator, those recommended by the manufacturer are not included. Do not use electrical appliances in the food panes.

 1.4 Related warnings for use

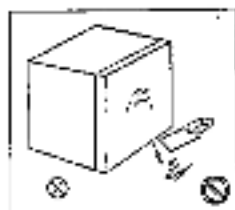

 - Do not arbitrarily disassemble or reconstruct the door, nor damage the refrigerant circuit; maintenance of the appliance must be conducted by a specialist.
- Damaged power cord must be replaced by the manufacturer, its maintenance department or related professionals in order to avoid danger.

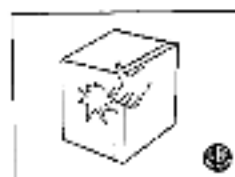

- The surrounding of the appliances around or the embedded structure shall not be obstructed while good ventilation shall be maintained.
- The gaps between refrigerator doors and commercial refrigerator body are small, be noted not to put your wet hands hand in these areas to prevent squeezing the finger. Please be gentle when switching off the refrigerator door to avoid falling articles.



- Do not allow children to enter or climb the refrigerator to prevent that children are sealed in the refrigerator or children are injured by the falling refrigerator.

 


- Do not place heavy objects on the top of the refrigerator considering that objectives may fall when switching the door, and accidental injuries might be caused.
- Please pull off the plug in case of power failure or cleaning. Do not connect the refrigerator to power supply within five minutes to prevent damages to the compressor due to successive starts.

1.5 Warnings related to placing items



- Do not put formula, caustic, volatile and highly corrosive items in the refrigerator to prevent damages to the product or the contents.
- Do not place formula items near the refrigerator to avoid fires.

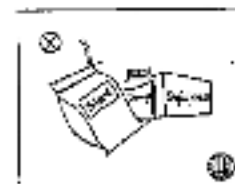

- This product is refrigerator and shall be only suitable for the storage of foods and drinks. According to national standards, refrigerators shall not be used for other purposes, such as storage of blood, drugs or living cell products.

 
1.6 Warnings related to disposal



The refrigerator contains small amount of environmental friendly refrigerant and contains air in insulating layer. The refrigerant and air shall be processed specially. Do not break refrigerant loop before specialized processing.


2 Proper use of refrigerator

2.1 Names of components

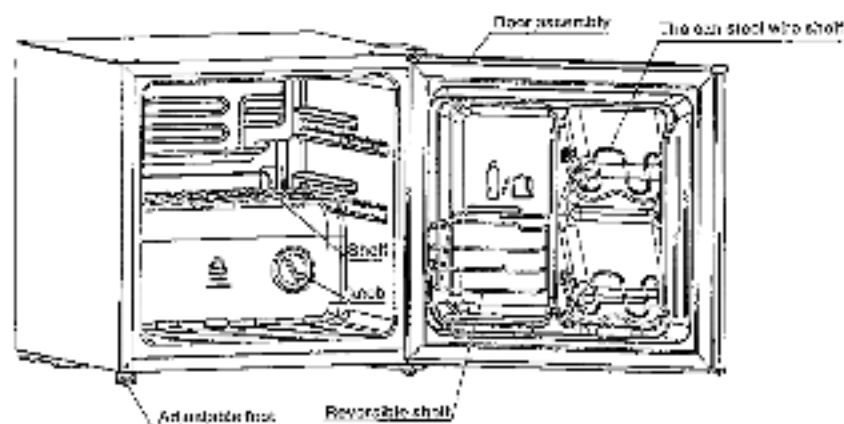

The refrigerator you buy some of the features and specifications may be entirely different with the figure, please refer to the object.

 2.2 Temperature Control

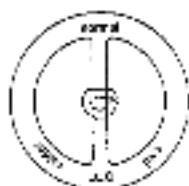

After the refrigerator has been turned on, turn the temperature control knob to adjust the level of temperature controller. Setting the control to cold is the warmest setting. Setting the control to colder is the coldest setting. Moving the control to OFF stops cooling.

2.3 Move

 


- For short distance and adjust position, the refrigerator can be moved by two wheels in the rear. It is prohibited from long distance and uneven ground pushment.

2.4 Placement




- Before using the refrigerator, remove all packaging materials, including bottom cushions and foam pad and tapes, inside the refrigerator, tear off the protective film on the door and the refrigerator body.

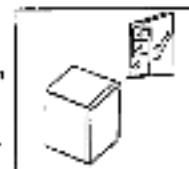


- The refrigerator is placed in a well-ventilated indoor place, the ground should be flat, and sturdy (prohibit left or right to adjust the wheel for leveling if unstable).



 - Keep away from heat and avoid direct sunlight. Do not place the commercial refrigerator in metal or watery places to prevent rust or reduction of insulating effect.

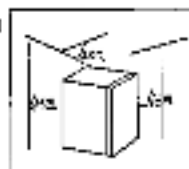

 
- The rear air flow a do wall of refrigerator must be exhausted unobstructed, or compressor's power will increase and further increase power consumption. Thus the distance between refrigerator and walls or neighboring furniture shall not less than 4cm.

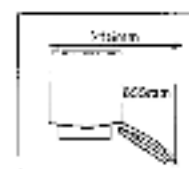

- Please leave enough space to ensure flexible opening.

- Dimensional drawing are for reference only.

 2.5 Start

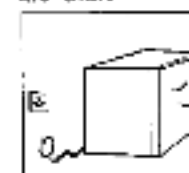

- The refrigerator shall stay for half an hour before connecting power when it is firstly started.
- The refrigerator shall run 2 to 3 hours before loading drinks; the refrigerator shall run for more than 4 hours in summer in advance considering that the ambient temperature is high.

2.6 Energy Conservation

- The refrigerator shall be placed in room dry and ventilated. The refrigerator cannot be put under direct sunlight or next to heat source (Sun ex radiator, stove, etc.), and a suitable insulation board shall be applied if necessary.
- Try to shorten opening time of refrigerator's door.
- Put foods, beverages into refrigerator after it has cooled down.

3 Proper use of refrigerator

3.1 Disconnect the refrigerator

Unplug power plug to disconnect the refrigerator.

3.2 Stop using the refrigerator

If the refrigerator left unused for a long time, please:

1. Unplug the refrigerator.
2. Clean the refrigerator.
3. Keep the refrigerator door open.

3.3 Clean the refrigerator

Doors behind the refrigerator and on the ground shall be timely cleaned to improve the cooling effect and energy saving. The interior of the refrigerator should be cleaned regularly as well as door. Cleaning procedure is below:

1. Unplug power plug and disconnect outlet.
2. Open the door and clean with only clear water and give thorough wipe.
3. Reconnect and power refrigerator when cleaning is completed.



- Do not use hard brushes, clean steel balls, wire brushes, abrasives such as toothpaste, organic solvents (such as alcohol, acetone, benzene oil, etc.), boiling water, acid or alkaline to clean the refrigerator, considering that this may damage the refrigerator surface and interior.
 - Do not rinse with water so as not to affect the structural insulation properties.
 - Do not use detergent and solvent with sand mixed.
- The drain hole shall be cleaned regularly to ensure water can be drained. Clean the drain hole with a thin stick or something similar.

4 Trouble shooting

Normal noises

Buzzing-The refrigerating units are working.
Grum, rumble or gurgle-Refrigerating fluid is flowing in pipeline.

Noises that can be removed easily

Uneven location of refrigerator:
Use a hammer to coordinate the refrigerator into a smooth level. Can use the rear support legs or put cushion under it.

The refrigerator leans against other furniture:
Move refrigerator away from furniture or equipment it leans against.

Continuous contact with each other:
Separate bottles or containers slightly.

Small trouble shooting by yourself.

Before calling after-sale service: Please examine to find out whether you can perform trouble shooting by yourself following under prompts.

Fault	Possible Causes	Remedies
Temperature has big deviation or with excessive noise		Turn off refrigerator door for 3 minutes on average once a day. If temperature is too high, avoid to stop power to prevent refrigerator temperature from too low or high. If temperature is too low, check the fan whether it is blocked.
refrigerator not cool down inside	Produce too much heat inside refrigerator case. Too much food input.	Reduce open frequency of door inside refrigerator. Wait for 4-6 hours.
refrigerator not refrigerate	refrigerator power off or blocked; power disconnected; anything plug loose	Produce action button, check whether power is on, check circuit.