

**MAKOTO**

分體式智能陶瓷保健壺  
Automatic Electric HealthPot

使用說明書  
Operating Instruction



MODEL: CKD-28E

產品規格及外觀設計如有更改, 恕不另行通知

Product specification and design are subject to change without prior notice.

## 安全預防措施

當使用本產品時，請遵循以下的基本的安全指引：


使用前請先閱讀本說明書

1. 本產品只供家居使用，不可戶外使用。
2. 從插座拔下插頭前，先把本產品轉為“關閉”模式。不要用拉扯電源線方式來拔下插頭，應抓住插頭並從插座除下，不可直接強行從插座拉下插頭。必須先用手抓緊插頭，之後才從插座拔下。
3. 請勿讓電線接觸熱表面。拆卸及清潔前，必須先讓產品完全冷卻。
4. 不使用時，請務必將電源插頭從電源插座拔出。
5. 不要用損壞的電源線或產品有任何損壞的情況下操作本產品。為避免觸電，請勿拆卸及重新組裝。如有任何損壞，請親攜到我司維修部處理。擅自修理/改裝或產品用於非產品原本設計之用途，保修恕不提供。
6. 不可讓兒童單獨使用本產品。
7. 使用中或剛使用後，觸摸熱金屬部件或任何高溫部份可能會被燒傷。
8. 切勿在產品工作時接觸到它的內部。
9. 本產品不能外接定時器或遙控器。
10. 當本產品第一次使用時，可能會產生輕微的異味或白煙，只要把本產品放在通風處，異味及白煙很快便會消散。

特別聲明：

1. 為避免電路負荷過重，請勿在同一電路上操作另一件電器。
2. 請使用產品專用電源線的電線。額定電流比此產品較小的電線可能引起過熱及短路。
3. 請保留此說明書以備將來作參考。
4. 不要讓兒童或未經培訓的人員在不經監督的情況下使用本產品。
5. 不要將本產品，電源線或插頭浸入任何液體中。否則可能導致觸電或火災。如要清潔此產品，請按照說明書上的清潔部份。
6. 當產品無需使用時，請斷開插頭與電源的連接。
7. 請勿用濕手觸摸本產品。
8. 請勿將產品暴露在戶外（雨或陽光底下）。
9. 當插頭插入插座並開啟後，請確保有合資格的人員監督下方可使用本產品。
10. 在使用本產品前，請移除所有包裝物料。
11. 拆開包裝後，檢查是否有損壞，有沒有丟失零件。
12. 所有包裝物料，如塑料袋，發泡膠，膠帶等... 都應放在兒童接觸不到的地方，因為此等物料不正當使用會引至兒童窒息，甚至死亡。
13. 只能使用本司提供在產品及包裝內的配件，否則可能對用戶構成危險，並有可能損壞產品。
14. 在使用產品前，請檢查產品銘牌上標明的電源，電壓是否符合。銘牌貼在產品背面。如有任何疑問，請查詢我司客戶服務部尋求協助。
15. 請勿讓電源線接觸鋒利的邊緣或熱表面。
16. 本產品不是玩具，不可用在人及動物身上，否則會被燙傷。
17. 本產品不可用在不穩定的地點或燃燒的物體上使用，否則容易引起火災或被燒傷。
18. 本產品只限於家居使用，不可作任何商業用途。
19. 第一次使用時，由於該絕緣材料可能有氣味或有煙，這是無害的，很快就會消退。

## 產品各部份描述

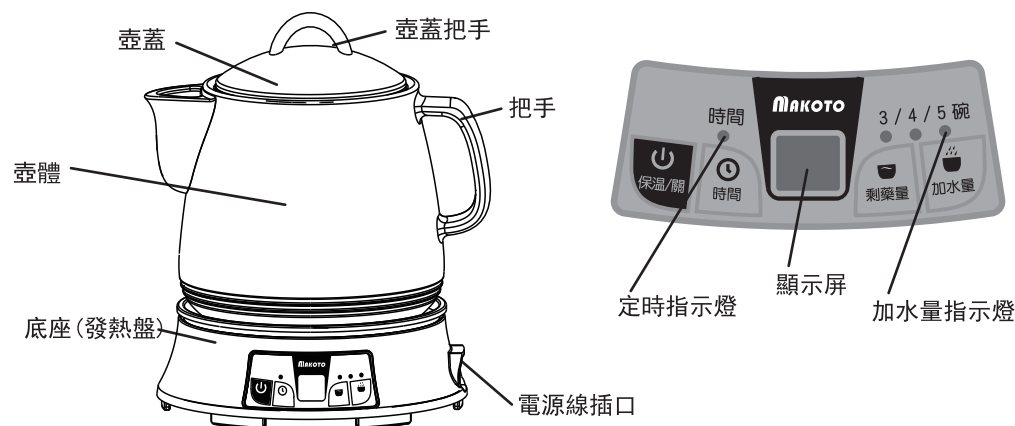

## 產品特點

1. 天然陶瓷製品，煲熬中藥，原汁原味，保持藥性。
2. 超耐高溫陶瓷壺體(約350°C)，耐酸耐鹼，不受侵蝕，熱效率高。
3. 分體式機座智能控制，煎熬過程全自動。
4. 全自動文武火，快速煮沸後自動轉入文火煎熬。
5. 分體設計取拿方便自如，容易清洗。
6. 壺嘴排氣暢順，沸騰不溢藥湯。
7. 全自動煎藥，煲至1碗水便自動跳至保溫，特設蜂鳴提示。
8. 剩藥可選 8分、1碗、1碗半、兩碗。

## 產品特點

1. 發熱盤只可用本產品的陶瓷壺來煲藥，不可用其他陶瓷壺或煲。
2. 本產品的陶瓷壺只可配本發熱盤來煲藥，不可用在明火，電陶爐或任何熱爐上加熱。
3. 本產品不可用來烘乾衣服或任何物品。
4. 放入藥材，再加入食水時，水位不可超過最高水位線 (MAX)。
5. 為防止燙傷，煮沸後拿起陶瓷壺或本機發熱盤須與身體有一定距離及小心燙傷別人。
6. 將有腳插頭插入有接地的電源插座並確保插頭須插緊底座發熱盤。

## 使用本產品

1. 先把中藥材(或藥膳食材)洗乾淨，把洗乾淨的中藥材放入陶瓷壺內，再加入適量食水。
2. 把發熱底座放在平穩的桌面上，擦乾陶瓷壺表面及底部的水漬，仔細檢查壺底與發熱板，確保表面沒有任何異物。將陶瓷壺平放在底座上並左右轉動數次，確保壺底與發熱板有充分接觸。插頭須插緊底座發熱盤。把有腳插頭插入有接地的電源插座。接通電源。此時本機會發出“B”的一聲，顯示屏顯示“OF”，代表本產品已進入待機狀態。之後可根據個人需要進行各項使用功能的設置。

## 煎藥：

1. 加水量 (先把中藥材洗乾淨或浸泡)
  - 特設有多種水量 (3碗, 4碗及5碗) 的煎藥指示模式可供客戶選擇, 按”加水量” 一次是3碗, 按兩次是4碗, 按三次是5碗, 該功能指示燈會同時亮起表示相應的水量.
  - 在待機狀態下按 “加水量” 鍵一次, 加水指示燈 “3” 亮起表示加水量為3碗, 本機默認煮後剩下藥量是1碗, 數碼屏顯示為 “1.0”. 此時顯示屏顯示燈閃爍, 5秒後顯示燈停止閃爍, 煎藥工作自動開始. 在煎藥完成前10分鐘, 本機會發出3聲蜂鳴提示, 同時顯示屏顯示燈閃動, 提示你放入後下藥 (如有需要). 待煎藥工作完成, 自動轉為保溫狀態時, 本機會發出10聲蜂鳴提示, 顯示屏會顯示 “00”.
  - 本機內置設定默認煎藥剩藥量是1碗 (按3碗, 4碗或5碗的按鍵, 蒸出來的剩藥量都是1碗, 但內置所需煎藥默認時間會有所不同), 對應表如下:

| 剩藥量 | 加水量 | 按”加水量”鍵次數 | 顯示屏顯示 | 所需工作時間   |
|-----|-----|-----------|-------|----------|
| 1 碗 | 3 碗 | 1 次       | 1.0   | 約 50 分鐘  |
| 1 碗 | 4 碗 | 2 次       | 1.0   | 約 85 分鐘  |
| 1 碗 | 5 碗 | 3 次       | 1.0   | 約 113 分鐘 |

- 另外, 客人亦可自行決定加水量及剩藥量. 依使用本產品1及2指示操作後, 加入你選定用的清水碗數, 按加水量, 你可自行選擇3碗, 4碗或5碗, 之後再按剩藥量, 你可自行選擇 0.8碗, 1碗, 1.5碗或2碗. 待顯示屏顯示燈停止閃爍, 工作自動開始.

| 剩藥量  | 按”剩藥量”鍵次數 | 顯示屏顯示 | 所需加水量 |
|------|-----------|-------|-------|
| 8 分  | 3 次       | 0.8   | 依藥方決定 |
| 1 碗半 | 2 次       | 1.5   | 依藥方決定 |
| 兩碗   | 1 次       | 2.0   | 依藥方決定 |

2. 定時 (此功能較適合煲涼茶或藥膳湯水)
 

依使用本產品1及2指示操作後, 按 “定時” 鍵1次顯示燈同時亮起, 顯示屏顯示 “10”. 之後每按1次 “定時” 按鍵即增加10分鐘, 由10, 20, 30, 40, 50, 60, 70, 80, 90, 99. 最多可定時99分鐘, 最少定時10分鐘. 依你所需要的定時來設定後, 顯示屏顯示燈閃爍, 5秒後顯示燈停止閃爍, 工作自動開始.
3. 保溫 / 關
 

本機在工作時, 按保溫鍵可關機, 顯示屏顯示 “0F”. 在待機狀態下, 按 “保溫/關” 鍵後顯示屏會顯示 “00”, 本機會加熱至70℃並進入保溫狀態.

溫馨提示: 煎好的中藥或涼茶, 請立即食用, 以免氧化.

## 技術參數

| 型號      | 電壓    | 功率   | 頻率    | 陶瓷壺最大容量 |
|---------|-------|------|-------|---------|
| CKD-28E | 120V~ | 400W | 60 Hz | 3L      |

## 清潔及保養

- 請勿使用帶有腐蝕性的藥水及堅硬物品對其產品內, 外部進行清潔 (例如: 香蕉水, 汽油, 去污粉, 硬質刷等.)
- 電器內部嚴禁進水, 請不要將本產品電器部份進入水中清洗.
- 禁止使用洗碗機或烘碗機進行清洗, 以免做成變形或爆炸等危險.
- 清潔前, 必須關機. 把本機插頭從插座中拔出, 待產品完全冷卻後方可清潔.
- 電機塑膠部份輕微污垢, 請用柔軟沒有任何化學物質的擰乾濕抹布擦拭, 請注意含化學物質的布料會使機身變色. 較嚴重的污垢, 請用柔軟的濕抹布蘸少許中性清潔劑清理, 再用乾淨的濕抹布擦拭乾淨, 不可用水直接沖洗, 以免導至觸電及損壞.
- 陶瓷壺請用清水及食用清潔劑直接沖洗. 清洗後必須完全風乾方可再次使用.
- 本機不可用尖物/硬刷刮洗.
- 不使用時, 應把本產品存放在乾燥通風的地方.

## IMPORTANT SAFETY INSTRUCTIONS

When using this appliance, basic precautions should always be followed, including the following:

Read all instructions before use.


1. This product is only for home use, not for outdoor.
2. Remove the product from the outlet to the "off" mode before unplugging the plug from the outlet. Do not use the way to pull the power cord to unplug the plug, should be hold the plug and remove it from the socket.
3. Do not allow the wires to touch the hot surface. Before removing and cleaning, the product must be completely cooled.
4. When not in use, be sure to unplug the power plug from the power outlet.
5. Do not operate this product with any damage to the power cord. In order to avoid electric shock, do not disassemble and reassemble. If any damage, please carry it to our maintenance center. Unauthorized repair / modification or product for non-product design purposes, warranty will not provide.
6. Do not allow children to use this product separately.
7. Touch hot metal parts or steam may burn.
8. Never touch the inside of the product while it is working.
9. This product cannot be connected to a timer or remote control.
10. When first time to use this appliance, a slightly smell and white smoke may be emitted. It is normal status. Please ensure sufficient ventilation, those smell and white smoke will disappear quickly.

Special statement:

1. To avoid overloading the circuit, do not operate the other on the same circuit.
2. If the extension cord is necessary, use a 13 amp cable. A smaller current than this product may cause overheating and short circuit.
3. Please keep this manual for future reference.
4. Do not allow children or untrained personnel to use the product without supervision.
5. Do not immerse the product, power cord, or plug in any liquid. Doing so may cause electric shock or fire. To clean the product, follow the cleaning section on the instructions.
6. When the product is not in use, disconnect the plug from the power supply.
7. Do not touch the product with wet hands.
8. Do not expose the product to outdoor (rain or under the sun).
9. After inserting the plug into the socket and opening it, make sure that the qualified personnel supervise the use of the product.
10. Before using this product, remove all packaging materials.
11. After unpacking, check for damage and there are no missing parts.
12. All packaging materials, such as plastic bags, polyfoam, tape, etc. should be placed in places where children are not exposed, because improper use of these materials will lead to child suffocation, and even death.

13. Use only the parts provided in the product and in the packaging, otherwise it may pose a hazard to the user and may damage the product.
14. Before using the product, please check the product rating label on the power, voltage is consistent. The rating labels attached to the back of the product. If you have any questions, please contact our customer service department for assistance
15. Do not allow the power cord to touch a sharp edge or hot surface. during operation.
16. This product is not a toy, cannot be used directly into the people and animals, otherwise it will be burned.
17. This product cannot be used in unstable locations or burning objects, otherwise it is likely to cause a fire or burn.
18. Parts are not included in the warranty, if you need to be replaced, must be purchased with my company. Parts are not necessarily available; it may take some time to replace.
19. This product is for home use only, not for any commercial purposes.
20. If the products need to be repaired, client must clean the product and kill all the insects before sent to our repair center, otherwise our company will charge extra cost for cleaning and pest control.
21. You may notice an odour & gas using the appliance for the first time, due to the insulation material. This is harmless and will subside quickly.

## PARTS

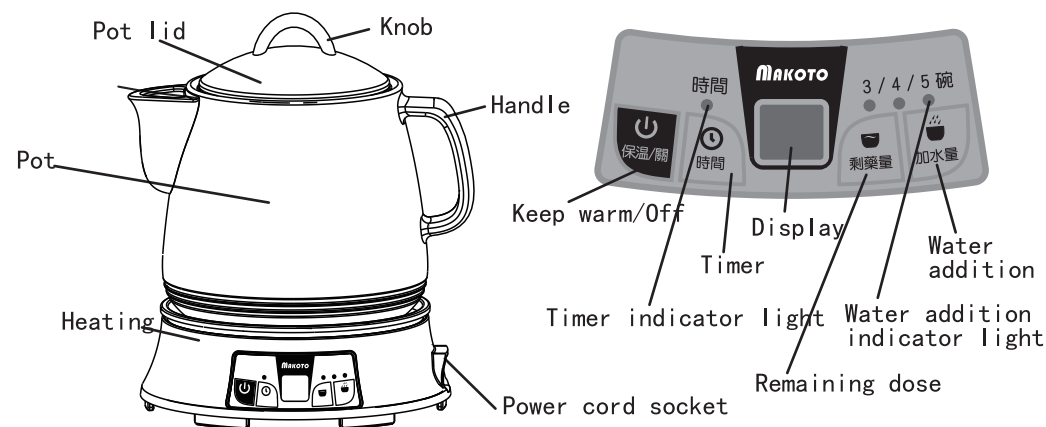

## FEATURES

1. Natural ceramic products, Chinese herbal medicine, original flavor, maintain the medicinal properties.
2. High temperature resistant ceramic pot (about 350 ° C), acid and alkali resistant, non-erosion, high thermal efficiency.
3. Separate machine base intelligent control, fully automatic process.
4. Fully automatic Large and slow fire, automatically transfer to slow fire after boil quickly
5. The split design is easy to take and easy to clean.
6. The spout is vented smoothly, and the boiling does not overflow the soup.
7. Automatic decocting, boil to 1 bowl of water will automatically jump to the keep warm, with beep sounds.
8. Remaining dose can be selected 0.8 bowl, 1 bowl, 1 bowl and a half, two bowls

## BEFORE USE

1. The heating plate can only be used with this ceramic pot of this product. Other ceramic pots cannot be used.
2. The ceramic pot of this product can only be used with this heating plate to boil the medicine. It can't be used in open flame, electric ceramic cooker or other stove.
3. This product cannot be used to dry clothes or anything.
4. Put the medicine, and when adding water, the water level should not exceed the maximum water level (MAX).
5. To prevent burns, pick up the ceramic pot or the heating plate of the appliance after boiling, and have a certain distance from the body and be careful to burn other peoples.
6. Insert the footed plug into a grounded power outlet and ensure that the plug is inserted into the base heating plate.

## USING OF THIS APPLIANCE

1. Wash the Chinese medicinal materials (or medicinal materials) first, put the cleaned Chinese medicinal materials into the ceramic pot, and then add the appropriate amount of water.
2. Place the heating plate on a stable table, dry the water stain on the surface and bottom of the ceramic pot, carefully check the bottom of the pot and the heating plate to ensure that there is no foreign objects on the surface. Place the ceramic pot on the base and turn it several times left and right. Make sure that the bottom of the pot is in full contact with the heating plate. The plug must be inserted into the base heating plate. Plug the footed plug into a grounded power socket. Turn on the power, the unit will sound "B" and the display will show "0F", means

set the usage functions according to your personal needs.

Decoction:

1. Add water (加水量) – wash or soak Chinese herbal medicine

– Dedicated indication mode with a variety of water (3 bowls, 4 bowls and 5 bowls) is available for customers to choose. Press "Water addition (加水量)" once for 3 bowls, press two times is 4 bowls, three times is 5 bowls, the function indicator will light up at the same time to indicate the corresponding amount of water.

– Press the "Water Addition (加水量)" button once in the standby state, and the water indicator "3" lights up to indicate that the water volume is 3 bowls. The remaining dose (剩藥量) of the machine is 1 bowl, and the digital screen displays "1.0". The display indicator flashes, after 5 seconds, the indicator light stops flashing, and the decocting work starts automatically. 10 minutes before the decocting is completed, the machine will give 3 beeps and the display will flash, prompting you to put it in the late add medicine (if necessary). When the work of the decocting is completed, it will be automatically changed to the keep warm state, the machine will give 10 beeps and the display will show "00".

– The built-in setting of the default decoction is 1 bowl, the corresponding

| Remaining dose | Water addition | Press the "Water addition" button | Display | Approximate time |
|----------------|----------------|-----------------------------------|---------|------------------|
| 1 bowl         | 3 bowl         | 1 times                           | 1.0     | App 50 mins      |
| 1 bowl         | 4 bowl         | 2 times                           | 1.0     | App 85 mins      |
| 1 bowl         | 5 bowl         | 3 times                           | 1.0     | App 113 mins     |

– You can also decide the amount of water addition (加水量) and the amount of remaining dose (剩藥量). After using the instructions 1 and 2 of this product, add the number of water bowls you have selected. According to the amount of water added, you can choose 3 bowls, 4 bowls or 5 bowls and press water addition (加水量) button to your request. Then press the remaining dose (剩藥量) button, you can choose 0.8 bowl, 1 bowl, 1.5 bowl or 2 bowls. When the display indicator light stops flashing, it will start to work automatically.

| Remaining dose | Press the "Remaining dose" button | Display | Water addition                 |
|----------------|-----------------------------------|---------|--------------------------------|
| 0.80 bowl      | 3 times                           | 0.8     | Determined by the prescription |
| 1.50 bowl      | 2 times                           | 1.5     | Determined by the prescription |
| 2.00 bowl      | 1 times                           | 2.0     | Determined by the prescription |

2. Timer (定時) - this function is more suitable for herbal tea or medicated soup

After using the instructions of 1 and 2 of this product, press the “Timer (定時)” button once, the indicator light will be light at the same time, and the display shows “10”. After each press of the “Timer (定時)” button, it will increase by 10 minutes, 10, 20, 30, 40, 50, 60, 70, 80, 90, 99. Up to 99 minutes, minimum is 10 minutes. After setting according to the timing you need, the display indicator flashes, and the display stops flashing after 5 seconds. , work starts automatically.

3. Keep warm / Off (保溫/關)

When the machine is working, press the keep warm (保溫/關) button to switch off the appliance, and the display shows “OF”. In the standby state, press the “Keep warm/Off (保溫/關)” button and the display will show “00”. The machine will heat up to 70° C and enter the Keep warm state.

Tips: Fried Chinese medicine or herbal tea, please drink immediately to avoid oxidation.

## CLEAN & MAINTENANCE

- Cannot use banana water, gasoline, decontamination powder, hard brush, etc. to clean all parts of this appliance.
- Do not enter the water inside the appliance. Cannot fill in the electric parts (except ceramic pot) of appliance inside the water
- To avoid the risk of deformation and explosion, it cannot use dishwasher to clean this appliance.
- Before cleaning and maintenance, make sure the product has unplugged and the product has been completely cooled.
- Slightly dirt: Please wipe with soft, dry cloth that is soft and free of any chemicals. Please note that the fabrics containing chemical substances may discolor the body.
- Serious dirt: Clean by cloth with little tooth paste or neutral detergent to wipe it again with clean wet cloth. For not wash by water directly to avoid electric shock and damaged.
- Ceramic pots should be rinsed directly with water and detergent. After cleaning, it must be completely air-dried before use.
- This machine is not available for sharp objects/hard brush scraping.
- Store this product in a dry and ventilated place when not in use.

| Model#  | Voltage | Power | Frequency | Ceramic Pot capacity |
|---------|---------|-------|-----------|----------------------|
| CKD-28E | 120V~   | 400W  | 60 Hz     | 3L                   |

## SMALL HOME APPLIANCES WARRANTY TERMS & CONDITIONS

MAIN PLAN LIMITED (hereinafter called “the Company”) offers one year warranty service to the product (commencing from the date of purchase invoice by the authorized dealers). Services beyond the said warranty period will be charged according to the quotation from our Service Department.

1. Customer should follow the operating instruction in operating the product. The Company shall not be liable for any direct or indirect loss or damage to any person of property, howsoever caused arising from improper use, or any stoppage, breakdown or failure of the product.
2. The warranty service will not be offered if the model, serial number of the product or the invoice of the authorized dealers has been altered or effaced.
3. This warranty does not cover any damage or loss caused by man-made, misuse, neglect, unauthorized repair / modification or use of the product for any purpose other than the original designed.
4. This warranty service does not include any surface, cabinet, consumptive parts and accessories.
5. Customer should be responsible to carry the product to our Service Department for rendering of service and collect back the product at the same location after repaired. Any defective part which has been replaced should become the property of the Company.
6. All articles left unclaimed by the customer within 30 days after notification will be disposed of at our own discretion and the Company shall not be liable or responsible to the customer for such articles or for any loss or damage whatsoever in such event.
7. All terms stated are subject to change without notice. In case of dispute, the Company reserves the right for final judgment and decision.