

Nintendo Switch™


Nintendo Switch
Nintendo Switch – OLED Model
Nintendo Switch Lite

Important Information


Nintendo may change product specifications and update this information from time to time. The latest version of the Important Information document is available at <https://docs.nintendo-europe.com> (This service may not be available in some countries.)

Using this Console


TV mode (not applicable to Nintendo Switch Lite)

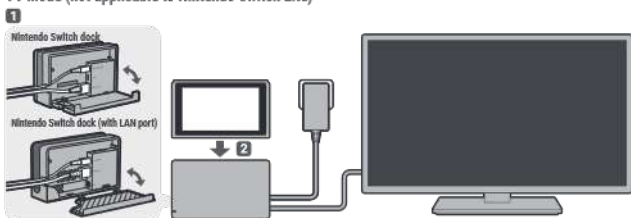

Tabletop mode (not applicable to Nintendo Switch Lite)

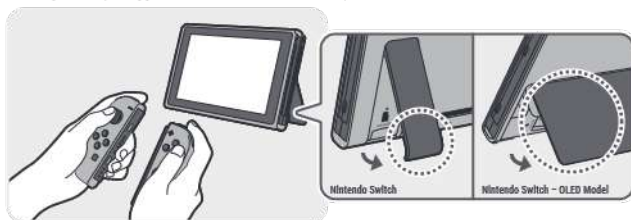

Inserting a microSD card

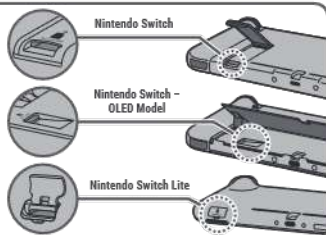

PLEASE NOTE

In this document, the terms "Nintendo Switch," "console," and "Nintendo Switch console" also refer to the Nintendo Switch Lite system, unless otherwise stated. Any references to the Joy-Con™ controllers, to multiple batteries and to the vibration feature do not apply to the Nintendo Switch Lite system.

Health and Safety Information

Please read and observe the health and safety information. Failure to do so could result in injury or damage. Adults should supervise the use of this product by children.

WARNING - Strains

- Some people (about 1 in 1000) may have weakness or discoloration triggered by light flashes or patterns, such as when watching TV or playing video games. If you experience any of these symptoms, stop playing the game immediately and contact your doctor. If you experience any of these symptoms again, stop playing the game immediately and contact your doctor. If you experience any of these symptoms again, stop playing the game immediately and contact your doctor. If you experience any of these symptoms again, stop playing the game immediately and contact your doctor.
- Stop playing and consult a doctor if you have any visual symptoms, loss of awareness or any other symptom linked to an epileptic condition should consult a doctor before playing video games.
- Stop playing and consult a doctor if you have any visual symptoms, loss of awareness or any other symptom linked to an epileptic condition should consult a doctor before playing video games.
- To reduce the likelihood of a seizure when playing video games:
 - Do not play if you are tired or need sleep.
 - Play in a well-lit room.
 - Take a break of 10 to 15 minutes every hour.

WARNING - Eye Strain, Neck Strains and Repetitive Motion Injuries

- Avoid excessively long play sessions.
- Take a break of 10 to 15 minutes every hour, even if you don't think you need it.
- Stop playing if you experience any of these symptoms:
 - If your eyes become tired or sore while playing, or if you feel dizzy, nauseated or head.
 - If you experience neck or shoulder pain, or if you feel your neck or shoulder is stiff.
 - If you experience hand or wrist pain, or if you feel your hand or wrist is stiff.
 - If you experience any other discomfort.
- If any of these symptoms persist, consult a doctor.

WARNING - Pregnancy and Medical Conditions

- Consult a doctor before playing games that may require physical activity if:
 - You are pregnant.
 - You suffer from heart, respiratory, back, joint or orthopedic problems.
 - You have high blood pressure.
 - Your doctor has instructed you to restrict your physical activity.
 - You have any other medical condition that may be aggravated by physical activity.

WARNING - Batteries

- Stop using a battery to booting.
- If battery had come into contact with your eyes, immediately rinse your eyes with plenty of water and consult a doctor. If any fluid leaks on your hands, wash them thoroughly with water. Carefully wipe the fluid from the exterior of the device with a cloth.
- The console and Joy-Con controllers each contain a rechargeable lithium-ion battery. Do not replace the batteries yourself. The batteries must be removed and replaced by a qualified professional. Please contact Nintendo Customer Support for more information.

WARNING - Electrical Safety

- Observe the following precautions when using the AC adapter:
 - Use only the AC adapter (HAC-001) to charge the console.
 - Connect the AC adapter to the correct voltage (AC 100 ~ 240V).
 - Do not use voltage transformers or plugs that deliver reduced amounts of electricity.
 - The AC adapter should be plugged into a neatly, easily accessible socket.
 - The AC adapter is for indoor use only.
 - If you hear a change in tone, see smoke or smell something strange, unplug the AC adapter from the socket and contact Nintendo Customer Support.

- Do not expose devices to fire, microwaves, direct sunlight, high or extremely low temperatures.
- Do not let devices come into contact with liquid and do not use them with wet or oily hands.
- If liquid gets inside, stop using and contact Nintendo Customer Support.
- Do not expose devices to excessive force.
- Do not pull on cables and do not twist them too tightly.
- Do not touch device connectors with your fingers or metal objects.
- Do not touch device connectors while charging during a thunderstorm.
- Use only compatible accessories that have been approved for use in your country.
- Use only compatible accessories that have been approved for use in your country.
- Do not disassemble or try to repair devices.
- If devices are damaged, stop using them and contact Nintendo Customer Support. Do not touch damaged areas. Avoid contact with any leaking fluid.

WARNING - General

- Keep the console, its accessories and packaging materials away from young children and pets. Small parts such as game cards, microSD cards and packaging items may be accidentally ingested. The cables can coil around the neck.
- Do not use the console when 15 centimeters of a cardiac pacemaker while using wireless communication. If you have a pacemaker or other implanted medical device, first consult a doctor.
- Wireless communication may not be allowed in certain places such as airports or hospitals.
- Do not use headphones to listen at high volume levels for long periods due to high sound pressure and hearing damage risk.
- Keep the volume at a level at which you can hear your surroundings. Consult a doctor if you experience symptoms such as buzzing in your ears.
- Stop playing if you are holding the console or the controller while charging and they become too hot, as they may lead to skin burns.
- Persons who have an injury or disorder involving their fingers, hands or arms should not use the vibration feature.

CAUTION - FIRE

- Do not place the console in humid areas or areas where the temperature can suddenly change. If condensation forms, turn the power off and wait until the water droplets have evaporated.
- Do not use in dusty or smoky areas.
- Do not cover the console air outlets or vents while playing to avoid overheating.
- If devices become dirty, wipe them with a soft, dry cloth. Avoid using thinner or other solvents.
- Be aware of your surroundings while playing.
- Make sure to charge the full battery before use.
- Do not use the console in areas where it is not used for an extended period of time. It may become impossible to charge them.
- To minimize the risk of image retention or screen burn-in occurring on the Nintendo Switch console OLED screen (HAC-001 only), do not turn off the console without deep mode settings and two case. To help prevent image retention, the console OLED screen (HAC-001 only) is covered with a film layer designed to prevent fragments collecting in the event of damage. Do not peel it off.

Please make sure you read the Health and Safety information page on the Nintendo Switch console once it has been set up. You can access this information from SUPPORT in the System Settings on the HOME Menu.



IMPORTANT INFORMATION FOR PARENTS Parental Controls

Nintendo Switch offers a variety of exciting features. However, as a parent, you might want to restrict certain things which you deem unsuitable for children. We have prepared special steps to enable you to make Nintendo Switch safe for your family.

Nintendo Switch Parental Controls are available on the console itself and can also be controlled by an app you set up on your smartphone or tablet. To learn more about how to set up Parental Controls, visit <https://www.nintendo.com/parentalcontrols>. On the console itself, you can use a PIN to set and change your desired Parental Controls settings. Your PIN can also be used to temporarily disable Parental Controls if you should wish to do so.

You can also change your settings at any time – even when you are away from home – using the dedicated app.

Purchase Restrictions in Nintendo eShop

In order to restrict Nintendo eShop purchases, you must associate your child's Nintendo Account with your Nintendo Account. Access your Nintendo Account on a smart device or PC to create an account for your child or associate an existing account with yours and set restrictions as you deem appropriate in the Nintendo Account settings.

<https://accounts.nintendo.com>

Using the Joy-Con Controllers (not applicable to Nintendo Switch Lite)

Charge and pair controllers before using them for the first time. You can charge and pair controllers by attaching them directly to the console or using the Joy-Con charging grip (HAC-012) (sold separately). When the controllers are fully charged, the battery indicator light will turn red. When the console is charging at the same time.

When playing with a Joy-Con detached from the console, make sure to use a Joy-Con strap accessory.

To attach a Joy-Con strap accessory, match the + or – button on the controller

to the corresponding + or – button on the Joy-Con strap accessory and slide the strap

onto the controller and lock it using the slide lock. Then, put on and tighten

the wrist strap. Hold the controller securely and do not let go of it. Allow

adequate room around you during gameplay. When you are done playing,

release the slide lock before detaching the accessory from the Joy-Con.

When attaching a Joy-Con to the console or attaching a Joy-Con strap

accessory, make sure that you orientate the Joy-Con correctly and slide it

into the console or the Joy-Con strap accessory. When detaching a Joy-Con from the console

or another device, make sure that you hold the button on the back and slide upwards.



Activating and Deactivating Wireless Internet Connection

To activate wireless internet connection, go to INTERNET in ⚙️ (System Settings) on the HOME Menu and proceed to set up a connection.

To deactivate wireless internet connection in handheld mode, hold down the HOME Button to enter Quick Settings, then set Flight Mode to On. Alternatively, in handheld mode, start ⚙️ (System Settings) from the HOME Menu, then set Flight Mode to On.

Disposal of this Product

Do not dispose of this product or built-in batteries in household waste.

For details see <https://docs.nintendo-europe.com>

The battery should be removed by a qualified professional. Visit <https://battery.nintendo-europe.com> for more information.

Warranty

Warranty UK and Ireland

1231121/UKV-HW

24-MONTH MANUFACTURER'S WARRANTY – CONSOLES IN THE NINTENDO SWITCH™ FAMILY

This warranty covers Nintendo Switch consoles, Nintendo Switch – OLED Model consoles and Nintendo Switch Lite systems (the "Nintendo console"), including the original built-in software (the "Nintendo game"), and the original built-in software (the "Nintendo game") and the original built-in software (the "Nintendo game") and the original built-in software (the "Nintendo game"). In this warranty, the Nintendo console, the Nintendo Switch – OLED Model console, the Nintendo Switch Lite system, and any controllers included within the console packaging (the "Nintendo Controllers") are referred to together as the "Product".

Subject to the terms and exclusions below, Nintendo of Europe GmbH, Goldsteintstraße 235, 8080 Zürich, Switzerland, is the manufacturer of the Product. Nintendo of Europe GmbH is the manufacturer of the Product in the United Kingdom, any country of the European Economic Area (excluding Spain and Portugal) or Switzerland ("you"), for a period of 24 months from the date of the purchase of the Product by you. The Product will be free from defects in materials and workmanship.

EXCLUSIONS

This warranty does not cover:

- software (other than the Nintendo Operating Software) or games (whether included with the console or purchased separately);
- accessories, peripherals or other items that are intended for use with the Product but are not manufactured by or for Nintendo (whether included with the Product at the time of purchase or not);
- the Product if it has been resold, or used for rental or commercial purposes;
- defects in the Product that are caused by accidental damage, you and/or any third party's negligence, misuse, or use of the Product in a manner not intended or authorised for use with the Product by Nintendo (including but not limited to, non-licensed game emulators, copier devices, adapters, power supplies or non-licensed access series), computer viruses or connecting to the internet or other forms of electronic communication, use of the Product otherwise than in accordance with the respective instructions, or any other cause unrelated to defects in the Product that are caused by the use of faulty, damaged or leaking batteries or battery packs, or any other use of batteries or battery packs not in accordance with the respective instructions;
- gradual decrease over time in the capacity and performance of batteries and battery packs for the Product (which, for the avoidance of doubt, will not be deemed to be a defect in material or workmanship);
- the Product if it has been opened, modified or repaired by any person or company other than Nintendo or its authorised partner, or if the Product has its serial number altered, defaced or removed;
- loss of any data that has been loaded onto or stored on the Product by any person or company other than Nintendo or its authorised partner;
- any other Nintendo product, accessory or software, as a result of formatting the memory of the Product (or the microSD card or any other external storage device bought with the Product), or
- loss of data or any other content as a result of deleting a Nintendo Account registered or linked to the Product.

HOW TO MAKE A CLAIM

- To make a valid claim under this warranty, you must:
- notify Nintendo of the defect in the Product within 24 months of the date of the purchase of the Product;
- return the Product to Nintendo within 30 days of notifying Nintendo of that defect.

To make a claim, please contact Nintendo Customer Support.

Before sending the Product to Nintendo Customer Support, you should remove or delete any private or confidential files or data.

By sending the Product to Nintendo you accept and agree that Nintendo will not be responsible for any loss, deletion or corruption of your files or data that has not been deleted or removed by you before sending the Product to Nintendo. Please note that, depending on the type of repair, data or other content stored in the memory of the Product may be deleted, and you may not be able to read data or other content saved to your microSD card or to any other external storage device, or import it back onto the Product following such repair.

When sending the Product to Nintendo Customer Support, please:

1. use the original packaging where possible;
2. provide a description of the defect;
3. attach a copy of your proof of purchase, which indicates the date of purchase of the Product.



*This restriction applies in the following countries:
Austria (AT), Belgium (BE), Bulgaria (BG), Croatia (HR), Cyprus (CY),
Czech Republic (CZ), Denmark (DK), Estonia (EE), Finland (FI), France (FR),
Germany (DE), Greece (EL), Hungary (HU), Ireland (IE), Italy (IT), Latvia (LV),
Lithuania (LT), Luxembourg (LU), Malta (MT), Netherlands (NL), Poland (PL),
Portugal (PT), Romania (RO), Slovakia (SK), Slovenia (SI), Spain (ES),
Sweden (SE), Switzerland (CH) and United Kingdom (Northern Ireland) (UK(NI)).

Ecodesign Information for the Nintendo Switch AC Adapter	
Commercial registration number of EU authorised representative	HRB 101840
Model identifier	HAC-002(UK/V)
Input voltage	AC 100-240V
Input AC frequency	50/60Hz
Output voltage *	DC 5.0V DC 15.0V
Output current	1.5A 2.6A
Output power	7.5W 39.0W
Average active efficiency	76.8% 88.5%
Efficiency at low load (10%)	- 83.0%
No-load power consumption	0.08W 0.08W

* The AC Adapter (HAC-002(UK/V)) has two types of DC output power, and the output voltage is automatically changed depending on the connected device.

Console Ecodesign Information

Information concerning this product's energy consumption, power management and resource efficiency is available at <https://nintendo-europe.com/switch-eco-design>

For explanation of the symbols and markings used on this product, see <https://docs.nintendo-europe.com>

DECLARATION OF CONFORMITY

Hereby, Nintendo declares that the radio equipment type (Nintendo Switch/Nintendo Switch - OLED Model/ Nintendo Switch Lite/Joy-Con) is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <https://docs.nintendo-europe.com>
For UK: Hereby, Nintendo declares that the radio equipment type (Nintendo Switch/Nintendo Switch - OLED Model/ Nintendo Switch Lite/Joy-Con) is in compliance with the UK declaration of conformity at the following internet address: <https://docs.nintendo-europe.com>

The Bluetooth® word and mark logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Nintendo is under license. Other trademarks and trade names are those of their respective owners.

© Nintendo.
Trademarks are property of their respective owners. Nintendo Switch and Joy-Con are trademarks of Nintendo.

If, having inspected the Product, Nintendo accepts that the Product is defective, Nintendo will, at its sole discretion, either repair or replace the part causing the defect, or replace the relevant element of the Product without charge.

If the above 24-month warranty period has expired at the time the defect is notified to Nintendo or if the defect is not covered by this warranty, Nintendo may still be prepared to repair or replace the part causing the defect or replace the relevant element of the Product (at its sole discretion). For details on, in particular, details of any charges for such services, please contact Nintendo Customer Support.

This manufacturer's warranty does not affect any statutory rights which you may have under legislation as the purchaser of goods. The benefits described here are in addition to those rights.

Support Information

Nintendo Customer Support (UK and Ireland)

1904210007

Nintendo Customer Support
<http://support.nintendo.co.uk>

Technical Specifications

Nintendo Switch	
Bluetooth®	Operating frequency band(s) 2402-2480MHz Maximum radio-frequency power 348m
WLAN	2412-2472MHz / 5180-5250MHz / 5250-5320 MHz (for indoor use only) / 5500-5700MHz 19dBm / 15dBm / 15dBm
Nintendo Switch - OLED Model	
Bluetooth®	Operating frequency band(s) 2402-2480MHz Maximum radio-frequency power 248m
WLAN	2412-2472MHz / 5180-5250MHz / 5250-5320 MHz (for indoor use only) / 5500-5700MHz 15dBm / 7.5dBm / 7.5dBm
Joy-Con (L)	
Bluetooth	Operating frequency band(s) 2402-2480MHz Maximum radio-frequency power 448m
Joy-Con (R)	
Bluetooth	Operating frequency band(s) 2402-2480MHz Maximum radio-frequency power 448m
NFC	13.56MHz Maximum field strength -6dBµA/m
Nintendo Switch Lite	
Bluetooth	Operating frequency band(s) 2402-2480MHz Maximum radio-frequency power 248m
WLAN	2412-2472MHz / 5180-5250 MHz / 5250-5320MHz (for indoor use only) / 5500-5700MHz 19dBm / 15dBm / 15dBm
NFC	13.56MHz Maximum field strength -10dBµA/m



For more information about Nintendo Switch, please visit the Nintendo Support website.

<https://support.nintendo.com>



Manufacturer: Nintendo Co., Ltd., Kyoto 601-8501, Japan

EU authorised representative & importer:

Nintendo of Europe GmbH, Goldsteinstrasse 235, 60528 Frankfurt, Germany

UK economic operator: Nintendo UK, Quadrant, 55-57 High Street, Windsor SL4 1LP, UK

