

210 mm



Portable Wireless Speaker

Model: BX320

User Manual



Please read this manual carefully before using. 2Boom is not responsible for consequence caused by fault or oversight of this manual.


www.2boomusa.com

FEATURES:

1. 2.1 outdoor Passive Bluetooth Speaker with 3 inch subwoofer
2. Output very clear sound and heavy bass, dynamic sound effect
3. With A2DP Bluetooth, wireless stream music from any Bluetooth-enabled device such as your mobile phone, notebook, iPhone or iPad
4. Secure simple pairing for user-friendly operating
5. With FM radio function,
6. With Line-in function, suitable for PC,MID,TV and other audio device.
7. Built-in lithium rechargeable battery 1500mAh
8. With strap, easy to take out.

SPECIFICATION:

Horn Size:2 inch
Subwoofer Size:3 inch
Horn output: 3W*2,4Ω
Subwoofer output:5W,4Ω
Battery Capacity:1500mAh
Frequency Response:100Hz-20kHz

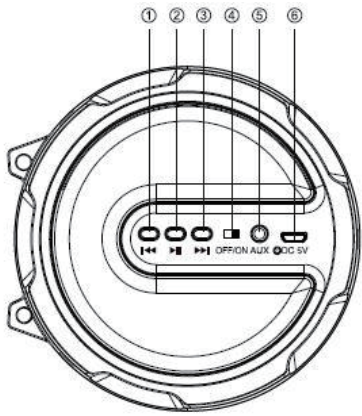

- 1.Backward
- 2.Play/Pause
- 3.Forward
- 4.On/Off button
- 5.Aux-in jack
- 6.Charging jack

www.2boomusa.com

142 mm

Bluetooth:

1. Turn the power button to “ON”, The LED light turn blue and twinkle quickly.
2. Activate Bluetooth of mobile phone and search for device name “**2BOOM - BX320**”, then connect it. The blue LED light will not twinkle once connected successful.
3. Play the music from your mobile phone and enjoy.
4. Press LAST or NEXT button on the devices or on Mobile phones to select songs you like.
5. Press Play/pause button on the devices or on Mobile phones to play/stop music.
6. Use the Bluetooth device to adjust volume up and down. Or long press to fast forward or backward to adjust volume up and down.

FM Radio:

1. Under FM radio state, the audio cable provided acts as an antenna. Please Insert the audio cable to get the best FM signal before using.
2. Turn the power button to “ON”, long press the “Play/Pause” button to switch to FM radio state.
3. Under playing mode, short press “Play/pause” button to auto search the FM Channel and store it automatically.
4. Press LAST or NEXT button to change the stored FM channel.

AUX-IN:

For other compatible music devices or your MP3/MP4 players, use the supplied audio line cable to connect from the device’s “Line Out” to the “Aux In” of this devices. Speaker will turn to “AUX” state automatically when insert the audio cable. Enjoy...

When using an external device, all functions will be controlled by the external device except the “Play/pause” button.

How to charge:

1. Power off the unit, put the provided charge cable into the charge slot of unit, connect the other end to PC or other charger with 5V output (Not included),the red charging indicator keep lighting.
2. Charge time should be 2-3 hours. When charging full, the indicator light will switch off.
3. In order to prolong the life of battery, please do not charge more than 8 hours.
4. Turn the power button to “off” to cut off the power supply while without use.

www.2boomusa.com

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure requirement.
The device can be used in portable exposure condition without RF restriction.



www.2boomusa.com