



User Manual

Aspire 3 A311-45

About this Concise User Guide

This quick guide is a brief introduction to getting your system started. This is a supplement, and not a substitute for the expanded English language *User's Manual* in *Adobe Acrobat* format on the *Device Drivers & Utilities + User's Manual* disc supplied with your computer. This disc also contains the drivers and utilities necessary for the proper operation of the computer (**Note:** The company reserves the right to revise this publication or to change its contents without notice).

Some or all of the computer's features may already have been setup. If they aren't, or you are planning to re-configure (or re-install) portions of the system, refer to the expanded *User's Manual*. The *Device Drivers & Utilities + User's Manual* disc does not contain an operating system.

Regulatory and Safety Information

Please pay careful attention to the full regulatory notices and safety information contained in the expanded *User's Manual* on the *Device Drivers & Utilities + User's Manual* disc.

© March 2024

Trademarks

Intel is a trademark/registered trademark of Intel Corporation.

Windows is a registered trademark of Microsoft Corporation.



FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Instructions for Care and Operation

The computer is quite rugged, but it can be damaged. To prevent this, follow these suggestions:

- **Don't drop it, or expose it to shock.** If the computer falls, the case and the components could be damaged.
- **Keep it dry, and don't overheat it.** Keep the computer and power supply away from any kind of heating element. This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.
- **Avoid interference.** Keep the computer away from high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage your data.
- **Follow the proper working procedures for the computer.** Shut the computer down properly and don't forget to save your work. Remember to periodically save your data as data may be lost.

Servicing

Do not attempt to service the computer yourself. Doing so may violate your warranty and expose you and the computer to electric shock. Refer all servicing to authorized service personnel. Unplug the computer from the power supply. Then refer servicing to qualified service personnel under any of the following conditions:

- When the power cord or AC/DC adapter is damaged or frayed.
- If the computer has been exposed to any liquids.
- If the computer does not work normally when you follow the operating instructions.
- If the computer has been dropped or damaged (do not touch the poisonous liquid if the panel breaks).
- If there is an unusual odor, heat or smoke coming from your computer.

Safety Information

- Only use an AC/DC adapter approved for use with this computer.
- Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
- Do not continue to use a battery that has been dropped, or that appears damaged (e.g. bent or twisted) in any way. Even if the computer continues to work with a damaged battery in place, it may cause circuit damage, which may possibly result in fire.
- Make sure that your computer is completely powered off before putting it into a travel bag (or any such container).
- Before cleaning the computer, make sure it is disconnected from any external power supplies, peripherals and cables.
- Use a soft clean cloth to clean the computer, but do not apply cleaner directly to the computer. Do not use volatile (petroleum distillates) or abrasive cleaners on any part of the computer.
- Do not try to repair a battery pack. Refer any battery pack repair or replacement to your service representative or qualified service personnel.
- Avoid placing any other items in the carrying bag which may rub against the top of the computer during transport. If any such wear and tear develops contact your service center.

Polymer/Lithium-Ion Battery Precautions

Note the following information which is specific to Polymer/Lithium-Ion batteries only, and where applicable, this overrides the general battery precaution information.

- Polymer/Lithium-Ion batteries may experience a slight expansion or swelling, however this is part of the battery's safety mechanism and is not a cause for concern.
- Use proper handling procedures when using Polymer/Lithium-Ion batteries. Do not use Polymer/Lithium-Ion batteries in high ambient temperature environments, and do not store unused batteries for extended periods.
- If you are working in areas of low temperature use the AC/DC adapter to power the computer.



Battery Disposal & Caution

The product that you have purchased contains a rechargeable battery. The battery is recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of this battery into the municipal waste stream. Check with your local solid waste officials for details in your area for recycling options or proper disposal.

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used battery according to the manufacturer's instructions.

Model Differences

This notebook series includes different models that vary slightly in design style, color and general appearance. Note that though your computer may look slightly different from that pictured throughout this documentation, all ports, jacks, indicators, specifications and general functions are the same for all the design styles.

System Startup

1. Remove all packing materials.
2. Place the computer on a stable surface.
3. Securely attach any peripherals you want to use with the computer (e.g. keyboard and mouse) to their ports.
4. **When first setting up the computer use the following procedure** (as to safeguard the computer during shipping, the battery will be locked to not power the system until first connected to the AC/DC adapter and initially set up as below):
 - Attach the AC/DC adapter cord to the DC-In jack on the left of the computer, then plug the AC power cord into an outlet, and connect the AC power cord to the AC/DC adapter. The battery will now be unlocked.
5. Use one hand to raise the lid to a comfortable viewing angle (do not exceed 135 degrees); use the other hand (as illustrated in **Figure 1**) to support the base of the computer (**Note: Never** lift the computer by the lid).
6. Press the power button to turn the computer "on".

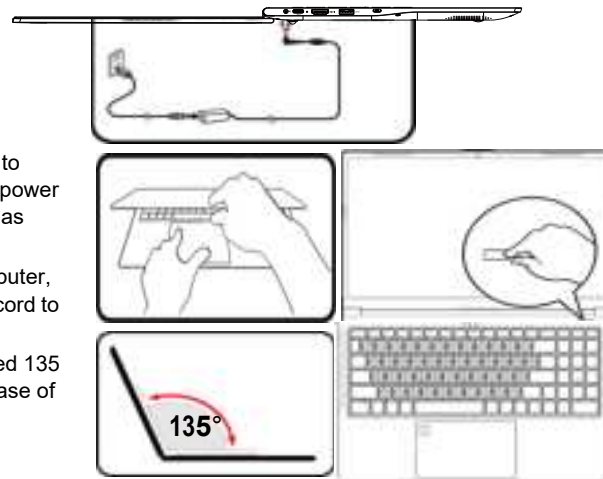 


Figure 1 - Opening the Lid/Computer with AC/DC Adapter Plugged-In

System Software



Your computer may already come with system software pre-installed. Where this is not the case, or where you are re-configuring your computer for a different system, you will find this manual refers to **Microsoft Windows 11**.



Shut Down

Note that you should always shut your computer down by choosing the **Shut down** command in **Windows** (see below). This will help prevent hard disk or system problems.



1. Click the Start Menu icon .
2. Click the **Power** item .
3. Choose **Shut down** from the menu.

System Map: Front View with Display Open

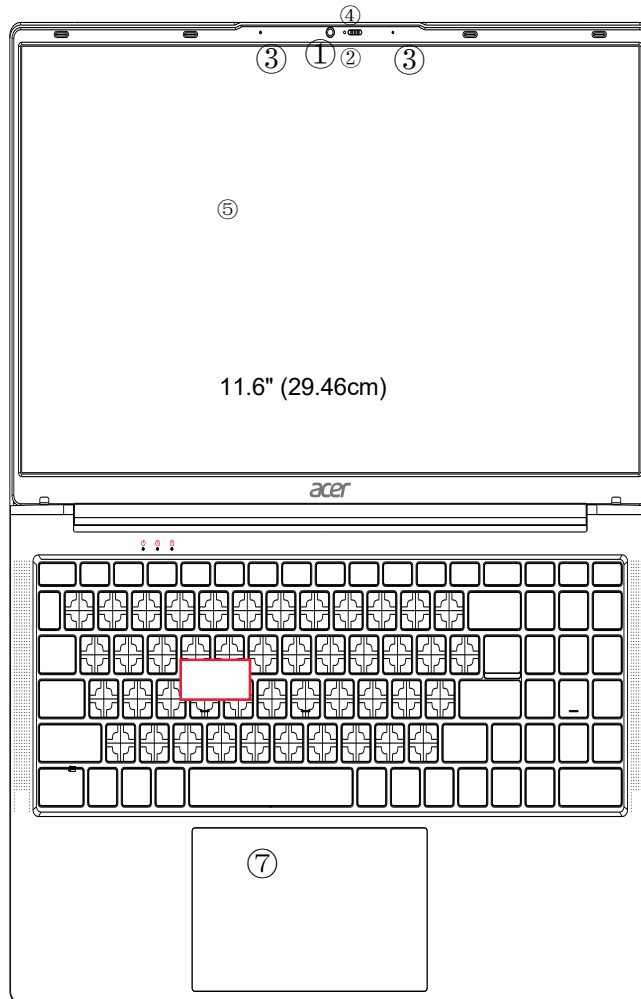 


Figure 2 - Front View with Display Open

1. Webcam
2. *Webcam LED
**When the camera is in use, the LED will be illuminated.*
3. Built-In Microphone
4. Camera switch
5. Display
6. Keyboard
7. Touchpad & Buttons



Note that the Touchpad and Buttons valid operational area is that indicated within the dotted lines above.

LED Indicators

The LED indicators on the computer display helpful information about the current status of the computer.







Icon	Color	Description
 ○		 ○
		 ○
	Blue	The battery is seriously low
	Blue (unremitting)	The Computer is On
	Blue(blink)	The Computer is in Sleep Mode
	Caps Lock	When the Caps Lock key is pressed, it lights up to indicate keyboard input is uppercase. When Caps Lock key is released, the light goes off, indicating that keyboard is typing lowercase letters
	Num Lock	When the Num Lock key is pressed, it lights up to indicate that the number buttons on the keyboard are available. When Num Lock key is released, the light goes off, indicating that number buttons on the keyboard are unavailable

Table 1 - LED Indicators

Keyboard

Your notebook comes with a keyboard. The keyboard has a numeric keypad for easy numeric data input. Pressing **Num Lk** turns on/off the numeric keypad. It also features function keys to allow you to change operational features instantly.



Figure 3-Keyboard

Function Keys & Visual Indicators

The function keys (**F1** - **F12** etc.) will act as hot keys when pressed while the **Fn** key is held down. In addition to the basic function key combinations, some visual indicators are available when the Control Center driver is installed.












Keys	Function/Visual Indicators	Keys	Function/Visual Indicators
Fn + 	Sleep Toggle	Fn + 	Wifi Toggle
Fn + 	Display Brightness Decrease/Increase	Fn + 	Mute Toggle
Fn + 	Volume Decrease/Increase	Fn + 	Change Display Configuration (see page 13)
Fn + 	Touchpad Toggle	Fn + 	Prt Scr Toggle
Fn + 	Scroll Lock Toggle	Fn + 	Pause application
Fn + 	Number Lock Toggle		


Table 2 - Function Keys & Visual Indicators

System Map: Left & Right Views

Figure 4

Left & Right Views

 1. DC-In jack
2. Type-C Port
3. HDMI Port
4. USB 3.0 Port
5. 2-In-1 Audio Jack (Headphone /Microphone)
6. USB 3.0 Port
7. USB 3.0 Port
8. MicroSD Card Reader
9. Security Lock Slot

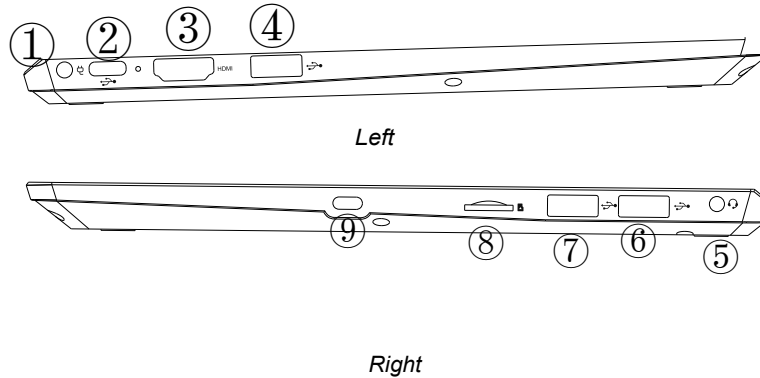

Overheating

To prevent your computer from overheating make sure nothing blocks any vent while the computer is in use.



 
Combination Audio Jacks (2-In-1 Audio Jacks)

Note that the combination audio jacks can support headphones or headsets (i.e. a combination microphone/headphone).

1. When a device is plugged in to the combination audio jack a dialog ("Which device did you plug in?") box will pop-up.
2. Make sure you select the correct device from the drop-down menu corresponding to the device plugged-in (e.g. choose "Headset" if you have plugged-in a headset and do not choose "Headphone" in this case), and then click **OK** to save the setting.



System Map: inside & Bottom Views

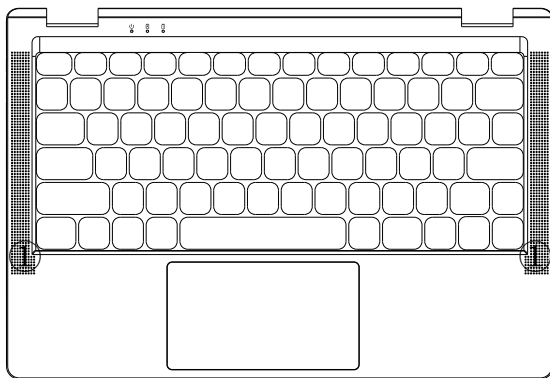

Inside Views

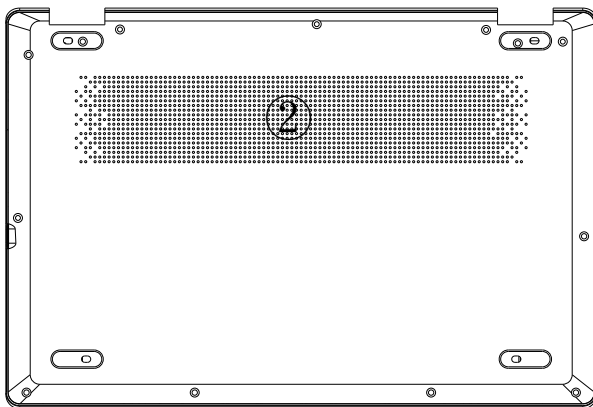 


Figure 5
Bottom Views

1. Speakers
2. Vent







Bottom Cover Removal Warning

Do not remove any cover(s) and/or screw(s) for the purposes of device upgrade as this may violate the terms of your warranty.


If you need to replace/remove the SSD/RAM etc., for any reason, please contact your distributor/supplier for further information.

Windows 11 Start Menu, Context Menu, Taskbar, Control Panel and Settings

Most of the apps, control panels, utilities and programs within *Windows 11* can be accessed from the Start Menu by clicking the icon  in the taskbar in the lower center of the screen (or by pressing the **Windows Logo Key**  on the keyboard).

Right-click the Start Menu icon  (or use the **Windows Logo Key**  + X key combination) to bring up an advanced Context Menu of useful features such as Apps and Features, Power Options, Task Manager, Search, File Explorer, Device Manager, Computer Management and Network Connections etc.


The notification area of the taskbar is in the bottom right of the screen. Some of the control panels and applications referred to throughout the course of this manual can be accessed from here.

Throughout this manual you will see an instruction to open the Control Panel. To access the Control Panel, use the **Windows Logo Key**  + **R** key combination and type “**Control Panel**”. You can pin the **Control Panel** tile to **Start** or **taskbar**.

The **Settings** item in the Start Menu (and also as an App) gives you quick access to a number of system settings control panels allowing you to adjust settings for System, Bluetooth & devices, Network & internet, Personalization, Apps, Accounts, Time & language, Gaming, Accessibility, Privacy & security and Windows Update.



 Figure 6
Start Menu,
Context Menu,
Taskbar, Con-
trol Panel and
Settings

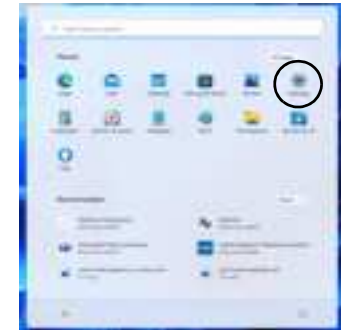

Video Features

The system features an Intel's Integrated GPU (for power-saving) . You can switch display devices, and configure display options as long as the video drivers are installed.


Microsoft Hybrid Graphics

Microsoft Hybrid Graphics is a seamless technology designed to get best performance from the graphics system while allowing longer battery life, without having to manually change settings. The computer's operating system (and some applications) will **automatically switch** between the integrated GPU and the discrete GPU when required by the applications in use.

To access the Display control panel in Windows:

1. Right-click the desktop and select **Display settings** from the menu.
2. Choose the required display settings from the menus.

To access the Intel® Graphics Command Center:

1. Access the **Intel® Graphics Command Center** from the Start menu in *Windows*  .

Display Devices

Note that you can use external displays connected to the HDMI-Out port. See your display device manual to see which formats are supported.

Configuring the Displays in Windows

All external and internal displays (up to 3 active displays) can be configured from *Windows* by using the **Display** or **System** (in **Settings**) control panel or the **Project** menu.

To configure the displays using the Project menu:


1. Attach your external display(s) to the appropriate port, and turn it(them) on.
2. Press the  + **P** (or **Fn + F7**) key combination.
3. Click on any one of the options from the menu to select **PC screen only**, **Duplicate**, **Extend** or **Second screen only**.
4. You can also click **Connect to a wireless display** at the bottom of the **Project** screen and follow the steps to connect to any wireless enabled display.



Figure 7
Project

To configure the displays using the Display control panel:

1. Attach your external display(s) to the appropriate port, and turn it(them) on.
2. Right-click the desktop and select **Display settings** from the menu.
3. Click the **Detect** button.
4. The computer will then detect any attached displays.
5. You can configure up to 3 displays from the **Multiple displays** menu.

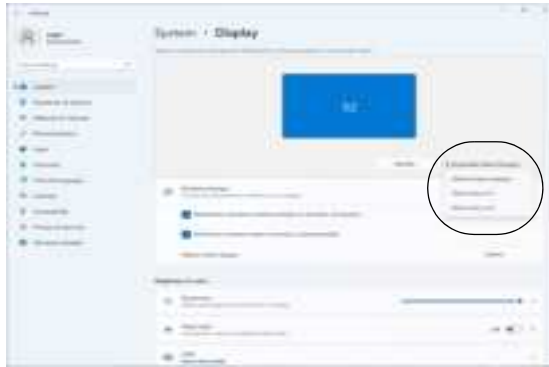 


Figure 8 - Display (Multiple displays)

Audio Features

You can configure the audio options on your computer from the **Sound** control panel in *Windows*. Access the **Sound** control panel via the **Settings (System > Sound)** item in the Start menu.


The volume may be adjusted by means of the **Fn + F5/F6** key combination. The sound volume level can also be set using the volume control within *Windows*. Click the icon  in the taskbar to check the setting.



Figure 9- Realtek Audio Console



3 Connected Displays

Note that when 3 displays are connected, only 2 displays may be configured in **Duplicate** mode.

Power & battery

The **Power & battery** control panel allows you to quickly adjust power options for **Screen and sleep**, **Power mode**, **Battery saver** and **Battery usage** etc. Access the **Power & battery** control panel via the **Settings (System > Power & battery)** item in the Start menu.

The **Power mode** can be set to **Balanced** (default) which balances performance and battery life, **Best power efficiency** for better battery life with reduced performance, and **Best Performance** for improved performance but with greater battery consumption. You can also customize the settings for how long your computer will remain inactive before it turns off the screen or goes to sleep. Expand the “**Screen and sleep**” option, and select your preferred durations from each drop-down menu.





Figure 10 - Power & battery

Wireless LAN Module (Option)

Make sure the Wireless LAN module is turned on (and not in **Airplane Mode**) before configuration begins.

WLAN Configuration in Windows

1. Click the icon  in the notification area of the taskbar.
2. Click the icon .
3. A list of available access points will appear.
4. Double-click an access point to connect to it (or click it and click **Connect**).
5. Enter a network security key (password) if required, and click **Next**.
6. You can choose to find other devices or not.
7. When you are connected to the network access point it will display **Connected**.
8. Select any connected network and click **Disconnect** to disconnect from a connected access point.
9. You can click the **Airplane Mode** button to turn the mode On or Off.
10. Alternatively you can click the **Wi-Fi** button to turn just the Wi-Fi On or Off.



Connect Automatically

It is recommended that you check the box to Connect automatically. This will cause the system to check for the access point upon startup, and resuming from a power-saving state, and will remove any necessity to keep connecting manually.

Bluetooth Module (Option)

Make sure the Bluetooth module is turned on (and not in **Airplane Mode**) before configuration begins.

Bluetooth Configuration in Windows

1. Click the **Settings** item in the Start Menu.
2. Click **Bluetooth & devices**.
3. Click **Add device > Bluetooth** and a list of discovered devices will appear.
4. Double-click the device you want to pair with the computer and click **Connect**.
5. Select a device and click **Remove Device > Yes** to disconnect from any device.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

FCC/IC RF Radiation Exposure and SAR Statements

The Notebook Aspire 3 A311-45 has been tested for body-worn Specific Absorption Rate(SAR) compliance. The FCC/IC has established detailed SAR requirements and has established that these requirements. RF Exposure Information The radio module has been evaluated under FCC Bulletin C95.1 and IEEE 1528 and found to be compliant

to RF Exposure from radio frequency devices. This model meets the applicable government requirements for exposure to radio frequency waves. The highest reported SAR level for usage near the body (0mm) is 0.618 W/kg, Body Simultaneous transmission is 0.949W/kg.