

Instructions for use

1. Surface has not been cleaned properly, resulting in the bell not sticking properly.

There are two ways to attach the door pusher to the wall.

2. check the battery is properly pressed against the battery connectors.

press the battery cover firmly against the battery

3. Below is how to pair the door pusher and the bell

insert the batteries

press the melody selection button for 3 seconds, you will hear a number of beeps

press the door pusher within 30 seconds.

the bell plays a melody over to confirm