

**REPAIR
PARTS
LIST**

**587.14012408A
587.14013409A
587.14014408A
587.14019408A**

**For Parts or Service:
Call
1-800-4-MY-HOME®
(1-800-469-4663)**

**Or Visit
www.sears.com**



24-INCH BUILT-IN DISHWASHER

In all orders or correspondence, avoid delays and misunderstandings by always giving the complete model number shown on the right hand side of the front tub flange, directly behind the door of the dishwasher.


All repair parts listed are available for immediate purchase or special order when you visit your nearest Sears Parts & Repair Center, or the Service Department at most Sears stores. To order parts by phone, call the toll-free number listed to the left or visit sears.com.

When requesting service or ordering parts, always provide the following information:

- | | |
|----------------|--------------------|
| • Product Type | • Part Number |
| • Model Number | • Part Description |

CONTROL PANEL

CAUTION: Use the Kenmore part number to order part, not the illustration number.

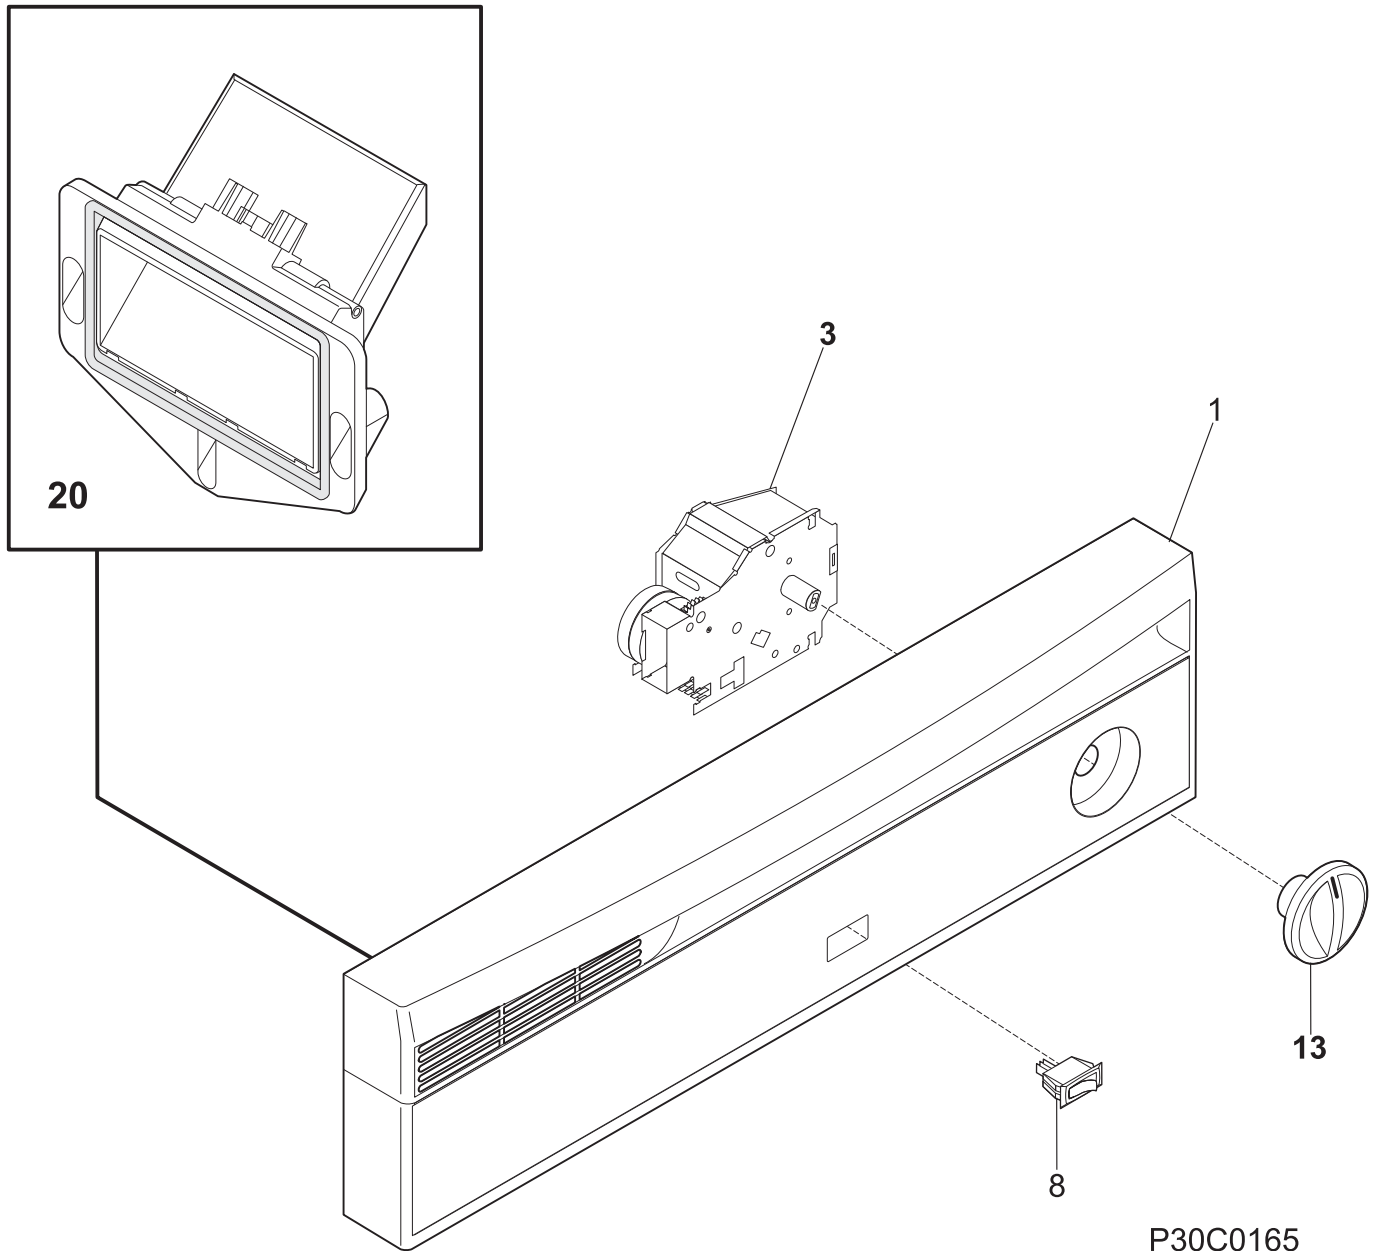

CONTROL PANEL


CAUTION: Use the Kenmore part number to order part, not the illustration number.

Model Index: **A** 587.1401 (587.14012408A)
 B 587.1401 (587.14013409A)
 C 587.1401 (587.14014408A)
 D 587.1401 (587.14019408A)

POS. NO	PART NO.		DESCRIPTION
1	154713211	A - - -	Panel, control, white, w/gaphics
1	154713213	- B - D	Panel, control, black, w/gaphics
1	154713214	- - C -	Panel, control, bisque, w/gaphics
3 #	154858101	A B C D	Timer
3*	154095701	A B C D	Screw, thread rolling, (2), timer
3*	154131204	A B C D	Shield, timer
8 #	154240401	A - - -	Switch, rocker/selector, white
8 #	154240403	- B - D	Switch, rocker/selector, black
8 #	154240404	- - C -	Switch, rocker/selector, bisque
13	154338301	A - - -	Knob, timer, white
13	154338303	- B - D	Knob, timer, black
13	154338304	- - C -	Knob, timer, bisque
20	154433001	A B C D	Vent assy, static dry
20*	154793401	A B C D	Screw, dry duct, (3)
* #	154866301	A B C D	Harness, wiring, main
*	5995619110	A B C D	Parts List
*	154591401	A B C D	Owners Manual, eng/spn
*	154591402	A B C D	Owners Manual, French
*	154799801	A B C D	Service Data Sheet
*	154524101	A B C D	Instructions, installation
*	154849231	A B C D	Energy Guide
*	154783101	A B C D	Screw, PLT, 8-10

DOOR

CAUTION: Use the Kenmore part number to order part, not the illustration number.

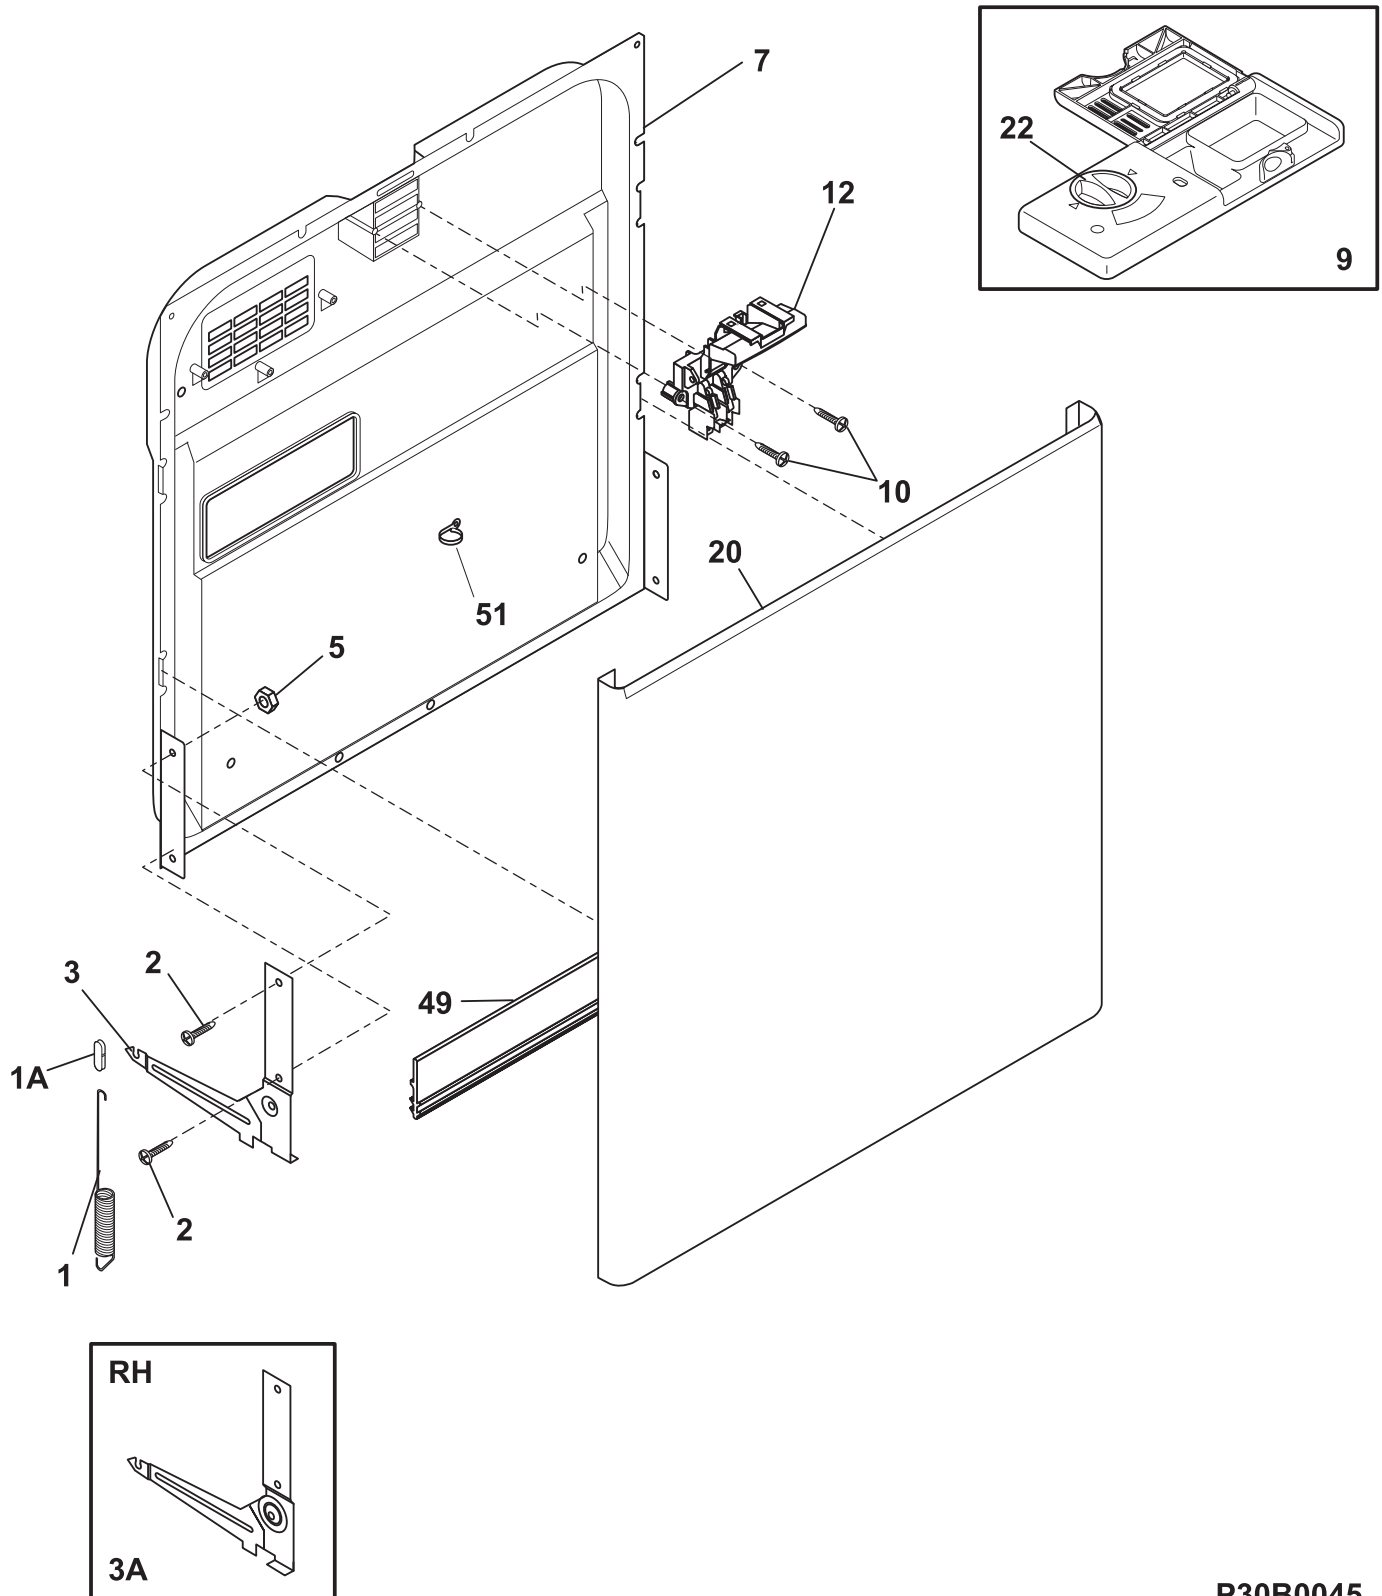**P30B0045**

DOOR


CAUTION: Use the Kenmore part number to order part, not the illustration number.

Model Index: **A** 587.1401 (587.14012408A)
 B 587.1401 (587.14013409A)
 C 587.1401 (587.14014408A)
 D 587.1401 (587.14019408A)

POS. NO	PART NO.					DESCRIPTION
1	154430501	A	B	C	D	Spring, door, (2)
1A	154325201	A	B	C	D	Linkage, door spring, (2)
2	154093301	A	B	C	D	Screw, arm assy, (4)
3	154691201	A	B	C	D	Arm Assy, LH
3A	154691101	A	B	C	D	Arm Assy, RH
*	154647101	A	B	C	D	Hinge Pin, arm assy
*	154686401	A	B	C	D	Bearing, hinge pin
5	154079601	A	B	C	D	Nut, arm assy, and handle mtg.
7	154494601	A	B	C	D	Liner, door assy.
9	154574401	A	B	C	D	Dispenser, det/rinse aid, w/o reed
9*	154294701	A	B	C	D	Screw, #7 plas .375, (6), disp. assy.
9*	154798401	A	B	C	D	Shield, dispenser
10	154103702	A	B	C	D	Screw, latch mtg, (2)
12 #	154537301	A	-	-	-	Latch assy, white
12 #	154537303	-	B	-	D	Latch assy, black
12 #	154537304	-	-	C	-	Latch assy, bisque
20	154828801	A	-	-	-	Door, white, w/moisture barr
20	154828805	-	B	-	-	Door, stainless, w/moisture barr
20	154828804	-	-	C	-	Door, bisque, w/moisture barr
20	154828803	-	-	-	D	Door, black, w/moisture barr
20*	154754701	A	B	C	D	Screw, truss hd, 8-18 type AB
22	154388801	A	B	C	D	Cap, Rinse aid
49	154576501	A	B	C	D	Gasket, door, bottom
51	154320301	A	B	C	D	Clamp, drip loop, wire

TUB

CAUTION: Use the Kenmore part number to order part, not the illustration number.

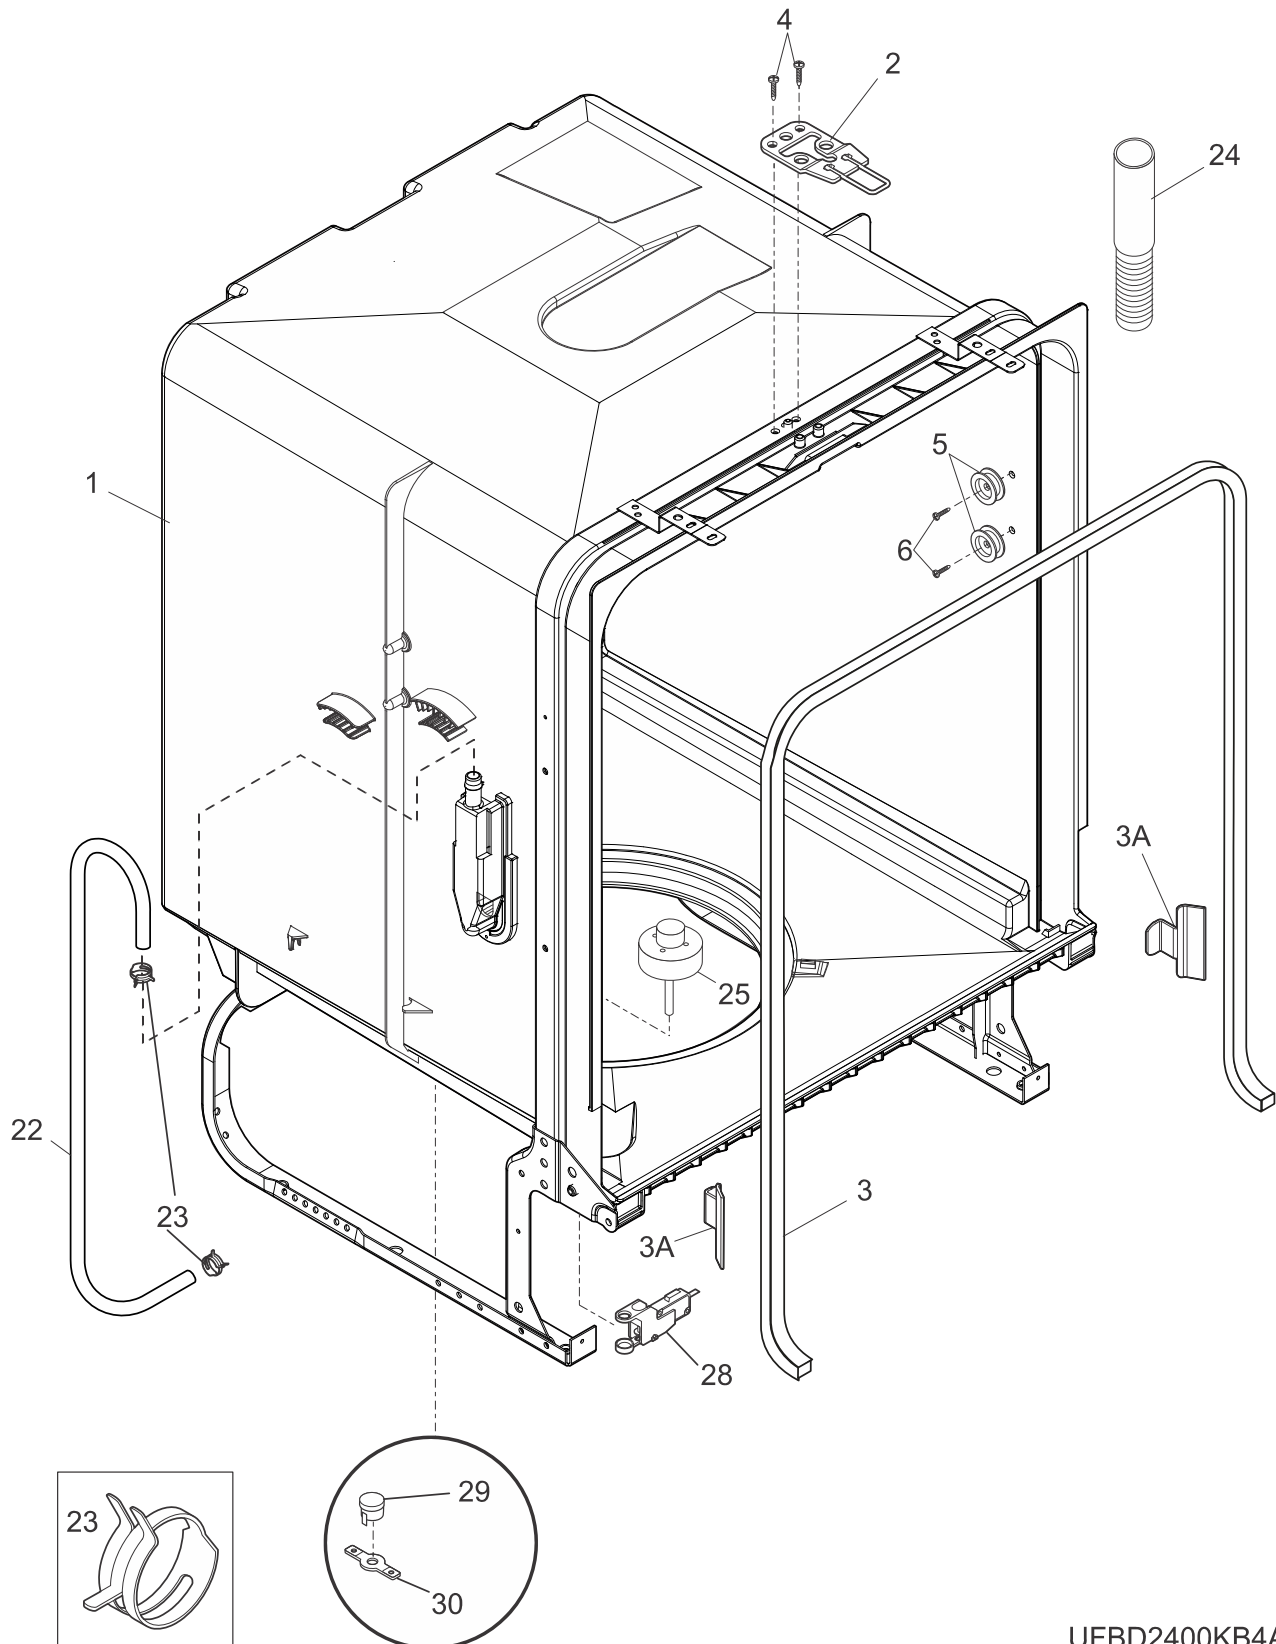

UFBD2400KB4A

TUB


CAUTION: Use the Kenmore part number to order part, not the illustration number.

Model Index: **A** 587.1401 (587.14012408A)
B 587.1401 (587.14013409A)
C 587.1401 (587.14014408A)
D 587.1401 (587.14019408A)

POS. NO	PART NO.					DESCRIPTION
1 #	5304488410	A	B	C	D	Tub assy, w/frame parts, white, heater & tubing, tower
2	154662601	A	B	C	D	Strike, door
3	154845301	A	B	C	D	Gasket, tub
3A	154685101	A	B	C	D	Shield, tub splash, corner, (2)
4	154825401	A	B	C	D	Screw, hex hd, 8-18 x .4, w/washer
5	154333902	A	B	C	D	Roller, tub
6	5303943103	A	B	C	D	Screw, w/washer, (8)
22	154446002	A	B	C	D	Tubing, water inlet
23	5303318539	A	B	C	D	Clamp, tubing, (2)
24 #	154753201	A	B	C	D	Hose, drain
*	154380601	A	B	C	D	Clamp, hose, 1.5" open, worm gear, (5)
25 #	154767801	A	B	C	D	Float
28 #	154773201	A	B	C	D	Switch Assy, float
29 #	154642901	A	B	C	D	Thermostat, hi limit
30	154241101	A	B	C	D	Retainer, thermostat
30*	154297701	A	B	C	D	Screw, retainer-thermo
*	154641601	A	B	C	D	Insulation, blanket
*	154041001	A	B	C	D	Screw, plask #1, 10-10 x 9/16
*	5300807270	A	B	C	D	Screw, (2), countertop mtg.

MOTOR & PUMP

CAUTION: Use the Kenmore part number to order part, not the illustration number.

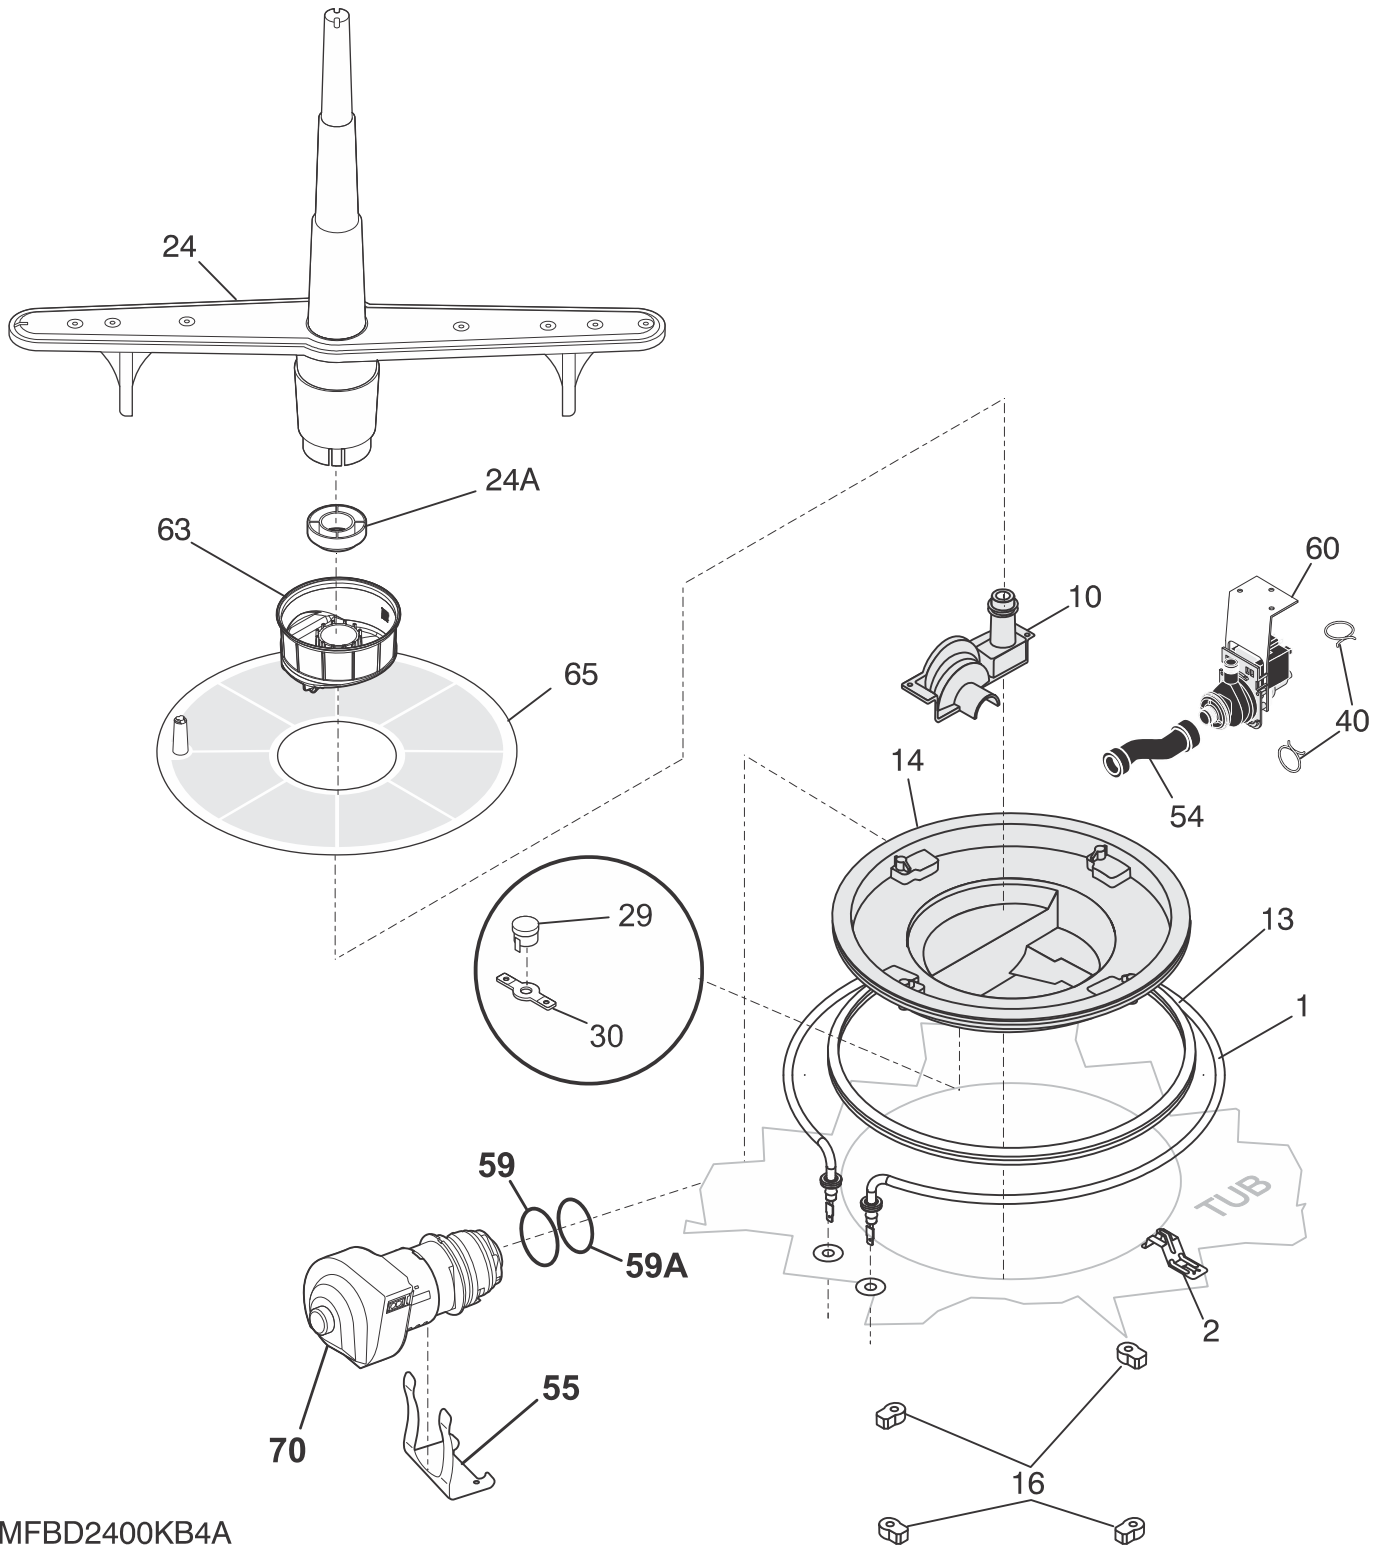

MFBD2400KB4A

MOTOR & PUMP


CAUTION: Use the Kenmore part number to order part, not the illustration number.

Model Index: **A** 587.1401 (587.14012408A)
B 587.1401 (587.14013409A)
C 587.1401 (587.14014408A)
D 587.1401 (587.14019408A)

POS. NO	PART NO.					DESCRIPTION
1 #	154825001	A	B	C	D	Heater, round
1*	154106202	A	B	C	D	Nut, heater, (2)
1*	154289801	A	B	C	D	Shield, heater terminal
2	154465101	A	B	C	D	Bracket, heater, (2)
10	154335301	A	B	C	D	Cover, volute
*	154783101	A	B	C	D	Screw, PLT, 8-10
13	154246801	A	B	C	D	Gasket, sump
14	154462003	A	B	C	D	Housing, sump
16	154246502	A	B	C	D	Retainer, sump
16*	154754901	A	B	C	D	Screw, sump mtg, 8-16, (4)
24	154567701	A	B	C	D	Spray arm, lower, w/heat shield
24A	154335201	A	B	C	D	Nut, spray arm
29 #	154227810	A	B	C	D	Thermostat
30	154241101	A	B	C	D	Retainer, thermostat
*	154297701	A	B	C	D	Screw, retainer-thermo
40	154348401	A	B	C	D	Clamp, hose, red, push spring, (3)
40	154348502	A	B	C	D	Clamp, red, hose
40*	154380601	A	B	C	D	Clamp, hose, 1.5" open, worm gear, (5)
54	154234401	A	B	C	D	Hose, connector
55	154595901	A	B	C	D	Bracket, motor
59	154246901	A	B	C	D	O-ring, rear
59A	154247001	A	B	C	D	O-ring, front
60 #	154640201	A	B	C	D	Drain Pump Assy
60*	154426201	A	B	C	D	Bracket, motor, drain
60*	154581501	A	B	C	D	Screw, drain motor, (3)
63	154775401	A	B	C	D	Base, soil director, w/filter
65	154252401	A	B	C	D	Filter, polypro
70 #	154844001	A	B	C	D	Motor & Pump Assy, w/o-rings
*	154779601	A	B	C	D	Screw, PH, 8-10, (2)

FRAME

CAUTION: Use the Kenmore part number to order part, not the illustration number.

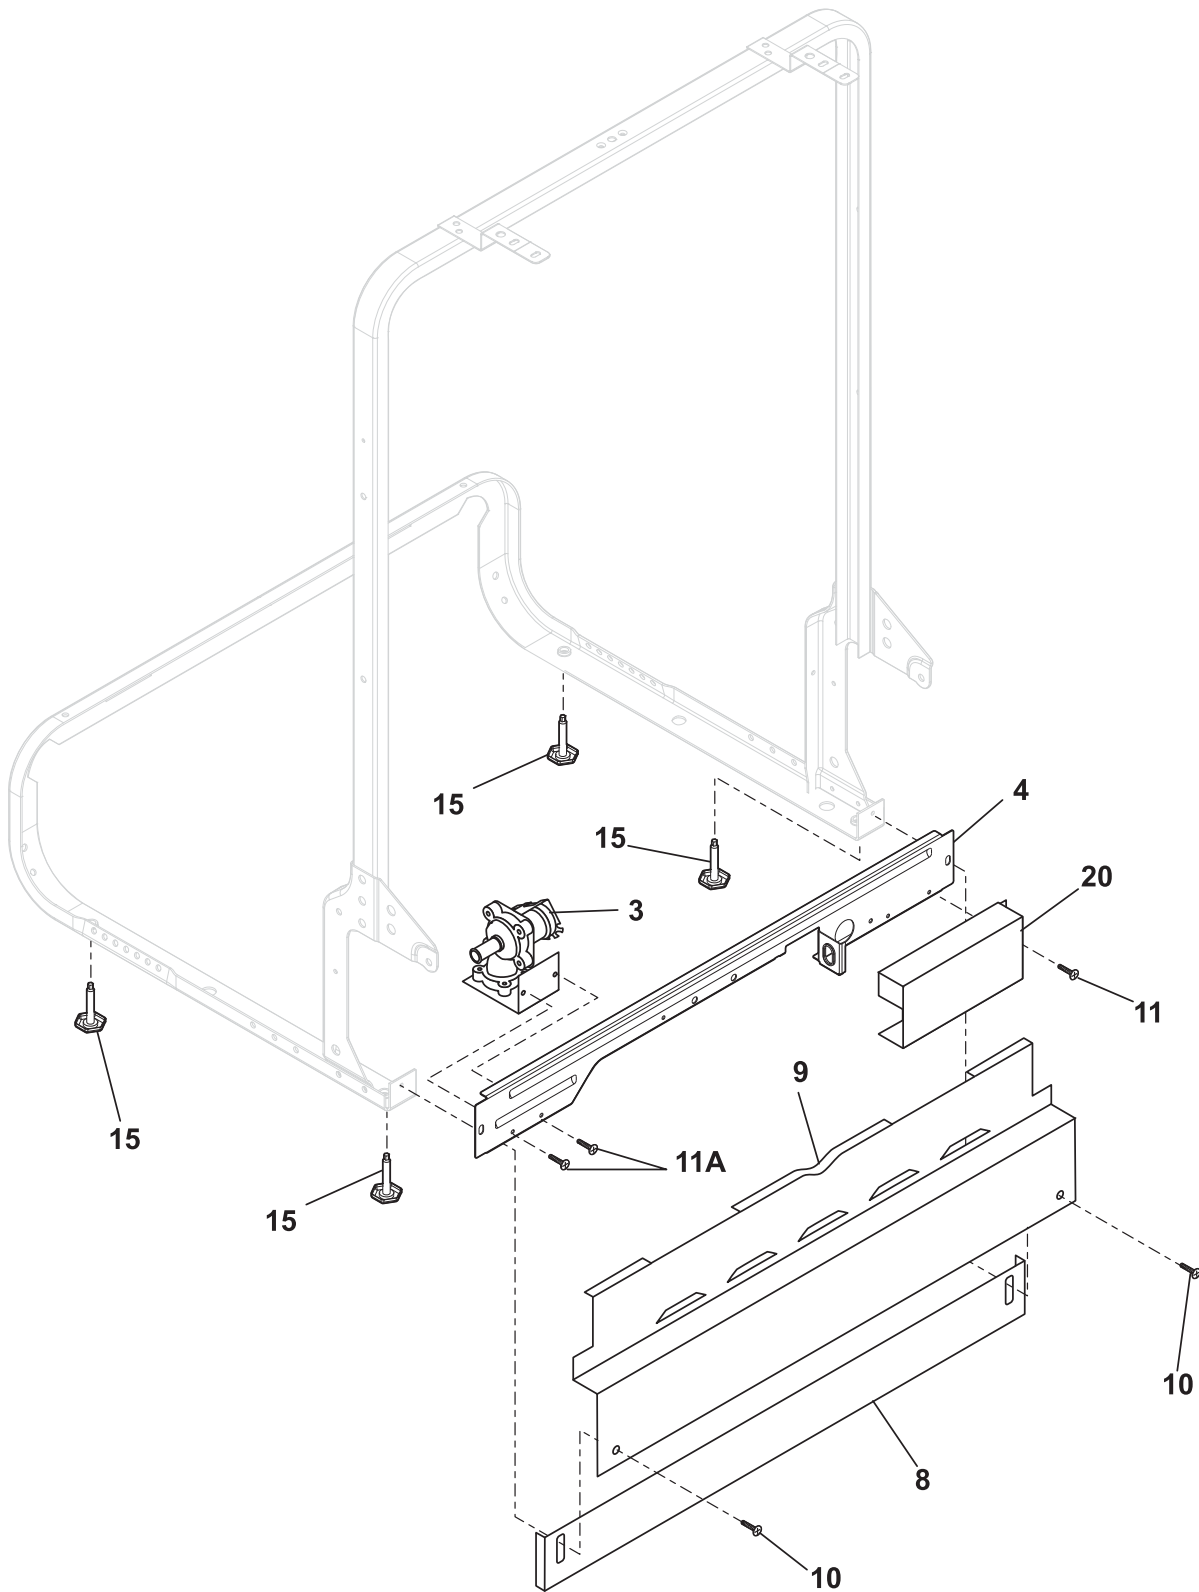**P30F0022**

FRAME


CAUTION: Use the Kenmore part number to order part, not the illustration number.

Model Index: **A** 587.1401 (587.14012408A)
B 587.1401 (587.14013409A)
C 587.1401 (587.14014408A)
D 587.1401 (587.14019408A)

POS. NO	PART NO.					DESCRIPTION
3 #	154637401	A	B	C	D	Valve, water
4	154823701	A	B	C	D	Brace, front frame
8	154745501	A	-	-	-	Toeplate, adjustable, white
8	154745503	-	B	-	D	Toeplate, adjustable, black
8	154745504	-	-	C	-	Toeplate, adjustable, bisque
9	154871201	A	-	-	-	Kickplate Assy, white, w/label
9	154871203	-	B	-	D	Kickplate Assy, black, w/label
9	154871205	-	-	C	-	Kickplate Assy, bisque, w/label
10	154371301	A	-	-	-	Screw, Phillips head, white
10	154754801	-	B	-	D	Screw, toeplate mtg, 8-18 AB hex hd, black, (2)
10	154371303	-	-	C	-	Screw, Phillips head, bisque
11	154200701	A	B	C	D	Screw, #10-32 x 3/8
11A	154825401	A	B	C	D	Screw, hex hd, 8-18 x .4, w/washer
15	154571101	A	B	C	D	Leg, leveling, (4)
20	154758501	A	B	C	D	Cover, junction box, w/label
*	154041001	A	B	C	D	Screw, plask #1, 10-10 x 9/16

RACKS

CAUTION: Use the Kenmore part number to order part, not the illustration number.

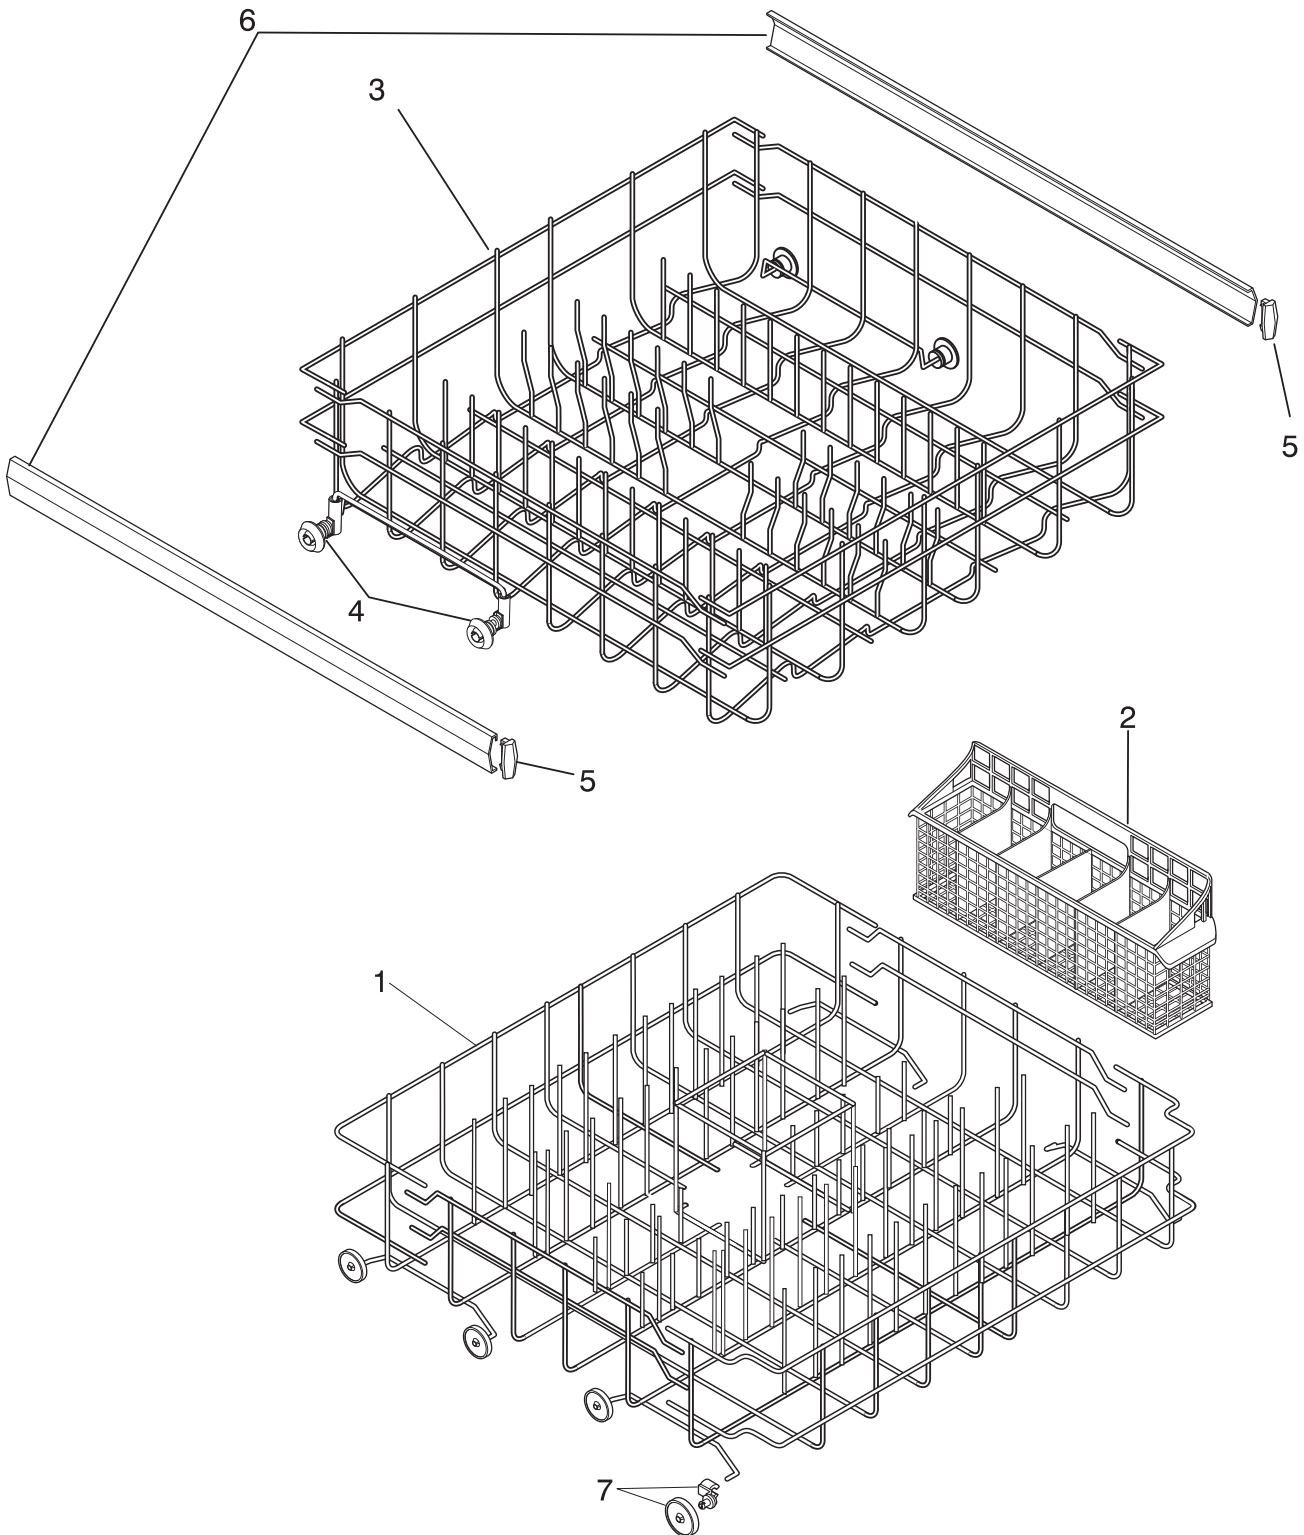

P30R0045


RACKS

CAUTION: Use the Kenmore part number to order part, not the illustration number.

Model Index: **A** 587.1401 (587.14012408A)
 B 587.1401 (587.14013409A)
 C 587.1401 (587.14014408A)
 D 587.1401 (587.14019408A)

POS. NO	PART NO.		DESCRIPTION
1	154331604	A B C D	Rack assy, lower
2	5300808994	A B C D	Basket, silverware
3	154331502	A B C D	Rack assy, upper
4	154522901	A B C D	Wheel & bushing assy, upper rack, (8)
5	5300809927	A B C D	Cap, slide, (4)
6	154597801	A B C D	Slide, rack, upper, (2)
7	154174502	A B C D	Wheel & bracket assy, lower rack

WIRING DIAGRAM

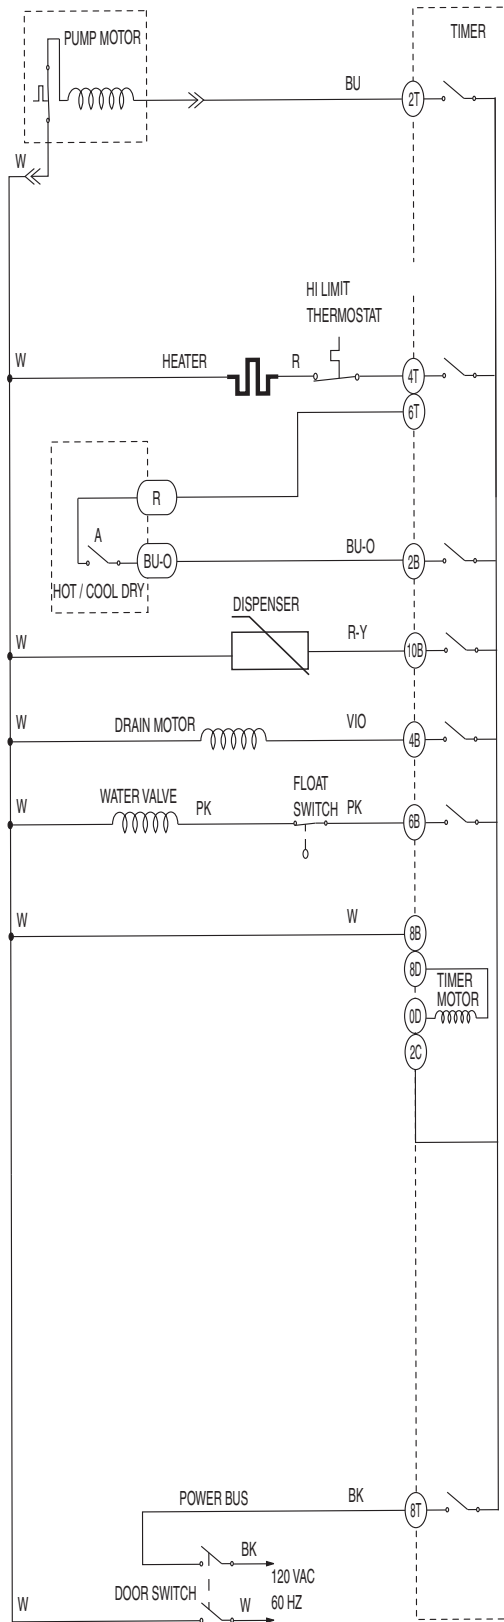

Get it fixed, at your home or ours!

Your Home

For troubleshooting, product manuals and home solutions advice:



www.managemyhome.com

For repair – **in your home** – of **all** major brand appliances, lawn and garden equipment, or heating and cooling systems, **no matter who made it, no matter who sold it!**

For the replacement parts, accessories and owner's manuals that you need to do-it-yourself.

For Sears professional installation of home appliances and items like garage door openers and water heaters.

1-800-4-MY-HOME® (1-800-469-4663)

Call anytime, day or night (U.S.A. and Canada)

www.sears.com www.sears.ca

Our Home

For repair of carry-in items like vacuums, lawn equipment, and electronics, call anytime for the location of your nearest

Sears Parts & Repair Service Center

1-800-488-1222 (U.S.A.)

www.sears.com

1-800-469-4663 (Canada)

www.sears.ca

To purchase a protection agreement on a product serviced by Sears:

1-800-827-6655 (U.S.A.)

1-800-361-6665 (Canada)

Para pedir servicio de reparación a domicilio, y para ordenar piezas:

1-888-SU-HOGAR®

(1-888-784-6427)

www.sears.com

Au Canada pour service en français:

1-800-LE-FOYER^{MC}

(1-800-533-6937)

www.sears.ca

The Sears logo is written in a large, bold, stylized serif font.

® Registered Trademark / TM Trademark of KCD IP, LLC in the United States, or Sears Brands, LLC in other countries
® Marca Registrada / TM Marca de Fábrica de KCD IP, LLC en Estados Unidos, o Sears Brands, LLC in otros países
^{MC} Marque de commerce / ^{MD} Marque déposée de Sears Brands, LLC