Zigbee门窗磁传感器英文说明书

I. Introduction

The door/window sensor detects the opening or closing of doors /Windows, combined with other equipment to achieve intelligent application scenes.

Make sure the door magnetic widget is on the side of the alignment sign

II. Specification

Name	Zigbee Door/Window Sensor	
Battery Type	CR2032	
Working Temperature	-10°C~55°C	
Working Humidity 109	Norking Humidity 10%-90%RH (No Condensation)	
Wireless Connection	Zigbee 3.0	

III. Connect Preparation

Connect your phone to WIFI —— Smart Phone —— WIFI Wireless Router —— Smart Host

• Ensure that the product is within effective coverage of the smart host(Gateway) ZigBee network to ensure that the product is effectively connected to the smart host(Gateway) ZigBee network.

LAN Interface

Make sure the gateway is added.

LAN Interface

IV. Download APP

Search the app store for related APP Or scan the two-dimension code on the outer packing, download and install it. If you download APP for the first time, please click the "Registration" button to register an account; If you already have an account, click the login button.



V. Network Settings

- Power the device on and ensure that the mobile phone has been connected to the network and has successfully added the smart gateway;
- Open the TUYA app, on the "smart gateway" page, click
 "Add Device" button and select "Door/Window Sensor"
 on the "Select Device Type" page.
- Using the reset needle, press and hold reset button for more than 5s until the network indicator flashes. Add the device according to the APP instructions.
- 4. Once added, you can find the device in "My Home" list.

VI. Packing List

- Door/Window Sensor *1
- Back Gum Paste *1
- Battery *1
- Reset Needle *1
- Product user manual *1

Zigbee

Door/Window Sensor

User Manual

Please read the user manual carefully before using the product.

产品介绍

门/窗传感器检测门/窗的开启或关闭,结合 其他设备实现智能应用场景。确保门磁小部 件位于对齐标志的一侧

产品规格

	产品名称	Zigbee门窗磁传感器
电池类型		CR2032
	工作温度	-10°C~55°C
工作湿度 10%~90% RH (无凝结)%~90% RH (无凝结)
	无线连接	Ziabee 3.0

产品介绍

连接手机到WIFI——智能手机——Zigbee 智能主机(网关)——智能子设备

- 确保产品在智能主机(网关)ZigBee网络的有效覆盖范围内,以确保产品有效连接 到智能主机(网关)ZigBee网络。
- 确保智能主机(网关)已经连接。

下载APP

在应用商店中搜索相关的APP或扫描外包装上的QR码,下载并安装。

如果您是首次下载APP , 请点击"注册"按 钮注册帐户 ;

如果您已经有一个帐户,请单击"登录"按钮



入网设置

- 1. 打开设备电源,确保手机已连接到网络 并成功添加智能网关;
- 2. 打开TUYA应用程序,在"智能网关" 页面上,单击"添加设备"按钮,然后在"选择设备类型"页面选择 "门磁(Zigbee)"。
- 3. 使用重置针,通过重置孔顶住按钮5秒钟以上,直到网络指示灯闪烁。根据APP说明添加设备。
- 4. 添加后,您可以在"我的家"列表中找 到该设备。

包装清单

- 门/窗磁传感器 *1
- 3M背贴 *1
- 电池 *1
- 重置针 *1
- 产品手册 *1

在使用产品前请仔细阅读产品手册。

Zigbee

门/窗磁传感器 使用手册