

KEURIG®

Brew the love.

Please read this manual carefully before operating your unit and retain for future reference.



804106736

IMPORTANT SAFEGUARDS



When using electrical appliances, basic safety precautions should always be followed, including the following:

1. **READ ALL INSTRUCTIONS**
2. For household use only.
3. Do not use distilled water.
4. Scalding may occur if the handle is opened during the brewing process.
5. Do not touch hot surfaces. Use handles or knobs.
6. To protect against fire, electric shock, and injury to persons do not immerse appliance, cord, or plugs in water or other liquid.
7. Close supervision is necessary when any appliance is used by or near children 12 years or younger .
8. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
9. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner . The appliance should be returned to the nearest authorized service facility for examination, repair , or adjustment if applicable or contact a service center.
10. The use of accessory attachments not authorized by the appliance manufacturer may result in fire, electric shock, or injury to persons.
11. Do not use outdoors.
12. Do not let cord hang over edge of table or counter, or touch hot surfaces.
13. Do not place on or near a hot gas or electric burner, or in a heated oven.
14. Always attach plug to appliance first (if not permanently attached), then plug cord into the wall outlet. To disconnect, turn any control to "off" then remove plug from wall outlet.
15. Do not use appliance for other than intended use.
16. Use brewer in upright position only. Allow brewer to cool (90 min) prior to turning it in any position other than upright.
17. Do not immerse brewer in water.
18. **SAVE THESE INSTRUCTIONS**

1. **WARNING:** Keep all plastic bags away from children.
2. **CAUTION:** Keurig® recommends using only Keurig® My K-Cup® Reusable Coffee Filter and Keurig® approved K-Cup® pods in this appliance. The use of non-Keurig® pods or accessories may cause brewer malfunction or injury.
3. **CAUTION:** There are two sharp needles that puncture the K-Cup® pod, one above the K-Cup® pod holder and the other in the bottom of the K-Cup® pod holder. To avoid risk of injury, be aware of the needle locations.
4. **CAUTION:** There is extremely hot water under pressure in the K-Cup® pod holder during the brew process. To avoid risk of injury do not lift the handle or otherwise open the handle during the brew process.
5. **POWER CORD INSTRUCTIONS:**
 - a. A short power-supply cord is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
 - b. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
 - c. If a long detachable power-supply cord or extension cord is used:

- i. The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.

- ii. If the appliance is of the grounded type, the extension cord should be a Grounding type 3-wire cord.

- iii. The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.

6. **CAUTION: HOT COCOA/OTHER NON-COFFEE PODS:** Immediately after using a hot cocoa/other non-coffee pod, run a hot water brew cycle without a pod to avoid the possibility of clogging the exit needle. **DO NOT** assume the next user will do this.



WARNING

RISK OF FIRE OR ELECTRIC SHOCK DO NOT OPEN



**WARNING, TO REDUCE THE RISK OF
FIRE OR ELECTRIC SHOCK,
DO NOT REMOVE COVER (OR BACK)
NO USER SERVICEABLE PARTS INSIDE**

Before You Brew



1 Plug & Power

Remove packing tape from brewer. Pull plug and extend cord from cord storage located at the back of the brewer. Plug into a grounded outlet.

Press the power button. The power button will illuminate.



2 Fill & Place

Add 1 cup (8oz) of water into a mug. Lift the water reservoir lid and pour the water into the reservoir. Do not fill past the MAX or below the MIN fill lines. Lower the lid and place your mug on the drip tray.

NOTE: Do not use distilled water.

The images shown here are for illustrative purposes only and may be subject to change.





Brew
Indicator



Brew
Button

3 Lift & Lower

Lift and lower the handle. **Do not insert a K-Cup® pod.** The brew indicator light flash to indicate that the brewer is ready .

Note: The image shown here is for illustrative purposes only and may be subject to change. The actual number of accessories may vary depending on the model.

4 Cleansing Brew

Press the brew button. The brew indicator light will illuminate solid, then begin to pulse while the brewer is heating. After about 2 minutes, the brew indicator light will illuminate solid again and the water will begin to dispense. Pour the hot water into the sink.

The one-time setup process is now complete and you are ready to brew!

Brew Your First Cup



5 Fill & Place Mug

Add desired amount of water into a mug (6oz minimum, 12oz maximum). Lift the water reservoir lid and pour the water into the reservoir . Do not fill past the MAX or below the MIN fill lines. Lower the lid and place your mug on the drip tray .



6 Lift & Place Pod

Lift the handle. Place a K-Cup® pod in the K-Cup® pod holder . Lower the handle completely to close the lid. The brew indicator light will flash to indicate that the brewer is ready .

Do not remove the foil lid on the K-Cup® pod.

High Altitude Brewing: While holding the brewer handle up, push down slowly on the K-Cup® pod in the pod holder until the bottom of the K-Cup® pod is punctured by the exit needle.



7 Brew & Enjoy!

Press the brew button. The brew indicator light will illuminate solid, then begin to pulse while the brewer is heating. After about 2 minutes, the brew indicator light will illuminate solid again and the beverage will begin to dispense. Brewing is complete when the brew indicator light is no longer illuminated. When complete, lift the handle and dispose of the used K-Cup® pod.

CAUTION: While brewing, there is extremely hot water in the K-Cup® pod holder. To avoid injury, do not lift the handle during the brewing process.

Brewer Features

Auto Off Automatically turns your brewer off 90 seconds after the last brew for energy savings.

Cord Storage Makes transporting your brewer convenient and keeps countertops tidy .


Travel Mug Friendly Remove the drip tray to accomodate a travel mug.

Caring for your Brewer

Regular cleaning keeps your brewer running smoothly . Always be sure to turn off and unplug your brewer before cleaning. Beyond these recommended cleaning instructions, this brewer is not user-serviceable.

Water Reservoir

The water reservoir should be cleaned periodically. To access the reservoir, lift the lid and clean the inside of the reservoir with a damp, non-abrasive, lint-free cloth. Lower the lid when finished.

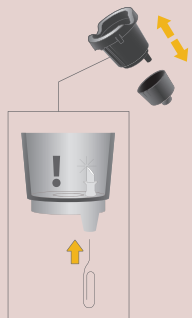

Exit Needle

Remove the pod holder assembly and detach the funnel. Locate the exit needle on the inside bottom of the K-Cup® pod holder. Insert a straightened paper clip into the exit needle to loosen any coffee grounds.

Entrance Needle

Lift the brewer handle and locate the entrance needle on the underside of the lid. To clean both holes in the needle, hold the brewer handle in the upward position and with your other hand, carefully insert a straightened paper clip into both holes. Gently move it around to loosen any coffee grounds. Lower the handle completely and run two water-only brew cycles. Do not insert a K-Cup® pod.

CAUTION: There are sharp needles that puncture the K-Cup® pod above the K-Cup® pod holder and in the bottom of the K-Cup® pod holder. To avoid risk of injury, do not put your fingers in the K-Cup® pod holder.

Coffeehouse taste in your own home.

PRINTED IN MEXICO
Elbrd: A.M SC: 11-14-2023
MODELK21BBK_K21BSGY_K21BEGR_K21BWST
K21BDRS_K21BOS_K21BPRD
OBPN:DC0000001253_REV C



8 0 4 1 0 6 7 3 6

