 


# DIGITAL PROJECTION ALARM CLOCK

# USER MANUAL

 
## DIGITAL PROJECTION ALARM CLOCK — H-AC54

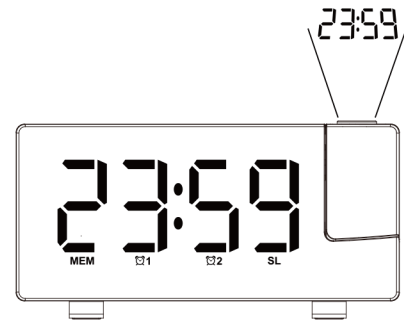

\*All safety and operation instructions should be read thoroughly before proceeding and please keep the handbook for future reference.

<b>1 FEATURES</b>	<b>03</b>	<b>4 RESTORE FACTORY DEFAULT</b>	<b>13</b>
<b>2 START UP</b>	<b>04</b>	<b>5 PRECAUTION</b>	<b>14</b>
<b>3 SETTINGS</b>	<b>05</b>		
● Time Setting (Turn off the radio)	05		
● Night Mode Setting	06		
● Alarm Setting	07		
● FM Radio	08		
FM Setting	08		
Sleep Timer	09		
● Use Projection	10		
● Brightness Control	11		
● Charging	12		



# 1 FEATURES

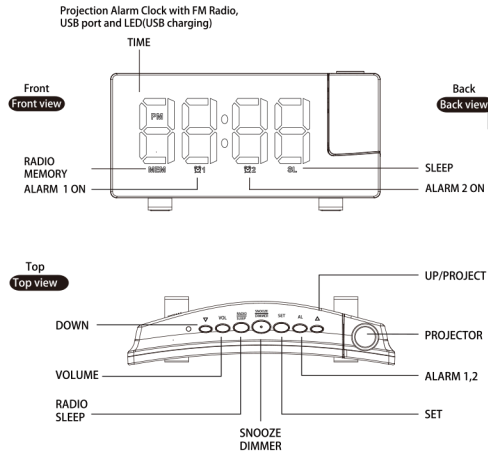

# 2 START UP

Please remove plastic insulator tab from button battery compartment in the back and connect the AC/DC adaptor to the power supply and the other end to the USB seat on the back of the clock, then the clock starts to work.

  **Note:** When the power is off, the LED screen won't show, the radio and alarm cannot work. The backup battery only retains the basic settings of time and alarm.

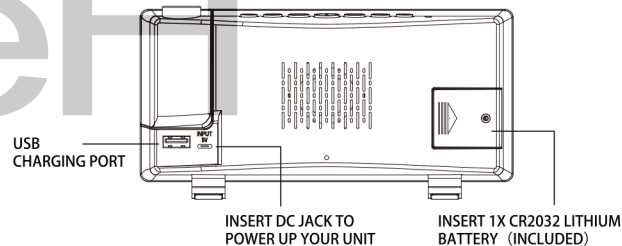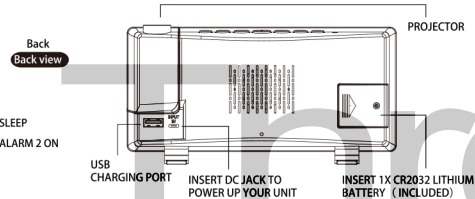


## 3 SETTINGS

### ● Time Setting (Turn off the radio)

1. Press and hold the “SET” button 3 seconds, the hour digits flash, press “▲” or “▼” to set hour. ( Long press “▲” or “▼” will accelerate setting at high speed.)
2. Press “SET” again, the minute digits flash, press “▲” or “▼” to set minute. ( Long press “▲” or “▼” will accelerate setting at high speed.)
3. Press “SET” again, the display screen shows “24H” and flashes, press “▲” or “▼” to select “12H” or “24H”
4. Press “SET” again, the display screen shows “09” and flashes, press “▲” or “▼” to select your snooze time from 5 to 60 minutes.
5. Press “SET” or without any operation within 20 seconds, it will exit the current setting mode.

**Note:** When 12- hour time format is selected, the “PM” LED will appear on the screen in the afternoon.

1

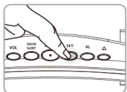

2



 
3



4





5



### ● Night Mode Setting

1. Night mode means that LED automatically enter into the low brightness display status at night.
2. In LED Time display mode, press “SET” once to turn on the night mode setting. Select “ON” or “OFF” by pressing “▲” or “▼” manually. The default period of 18:00 to 6:00 the next day, it will automatically enter into the lowest brightness displays status.
3. When night mode is “ON”, Press and hold “SET” button for more than 3 seconds to enter interval time setting mode. The setting sequence is: “start hour” – “start minute”- “end hour” – “end minute”. At start hour and minute setting status, the upper point in the center of the screen is long bright. At end hour and minute setting status, the lower point in the center of the screen is flashing (Same like time setting).

  **Note:** Auto Brightness Mode and Night Mode cannot be turned on simultaneously. If you need to make Night Mode setting, please make sure the dimming setting (Brightness Mode) is manual. You can choose any time for interval time setting.





## ● Alarm Setting

1. Press “AL” once, the “🕒1” and the hour digits will flash then press “▲” or “▼” to set hour duration. ( Long press “▲” or “▼” will accelerate setting at high speed.)
2. Then press “AL” to set minutes, press “▲” or “▼” to set minute duration.( Long press “▲” or “▼” will accelerate setting at high speed.)
3. Then press “AL” , LED displays “OFF” ( alarm off), press “▲” or “▼” to select alarm mode ( “rd”= wake-to-radio, “bu” = wake-to-buzzer, “OFF”=alarm off, when “rd” or “bu” is selected, the related alarm will turn on.)

**Note:** If you select the radio as the alarm tone. The volume of the alarm will start from L01 and rise to the volume you played last time gradually(Enhance one level every 10 seconds).

4. If you need second alarm clock, please repeat step 1-3 (Note: Second alarm clock reflects “🕒2” on the display screen)
5. Then press “AL” or without any operation within 20 seconds, it will exit alarm setting mode.



6. When alarm “ALARM 1” or “ALARM 2” is setting, there will be an “🕒1” or an “🕒2” LED on the bottom of the display.

7. When alarm 1 or 2 is sounding, the related “🕒1” or “🕒2” LED flashes, press “RADIO/SLEEP” or “AL” one time to stop the alarm and it will sound on the following day. The related icon won’t disappear. When alarm is sounding, press “SNOOZE/DIMMER” once, the alarm will be silent and come on again after the setting snooze duration (Default snooze duration is 9 minute, you can set it according to the fourth point of “Time Setting”).

**Note:**1.If your second alarm activates while the first alarm is sounding or it is in the snooze mode, the second alarm will override the first alarm ( The first alarm is reset to come on the next day).  
2.Turn on and turn off AL alarm: Press “▼” to select. (There is “🕒” symbol in display is ON condition and no “🕒” symbol is OFF condition, the sequence is “🕒1” on – “🕒2” on – “🕒1” off – “🕒2” off)

## ● FM Radio

### FM Setting

- 1.Need to unfasten the Antenna in the back and position it in different directions until the stabilization signal of radio is collected.
- 2.Press “RADIO/SLEEP” once to play radio, the display shows “ON” and then the radio frequency readings in Mhz (From 76.0 Mhz — 108 Mhz).
- 3.Press “SET” briefly, FM radio will scan and automatically save the frequency of 01,02,03.... .It will stay on first station once scan is completed.
- 4.Press “▲” or “▼” to choose stored station.
- 5.To adjust the volume, press “VOL” briefly, the display shows “L07” , press “▲” or “▼” to adjust volume from L00 (minimum) to L15 (maximum).

6. Press "SNOOZE/DIMMER" to turn off the radio.

7. It's unlimited memory, press "SET" again it will override the previous settings.

**Note:** 1 The station you played last time will be stored as an alarm tone.

2 Keep your radio away from interference source or other electronic devices, which may cause interference to the radio.

### Sleep Timer


1. Press "RADIO/SLEEP" twice to enter the sleep mode, then the sleep LED "SL" and sleep time "05" ( 5 minutes) appear on the display.

2. Then press the "RADIO/SLEEP" to adjust the sleep timer from 5, 15, 30, 45, 60, 75, 90 or OFF.

3. When the display screen changes back to show the time, press the "RADIO/SLEEP" twice to show the sleep time remaining.

4. The radio will play for the programmed sleep time and then shut off automatically.

1

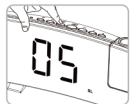

2



3




### Use Projection

 1. In the clock mode, press "▲" once in the AC mode to turn on the projection ( bright), then press again to adjust the brightness of projection. ( From bright- slightly bright- dim - off, default is off )


2. When the projection is on, press and hold "▲" to revolve projection view. Long press the project key to rotate the projection 180 degrees

**Note:** There is no projection function in battery-powered mode.

1

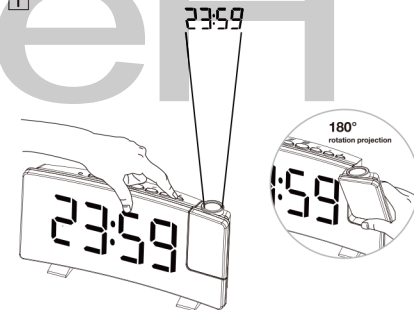

2

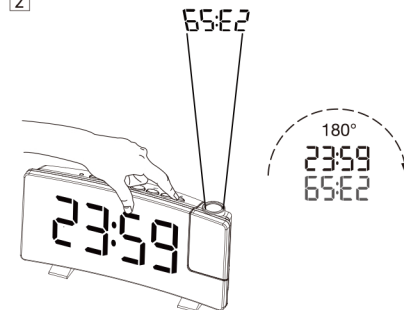 

## ● Brightness Control

In the clock mode, press “SNOOZE/DIMMER” once to adjust the brightness of the LED display.

1. Slightly Bright (default) -- Bright -- Off -- Dim
2. Press and hold the “SNOOZE/DIMMER” button for 2 seconds to select the on/off of Auto mode.

If select “AU” means that LED display automatically enter into the low brightness mode in the dark environment; if select “OFF” that can only control brightness manually (default is “OFF”).

**Note:** This can only be done when radio is off and the unit is not sounding.



OFF



Auto Mode




Manual Mode

## ● Charging

Connect the charging cable of your mobile phone to the USB port at the back of unit, then connect the other end to your mobile phone or other equipment. The clock radio will charge the mobile phone automatically.


### Notes

1. Use the original cable of your mobile phone for charging.
2. Charge with this USB jack may take a long time.

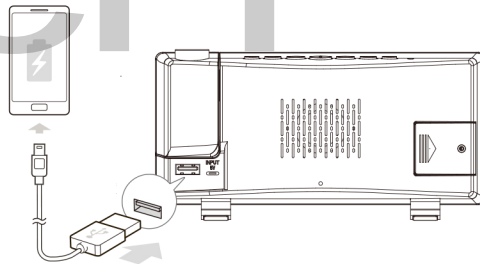

## 4 RESTORE FACTORY DEFAULT

If the time error occurs, it may be subject to other equipment's electrostatic interference. To resolve this, you can remove the power supply and the backup battery, then the clock can be restored to the Factory Default. Repower on the clock and set the function.

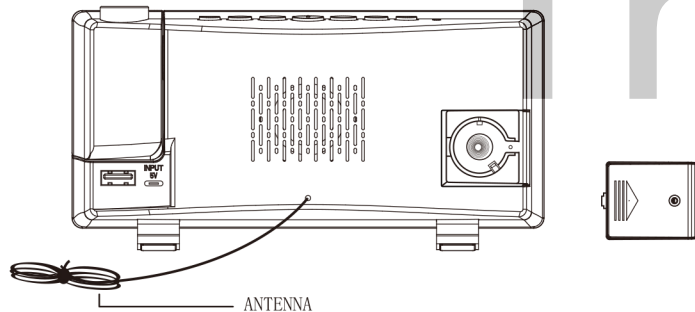

## 5 PRECAUTION

1. Do not place the electronic clock in a high temperature, water or direct sunlight environment.
2. When placing the clock on the furniture, use a cloth or other protective material to keep away from the furniture.
3. If **necessary**, use a flannel with a little soapy water to clean the clock. Substances such as gasoline, thinner or similar liquids will damage the clock's surface. Cut off the power before cleaning
4. If you don't use this clock for a long time, such as a month or even longer, remove the battery to prevent the clock from being corroded; if the battery compartment is corroded or dirty, clean and replace the battery in time.
5. Do not disassemble this product.

