

Flashing tutorial

(Applicable models: English G1)

1. Download and Unzip Firmware and Flash Tool

1) Download the following two Google Drive links to get the flashing tool and firmware:

https://drive.google.com/file/d/1kEmsF0dxVSBnJYIybMdQEhtvTQus0b-T/view?usp=drive_link

https://drive.google.com/file/d/1TDETiqh97uf3JNBDSIGyY9vfzYtBfUy/view?usp=drive_link

2) Unzip the downloaded zip file:

After unzipping you will see the following files:

- MX3W_EN-V2.20-20250410
- SP_Flash_Tool_exe_Windows_v5.1904


- Download the whole file and then unzip it! It won't work without unzipping! If you don't have an unzip tool, download


<https://www.win-rar.com/> or other unzipping tool.

- How to unzip: Right mouse click on the file and select Unzip.

2. Run and Configure Flash Tool

1) In the **Flash Tool** folder, find and double-click "**Flash_tool.exe**" to run it.

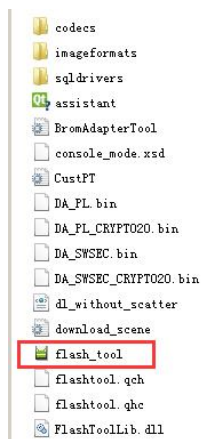

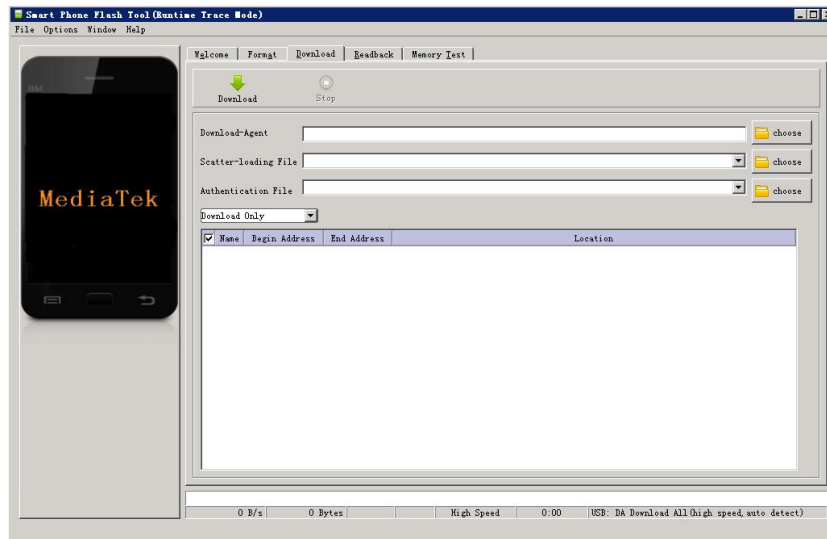


Note: After unzipping, the "Flash_tool.exe" file may be mistakenly deleted because it is judged as an unknown source file by the Windows Security Center or third-party security software. If so, please temporarily turn off Windows protection detection or third-party security software before unzipping. You can also set Flash_tool.exe as a trusted program in Windows protection detection or third-party security software. For win10, please visit Settings>>Update and Security>>Windows Security Center>>Virus and Threat Protection, find "Protection History", then find "Flash_tool.exe" and restore it.

2) Click the First "choose" button on the right:


Go to file **SP_Flash_Tool_exe_Windows_v5.1904**

Select **MTK_AllInOne_DA.bin**


and open it.

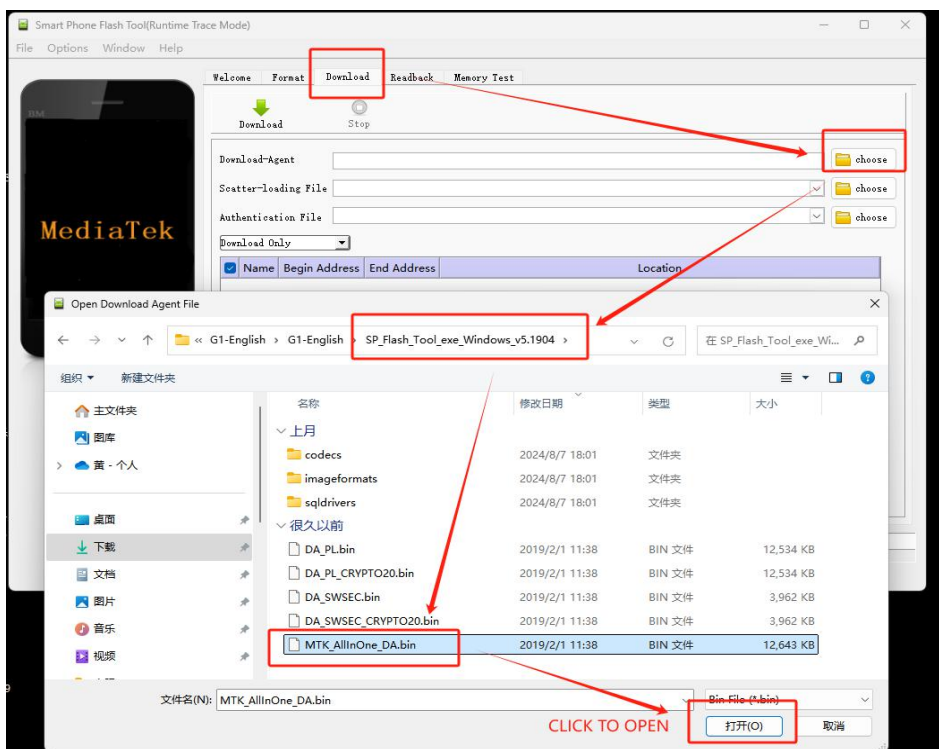

- Click the Second 'choose' button on the right:
Go to the file **MX3W_EN-V2.20-20250410**
Select **MT6753_Android_scatter**
and open it.

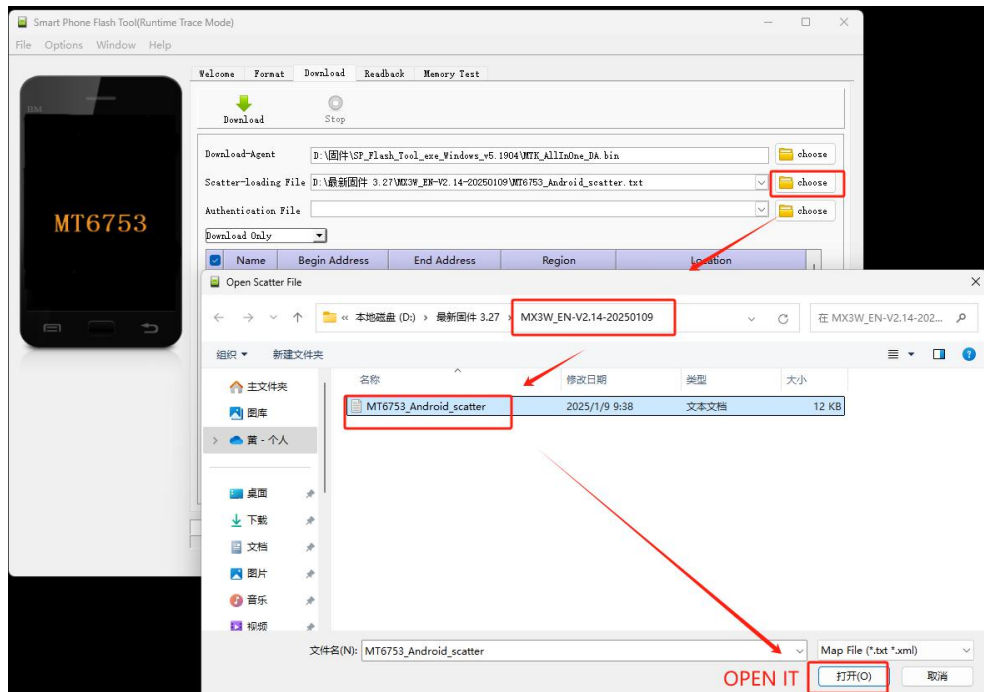


- Click and select the "**Format All + Download**" option in the flash type drop-down box.
As shown below:

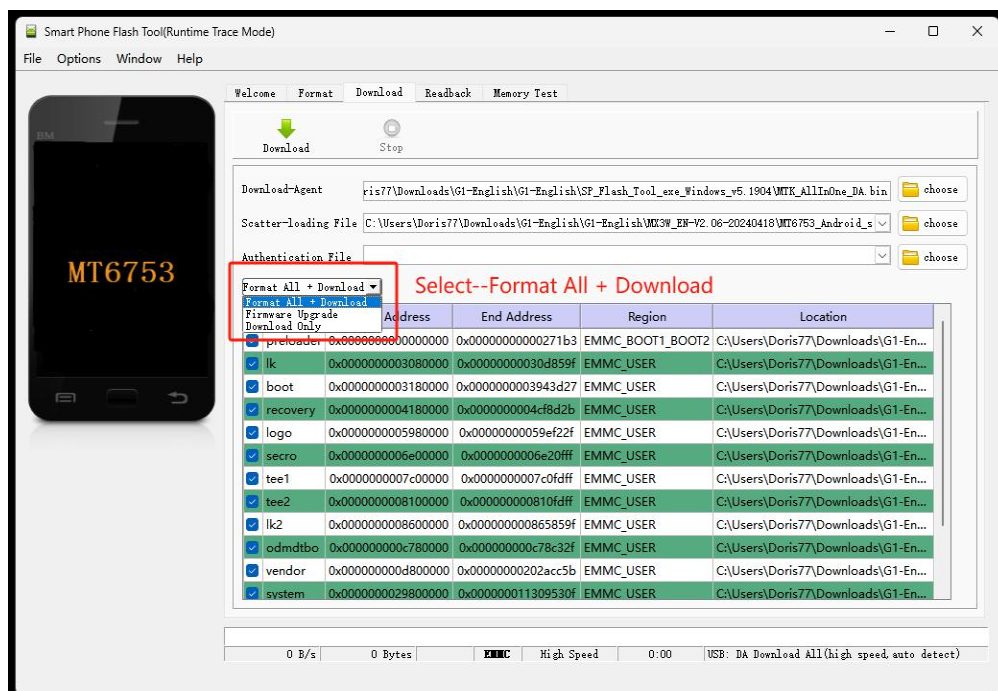


3. Flash G1 player

- 1) Click the button "Download". The update tool will be waiting for the device to connect.

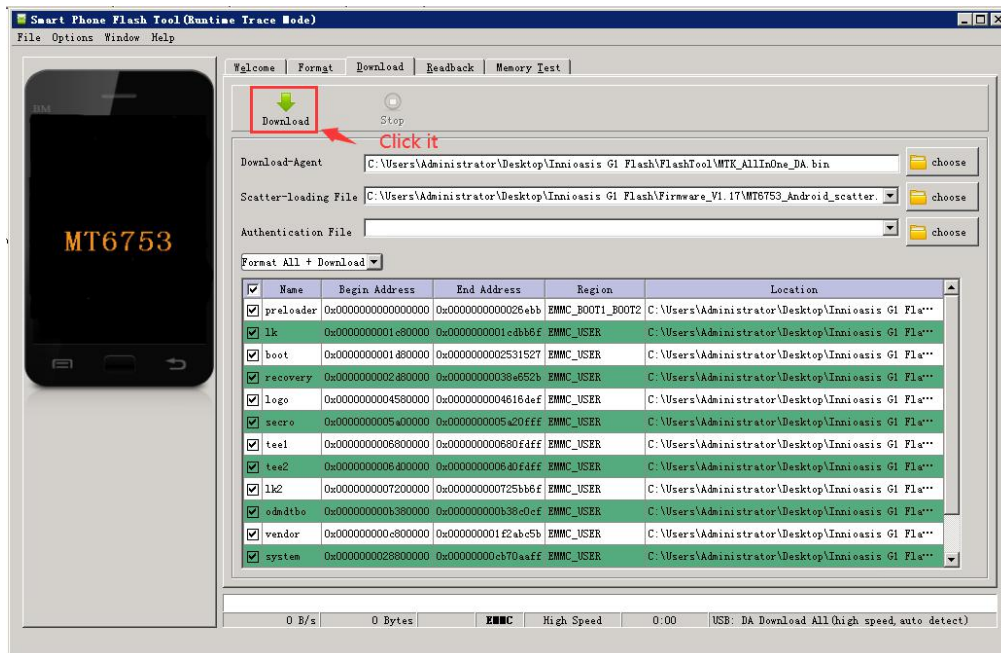

- 2) Next, turn off G1 player and connect it to your computer with the supplied USB-A to USB-C cable. The update tool will automatically recognize the connected device and start formatting and updating the firmware. You can see the percentage of completion through the color progress bar below, until 100% complete.

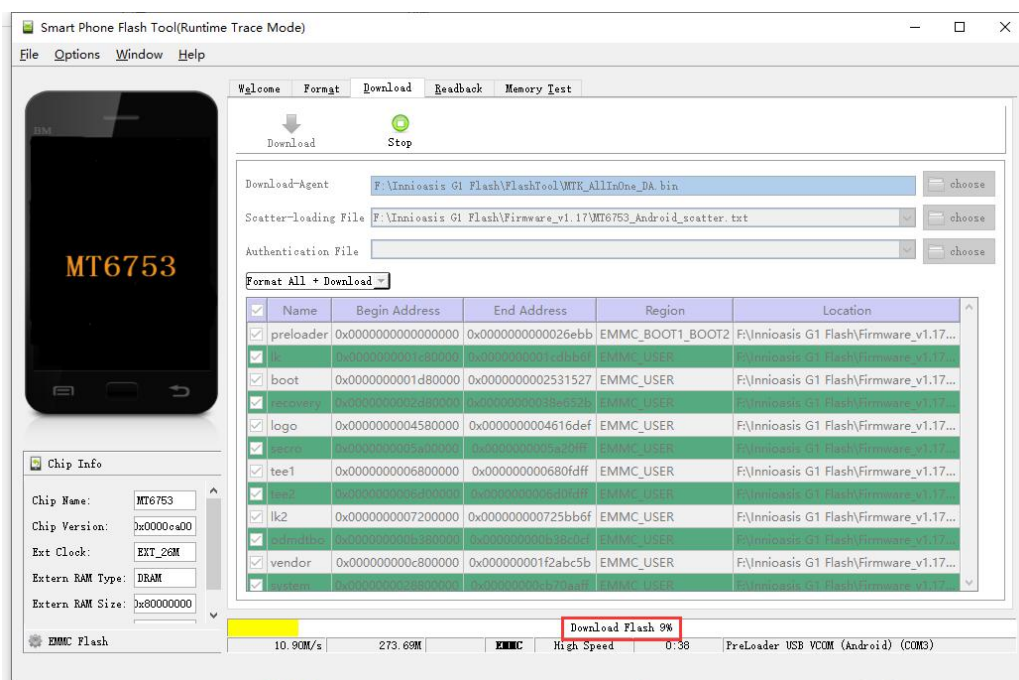

Smart Phone Flash Tool (Runtime Trace Mode)

File Options Window Help

Welcome Format Download **Download** Readback Memory Test

Download Stop

Download-Agent F:\Innioasis G1 Flash\Firmware\MTK_AllInOne_DA.bin choose

Scatter-loading File F:\Innioasis G1 Flash\Firmware_v1.17\MT6753_Android_scatter.txt choose

Authentication File choose

Format All + Download Download Ok

☒	Name	Begin Address	Size	Region	Location
☒	preloader	0x00000000	0x00000000	EMMC_USER	F:\Innioasis G1 Flash\Firmware_v1.17...
☒	lk	0x00000000	0x00000000	EMMC_USER	F:\Innioasis G1 Flash\Firmware_v1.17...
☒	boot	0x00000000	0x00000000	EMMC_USER	F:\Innioasis G1 Flash\Firmware_v1.17...
☒	recovery	0x00000000	0x00000000	EMMC_USER	F:\Innioasis G1 Flash\Firmware_v1.17...
☒	logo	0x00000000	0x00000000	EMMC_USER	F:\Innioasis G1 Flash\Firmware_v1.17...
☒	secro	0x000000005a0000	0x000000005a20ff	EMMC_USER	F:\Innioasis G1 Flash\Firmware_v1.17...
☒	tee1	0x00000000680000	0x00000000680dff	EMMC_USER	F:\Innioasis G1 Flash\Firmware_v1.17...
☒	tee2	0x000000006d0000	0x000000006d0dff	EMMC_USER	F:\Innioasis G1 Flash\Firmware_v1.17...
☒	lk2	0x00000000720000	0x00000000725b0f	EMMC_USER	F:\Innioasis G1 Flash\Firmware_v1.17...
☒	pdmtdtbo	0x00000000b38000	0x00000000b38c0f	EMMC_USER	F:\Innioasis G1 Flash\Firmware_v1.17...
☒	vendor	0x00000000c80000	0x00000000c82b5b	EMMC_USER	F:\Innioasis G1 Flash\Firmware_v1.17...
☒	system	0x000000002880000	0x000000002870aaf	EMMC_USER	F:\Innioasis G1 Flash\Firmware_v1.17...

Chip Info

Chip Name: MT6753

Chip Version: 0x00000000

Ext Clock: EXT_GCM

Extern RAM Type: DRAM

Extern RAM Size: 0x00000000

EDMC Flash

Download Flash 100%

11.60M/s 2.89G EDMC High Speed 4.28 PreLoader USB VCOM (Android) (COM3)

Please make sure that the G1 player is turned off and then connected to the computer, otherwise it will not be able to flash normally.

If you are win10 or win11, please download the following driver on your computer and try again.

If you have other versions of Windows, please contact us for the corresponding driver.

For more help or to schedule a remote assistance appointment, please contact us via email and we will get back to you as soon as possible.

Online support: innioasis-csc@hotmail.com