

## Equipment Controls

### Audio Mode Button

Button used to control Audio Receiver functions

### TV Mode Button

Button used to control TV Functions.

### RCU Setup

Button used to program remote for different devices.

### DVD Mode Button

Press to control DVD functions

### Auxiliary Mode Button

Press to control Aux Device Functions.

### Set Top Box Mode Button

Press to control Set Top Box Functions.

### Master Power Button

Press to turn off device that your remote is currently in control of.

## DVR Controls

### Jump Back Button

Press to jump back 60 seconds

### Play/Pause

Press to play current video.

### Rewind Button

Press to rewind video in 2x, 4x, 10x, 25x, 50x, 100x, 300x speed

### Stop Button

In recorded video, stops playback.

### Jump Ahead Button

Press to jump ahead 30 seconds

### Fast Forward Button

Press to fast forward video in 2x, 4x, 10x, 25x, 50x, 100x, 300x speed

### Record Button

Press to record in live TV or the Guide.

## Navigation Controls

### Menu Button

Press to bring up the Menu Bar.

### Arrow Buttons

Press to move around a menu.

### Guide Button

Press to cycle through the on screen guide and favorites lists.

### Info Button

Press to bring up information on the current program.  
(Twice for more information)

### OK Button

Press to confirm a command.

### Exit Button

Press to exit to live TV.

### Page Up/Down Button

Press to scroll a full page in the Guide.

### Volume

Press to Increase/Decrease Volume.

### Custom Buttons

Functions vary.  
Can be programmed.

### Channel Button

Press to change channels & scroll a full page in the Guide.

### Mute Button

Press to turn off audio.

### Input Button

Press to change the input on the TV. (Press TV Mode Button First)

### Last Button

Press to change to previously tuned channel.

### Closed Caption Button

Press to enable/disable.

## Turning Television ON/OFF

1. Press **TV** to set remote to control your television.
2. Press **POWER** to turn ON/OFF your television.

## Changing Cable Channels

1. Press **STB** to set remote to change cable channels.

# STAR TV



# ADB (black) Star TV Remote for ADB Settops - Power, Volume & Advanced

## Code Search Method

- Start with TV turned on.
- PRESS and release the **TV** button
- PRESS and **HOLD** the **RCU SETUP** until the **TV** button blinks twice
- Enter in **9 9 1** and the **TV** button will blink twice
- Aim the remote at the **TV** and press and release the **POWER** button
- PRESS and **RELEASE** the **CH+** or **CH-** until the TV turns off
- PRESS the **POWER** button to turn the TV on
- PRESS the **RCU SETUP** button to store the code for the TV. The TV button will blink twice. The remote is now ready to operate the TV.

## Volume (Use with Code Search Method)

- Press and release the **TV** button
- Press and hold the **SETUP** button until the TV button blinks TWICE
- Enter in **9 9 3**
- Press and release the **TV** button and wait until it blinks twice
- Once these steps have been completed, you should be able to control the volume +/- and the mute regardless of what “mode” you are in. (i.e. TV, STB)

## The Learning Method

Basically, this means that you can transfer the information from the FACTORY ISSUED remote to the ADB remote (power, volume, etc.) It bypasses having to do the code search method.

- Press the **RCU SETUP** until the last selected mode button blinks twice. (TV, DVD, etc.)
- Enter in **9 7 5**
- Press the **TV** button
- Press the button you wish to program (i.e. **POWER**) on the ADB remote



- Place the **ADB** remote and the **ORIGINAL** remote head-to-head about 2 inches apart.
- Press and **HOLD** the **SAME** button (power) on the **ORIGINAL** remote. The ADB remote TV button will blink rapidly and turn off. Keep holding the button on the **ORIGINAL** remote until the **TV** button on the ADB remote blinks twice.

*\*If the learning failed, the TV button will emit on long blink. You will have to repeat step 6.*