

50" - 86" Tilting TV Wall Mount

Model: 100010113

PRODUCT GUIDE



Before getting started, let's make sure this mount is perfect for you!

Is your TV VESA equal to / greater than 75mm x 75mm $(2.95" \times 2.95")$ and equal to / less than 600mm x 400mm (23.62" x 15.75")?

MAX: 600mm/23.62" (MIN: 75mm/2.95") MAX: 400mm/15.75" (MIN: 75mm/2.95")

Yes - Perfect!

No — This mount is NOT compatible with your TV.

Does your TV (including accessories) weigh less than 120 lbs (54.4 kg) ?




Yes - Perfect!

No — This mount is NOT compatible.

What is your wall made of?



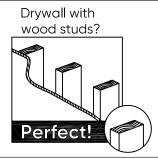



Installation Tools (not included)



Screwdriver




Level Pencil Tape Measure





Wood Stud Installation

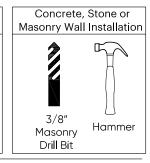

Keep this Product Guide for future reference. Keep your original proof of purchase (store receipt).


Need help? We're here for you every day from 7 a.m. - 9 p.m. CST. Give us a call at 1-888-516-2630


SAFETY WARNING:


- Never let children climb on the product or play with product.
- Do not sit or stand on product.
- Do not fasten a TV that is heavier than the recommended load rating to the mount.
- Use suitable concrete, stone, masonry wall or wood stud wall ONLY. Not suitable for metal studs or drywall alone.
- Improper installation may cause property damage and/or personal injury.
- Two people are recommended for this installation. The manufacturer is not liable for damage or injury caused by incorrect mounting, assembly or use.
- Improper handling can result in cuts or lacerations.


Safety Caution


Dimensions

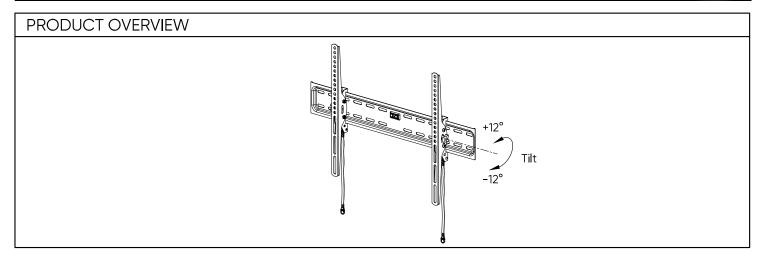

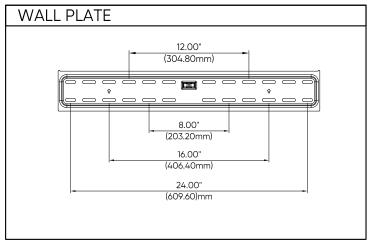

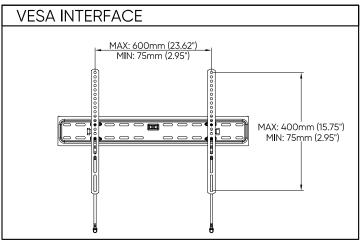

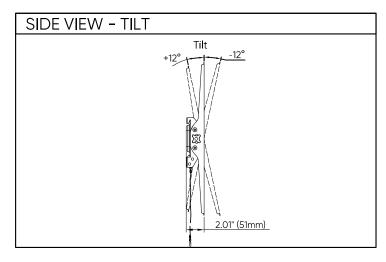


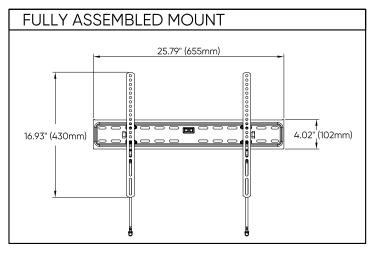



ASSEMBLY TIPS:

- 1. Carefully read the entire Product Guide before beginning your installation.
- 2. Make sure that all parts are in the box and in good condition.
- 3. Assemble the product on open flat carton or a rug to protect the product and your floor.
- 4. Do not install on sloping surface.
- 5. Two people are recommended for proper assembly.

▲ CAUTION: This mount is intended for use with TV weights not exceeding the maximum weight capacity of 120lbs. The wall itself must be capable of supporting 4X the standard weight. Do not over tighten screws to avoid any damage or injury. Use with products heavier than the maximum weight indicated may result in collapse of the mount and its accessories causing possible injury.

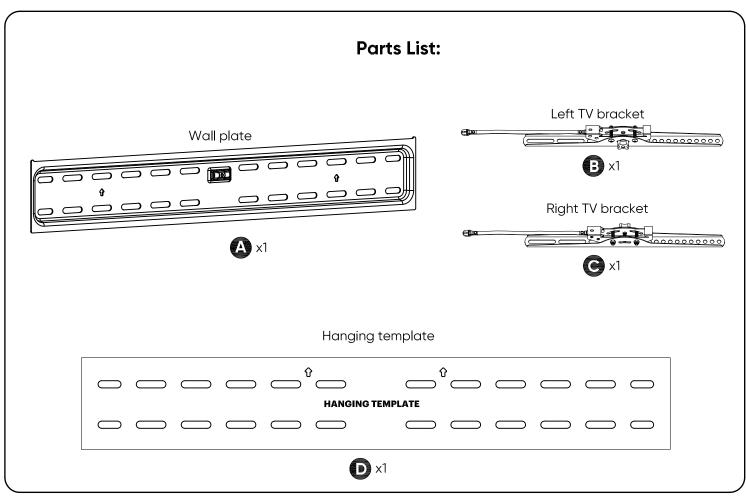

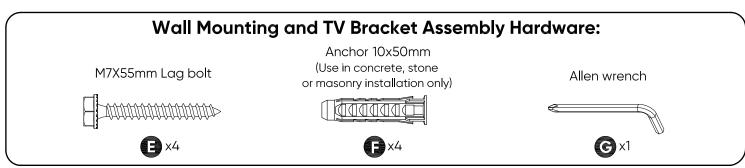

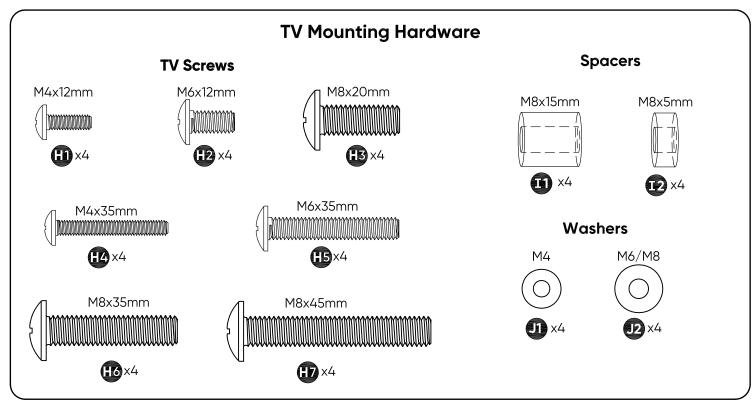


STEP 1 Attach TV Brackets 🕒 & 🕒 to TV

A CAUTION: Carefully lay your TV on its face on a flat, non-abrasive surface covered with

blanket or soft padding to help prevent damaging the screen.


A CAUTION: Place left and right TV bracket in the appropriate position, make sure they are

CENTERED on the back of TV and LEVEL with one another.

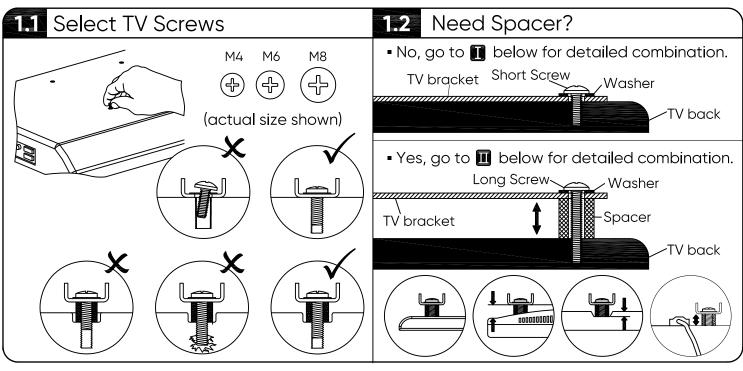


1.3 Attach both TV Brackets


Choose proper screws that fit your particular TV mounting holes. Use spacers and washers as needed since they are not always required. You will have screws, spacers and washers leftover. Discard all unused hardware after you have completed TV mount installation.

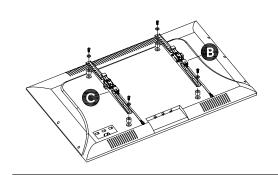




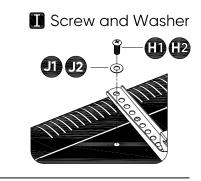



Spacer, Screw and Washer

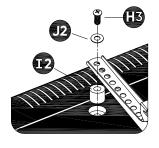



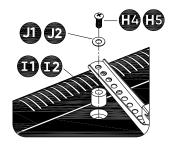

 

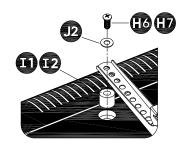



STEP 2 Attach Wall Plate (A) to Wall



For wood stud installation, follow STEP 2A





For concrete wall installation, follow STEP 2B


STEP 2 A Wood Stud Installation


NEVER USE ANCHOR FOR WOOD STUD ASSEMBLY

CAUTION: The wood stud minimum size is 2x4", and surface covering can't be more than 5/8". Drill hole on the wood stud center line.

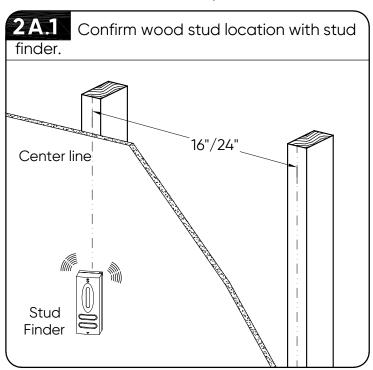

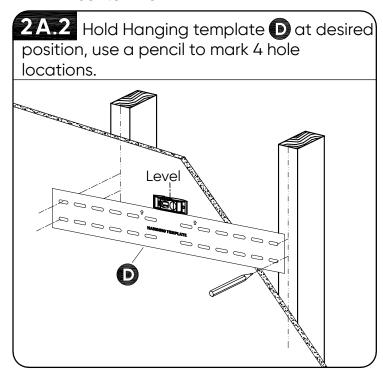

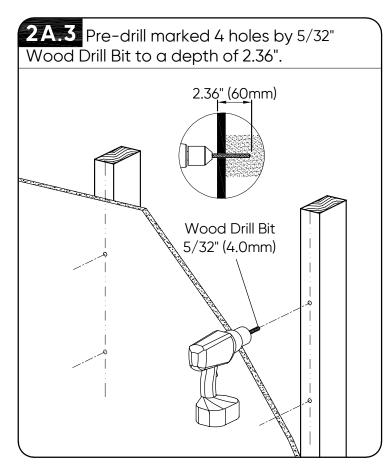

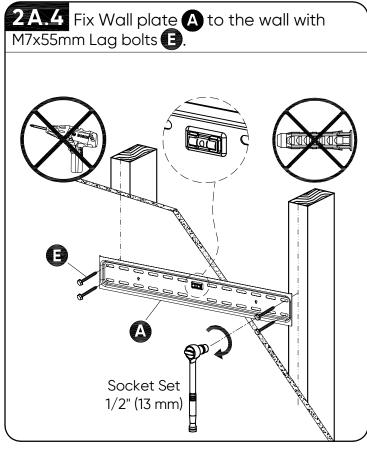


STEP 2B

Concrete, Stone or Masonry Installation


▲ CAUTION: The concrete wall minimum thickness is 5.5", and surface covering can't be more than 3/8".

▲CAUTION: These anchors are for concrete, stone or masonry wall ONLY. Do not install into wood stud.


▲ CAUTION: This product can only be installed on a perpendicular wall. Do not install this product on the ceiling.

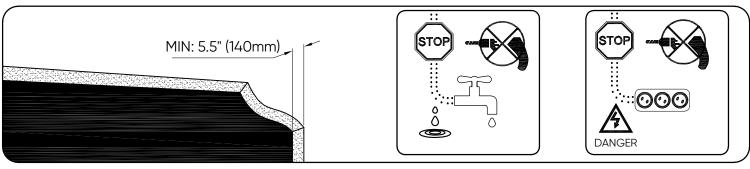


2B.1 Hold Hanging template **D** against wall at desired position, use a pencil to mark 4 hole locations.

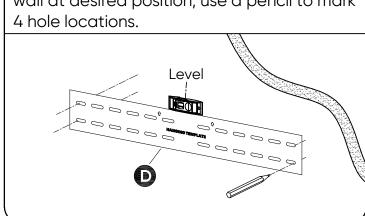

2B.2 Pre-drill marked 4 holes by 3/8" size Masonry Drill Bit to a depth of 2.36".

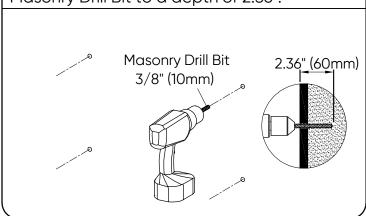

2B.3 Insert Anchors **F** into wall and use hammer to lightly tap them into wall.

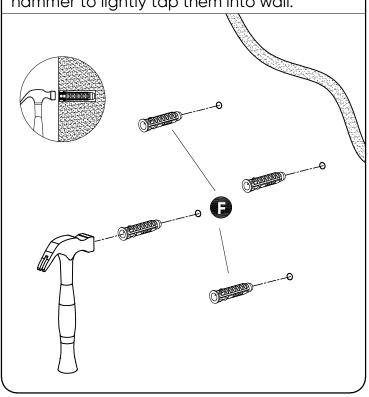


B.4 Fix Wall plate A to the wall with M7x55mm Lag bolts E.


Socket Set 1/2" (13 mm)

STEP 3 Hang and Secure TV on Wall Plate


Try to pull the wall plate and make sure it is tightly mounted on the wall.

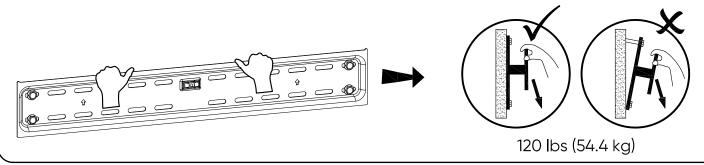

3.2 Hang pre-assembled TV unit on the Wall plate $oldsymbol{\Lambda}$ and pull down the cords and release, you will hear the latches click into place.

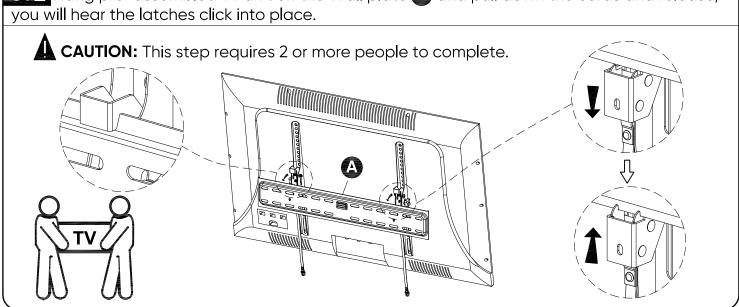

You may need to loosen handles of TV brackets to tilt TV to your desired angle. Please remember to tighten the handles after adjustment.

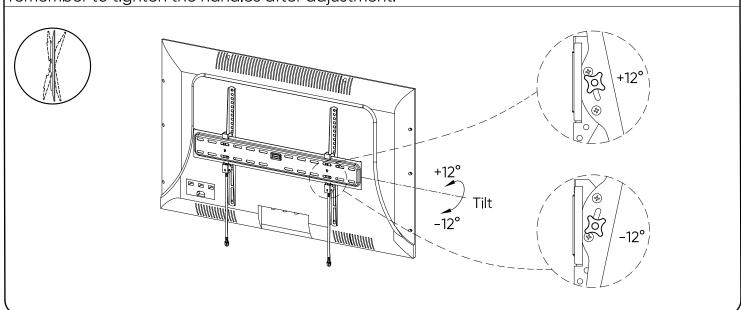

© 2020 Walmart onn. is a trademark of Walmart. All Rights Reserved.

Distributed by Walmart Inc., Bentonville, AR 72716

MADE IN VIETNAM

We'd love to hear from you. Scan with your Walmart app and let us know what you think.

