 




Original	Replacement	Original	Replacement
	Power		Power
	A		Red
	B		Green
	C		Yellow
	D		Blue
	E		3D
	F		Shift + 6
	G		Shift + 7
	Reset / Upgrade		Exit
	Recall / Info		Info
	Guide		Guide
	Home / Menu		Menu
	Back / PP		Back
	Options		Options
	Smart		Smart
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Teletext		Text
	CC		Subt
	TV Vol +		Vol +
	TV Vol -		Vol -
	Mute		Mute
	P+		Ch +
	P-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7







Original	Replacement	Original	Replacement
	Power		Power
	A		Red
	B		Green
	C		Yellow
	D		Blue
	E		3D
	F		Shift + 6
	G		Shift + 7
	Reset / Upgrade		Exit
	Recall / Info		Info
	Guide		Guide
	Home / Menu		Menu
	Back / PP		Back
	Options		Options
	Alarm / Clock		Media
	Smart		Smart
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Teletext		Text
	CC		Subt
	TV Vol +		Vol +
	TV Vol -		Vol -
	Mute		Mute
	P+		Ch +
	P-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6







Original	Replacement
 Power	 Power
 Recall / Info	 Info
 Guide	 Guide
 Home / Menu	 Menu
 Back / PP	 Back
 Options	 Options
 Alarm / Clock	 Media
 Smart	 Smart
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Teletext	 Text
 CC	 Subt
 TV Vol +	 Vol +
 TV Vol -	 Vol -

Original	Replacement
 Mute	 Mute
 P+	 Ch +
 P-	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 AV	 AV
 Sleep	 Sleep





Original	Replacement	Original	Replacement
	Power		Power
	Recall / Info		Info
	Guide		Guide
	Home / Menu		Menu
	Back / PP		Back
	Options		Options
	Alarm / Clock		Media
	Smart		Smart
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Teletext		Text
	CC		Subt
	TV Vol +		Vol +
	TV Vol -		Vol -

Original	Replacement	Original	Replacement
	Mute		Mute
	P+		Ch +
	P-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV		AV
	Sleep		Sleep

