 
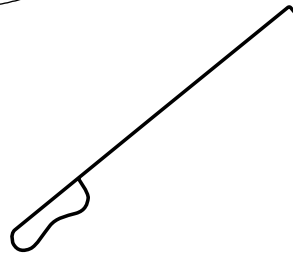 


PATIOJOY®

LATTICE 36 INCH WOOD FIRE PIT RING

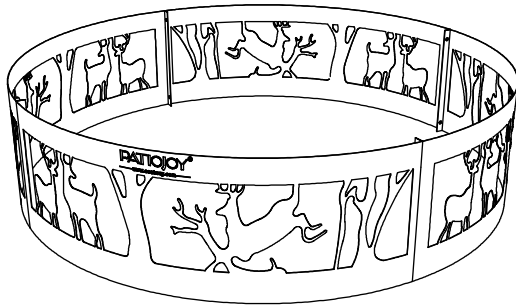

WARNING

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.



WARNING

For outdoor use only.



WARNING

Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage. Read the owner's manual thoroughly before installing or servicing this equipment. If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

INSTALLER:

Leave this manual with the appliance.

CONSUMER:

Retain this manual for future reference.



DANGER



CARBON MONOXIDE HAZARD

This appliance can produce carbon monoxide which has no odor.

Using it in an enclosed space can kill you.

Never use this appliance in an enclosed space such as a camper, tent, car or home.

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Please give us a chance to make it right and do better!

Contact our friendly customer service department for help first.

Replacements for missing or damaged parts will be shipped ASAP!

Follow Costway

Visit us: www.costway.com



Before you assemble or operate this unit, please carefully read this entire manual. Failure to do so may result in a fire, explosion, injury or death.

WARNING

- FOR OUTDOOR USE ONLY! This fire pit shall be used only outdoors in a well-ventilated space and shall not be used in a building, garage, or any other enclosed area.
- Use poker to open and close mesh lid. Handles may be hot due to flames.
- DO NOT add gasoline, kerosene, diesel fuel, lighter fluid or alcohol to relight or enhance flame. Excessive heat may damage the integrity of the structure. The ONLY method of lighting used should be a match or lighter. Do not use any flammable fuels.
- Never use charcoal or any other solid fuel in the fire pit.
- DO NOT use the unit indoors due to hazard of carbon monoxide fumes. Lack of ventilation can cause death.
- This fire pit was designed for burning untreated wood ONLY. Do not use with chemically treated fire logs.
- DO NOT pour water into fire pit when it is burning; this will cause rusting.
- Check the local bylaws before using the fire pit.
- Never leave a lighted fire pit unattended.
- DO NOT use under any unprotected combustible structure. Keep combustible surfaces at least one yard away from all sides of the fire pit.
- Protective gloves and long-handled tools are recommended for use with this fire pit.
- Dispose of packing materials properly.
- DO NOT use fire pit on wooden decks or on other combustible surface.
- Keep children away from hot fire pit.
- Young children should be carefully supervised when they are in the the area of the fire pit.
- Clothing or other flammable material should not beplaced on or near the fire pit.
- Any guard or other protective device removed for servicing must be replaced prior to operating the fire pit.
- Fire pit will remain very hot for a period of time after using.
- Be sure fire pit is cooled before moving.
- Use with extreme care and at your own risk.
- This fire pit must be attended at all times!
- Do not operate fire pit unless it is completely assembled and all parts are in place.
- Pay attention when operating the fire pit. It is hot when in use and should never be left unattended. Do not move it while in operation.
- Do not use this fire pit for cooking.
- Do not put any other fire pit cover or anything flammable on, beneath or around the fire pit.
- Never place clothing or other flammable materials on or near the fire pit.
- Users should be alerted to the hazards of high surface temperatures and keep a safe distance to avoid burning or clothing ignition.
- Never lean over the open fire pit or place hands or fingers on the upper portion of an operational unit.
- Keep any electrical supply cords and the fuel supply hose away from any heated surfaces.

- Combustible materials should never be within 48 inches of the top, back or sides of the fire pit
- Do not handle the fire pit until it is completely cooled.
- This heating appliance should not be used on plastic or artificial wood decks.



 
AA



BB



CC




DD

Item	Description	Qty
AA	M6x12 Screw	8
BB	M6 Nut	8
CC	bottle opener	1
DD	Wrench	1

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any parts are missing or damaged, do not attempt to assemble the product.

 
Estimated Assembly Time: 15 minutes

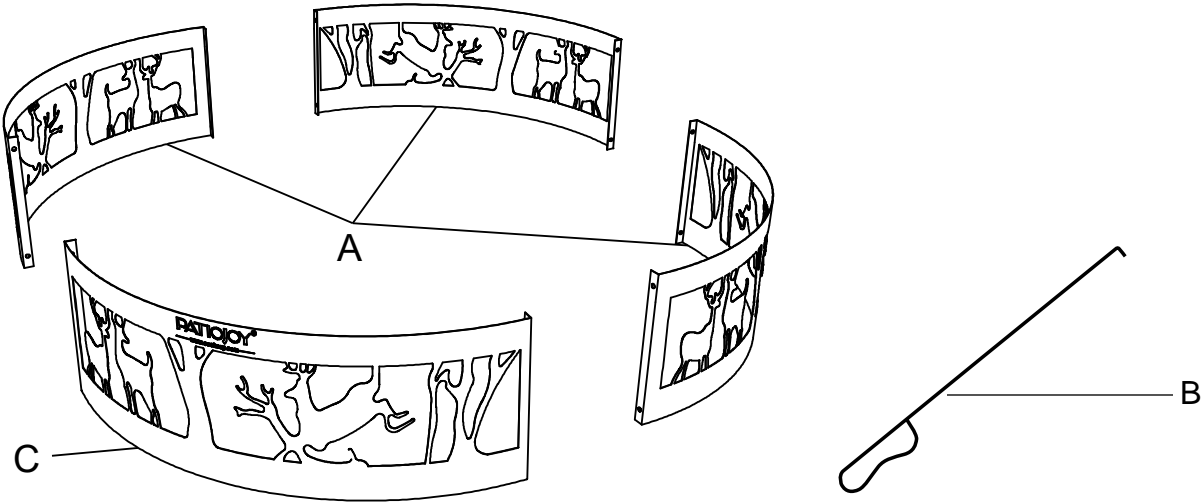


Item	Description	Qty
A	Fire Ring 1	3
B	Poker	1
C	Fire Ring 2	1

ASSEMBLY INSTRUCTIONS

 
1. Attach two fire rings (A) using 2pcs M6x12 screws (AA) and 2pcs M6 nuts (BB).

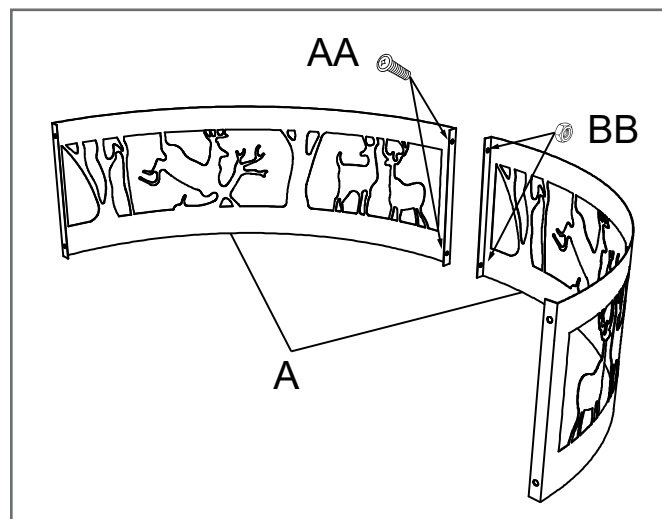

2. Attach the third fire ring (A) using 2pcs M6x12 screws (AA) and 2pcs M6 nuts (BB).

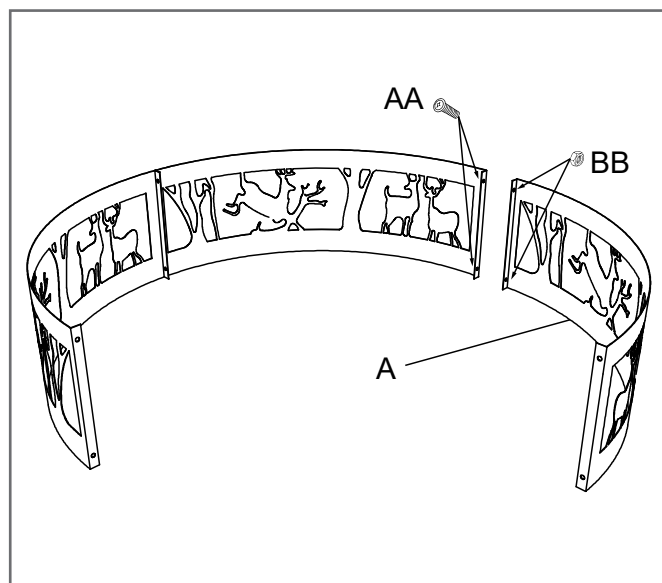 

3. Attach the last fire ring (C) using 4pcs M6x12 screws (AA) and 4pcs M6 nuts (BB).

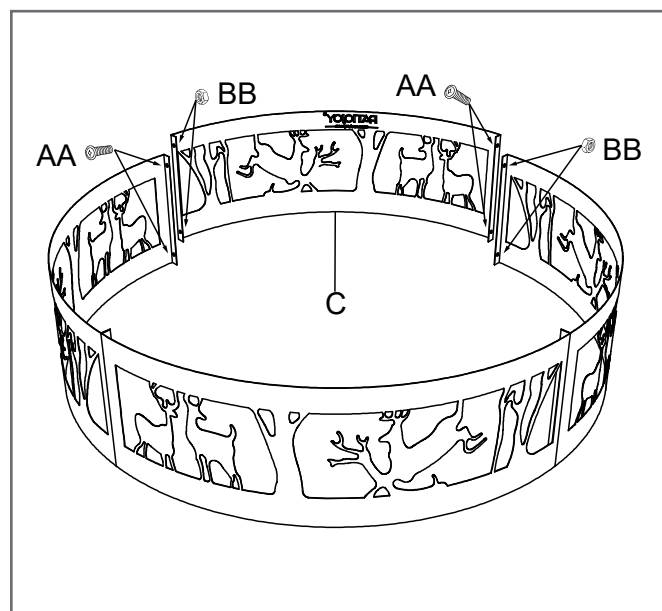 

To Light

1. Make sure all debris is removed from the fire pit.
2. Place a layer of dry kindling or a natural firestarter onto the center of the log rack.
3. Place above that a layer of dry seasoned hardwood that is cut to lengths no more than 3/4 the width of the firebowl.
4. Use a long match to light kindling.

To Extinguish

1. Allow fire to burn itself out.
2. Do NOT use water to extinguish as this is dangerous and can cause damage to the fire pit.

Tending The Fire

1. While using fire poker, shift coals/wood logs to allow additional airflow.
2. Wait until glowing coals have developed before adding any additional wood. If additional wood is required, place wood on top of coals. Be careful not to shift ashes.

MAINTENANCE

- This outdoor fire pit should be inspected on a regular basis to ensure product safety and long product life.
- Check handles to make sure they are secure.
- Check components for any signs of damage or rust.
- Wipe exterior surfaces with a mild cleaning product and water.
- For stubborn surfaces use a citrus based degreaser and soft cloth.
- Rinse surfaces clean of any cleaning product with water after cleaning is complete.
- Remove built-up creosote from components with a chimney cleaning product.
- Store fire pit in a cool dry place.
- Use manufacturer-approved or supplied replacement parts and accessories only. Otherwise it may void the warranty of this product and result in a hazardous condition.
- Keep the fire pit free and clear from combustible materials and debris.

Welcome to visit our website and purchase our quality products!

Your suggestions and comments for COSTWAY are really important to us!

We sincerely solicit you to go back to our shop and leave a good rating in just a simple click. It would be quite encouraging if you could kindly do so like below:

★★★★★ Great products so far

February 24, 2019

Great products so far. Fast delivery, easy setup, and working without any issues.

With your inspiring rating, COSTWAY will be more consistent to offer you
EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

US office: Fontana, California

UK office: Ipswich



- * Reward Points
- * Exclusive Customer Service
- * Personalized Recommendations
- * Permanent Shopping Cart
- * Order History

5 Star Rating



We would like to extend our heartfelt thanks to
all of our customers for taking time to assemble
this product and giving us valuable feedbacks.

THANK
YOU
😊

