


# TODDY® TIMER – User Guide

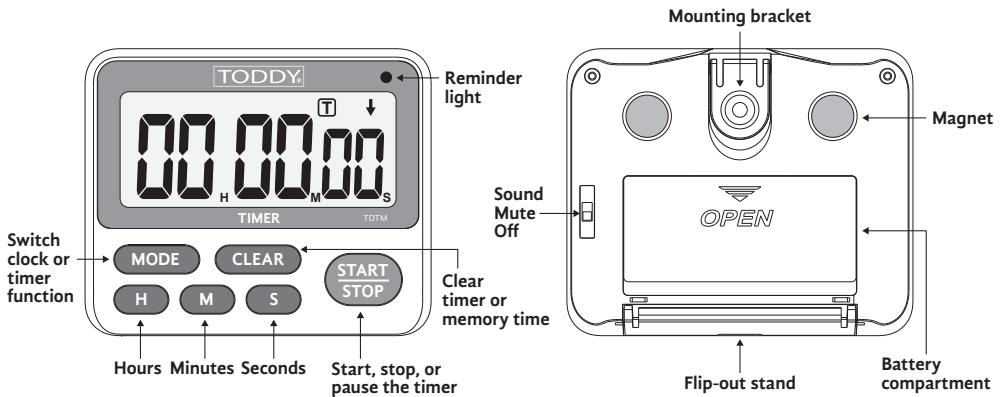

## BEFORE FIRST USE

1. Remove protective film on screen by freeing one corner and then pulling remainder off.
2. Install 2 AAA batteries (included). Access battery compartment by sliding cover in the direction of the arrow.
3. Turn the timer on with the switch on the back.

## SET CLOCK TIME

1. Press and hold **MODE** until the display is flashing.
2. Press **H** button to set hours (press and hold to increase quickly).
3. Press **M** button to set minutes (press and hold to increase quickly).
4. Press **S** button to set seconds (press and hold to increase quickly).

## SET COUNTDOWN TIMER

1. Press **MODE** button to enter **TIMER MODE**.
2. Press **H** button to set hours (press and hold to increase quickly).
3. Press **M** button to set minutes (press and hold to increase quickly).
4. Press **S** button to set seconds (press and hold to increase quickly).

5. Press the **CLEAR** button to clear the timer. Press again to load memory time (last countdown time started).

## START COUNTDOWN

1. After setting countdown time, press **START/STOP** button to begin countdown. Pressing this button additional times will cycle between pausing and resuming the countdown.
2. When the countdown timer reaches zero, the indicator light will flash, the alarm will sound (for 1 minute), and the timer will begin to count up while flashing.
3. Press **START/STOP** button to return to timer mode.

## TIMER PLACEMENT

This product can free stand with use of the flip-out stand, hang on a fixture with the mounting bracket, or attach to a magnetic metal surface with rear magnets.

## BATTERY REPLACEMENT

Replace batteries if display is dim or unclear.

## ONE YEAR LIMITED WARRANTY

Toddy, LLC warrants this product to be free from defects in material or workmanship (excluding batteries) for 1 year from the original date of purchase.