УКРАЇНСЬКА

NEDERLANDS





Please read this manual carefully before operating your set and retain it for future reference.

Original instruction (R410A/R32)



11

TABLE OF CONTENTS

3 SAFETY INSTRUCTIONS

PRIOR TO OPERATION

11	Preparing for Operation		
11	Usage		
11	Cleaning and Maintenance		
11	Service		
12	OPERATING INSTRUCTIONS		
12	Forced Operation		
12	Auto Restart Function		
13	MAINTENANCE AND SERVICE		
13	Ceiling Cassette - 1Way (Grille + Panel)		
14	Ceiling Cassette - 1Way (With Air Purifier)		
18	Ceiling Cassette - 2Way		

- 19 Ceiling Cassette 4Way
- 22 Ceiling Cassette Round
- 23 Ceiling Concealed Duct & Fresh Air Intake Unit
- 24 Concealed Floor Standing
- 25 Art Cool Gallery Series
- 27 Wall Mounted
- 28 Convertible
- 29 Console
- 30 When the air conditioner is not going to be used for a long time
- 30 Operation Tips
- 31 Before you call for service...

Safety Instructions

The following symbols are displayed on indoor and outdoor units

[]i	Read the precautions in this manual carefully before operating the unit.	This appliance is filled with flammable refrigerant (for R32)
	This symbol indicates that the Operation Manual should be read carefully.	This symbol indicates that a service personnel should be handling this equipment with reference to the Installation Manual.

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance. The guidelines are separated into 'WARNING' and 'CAUTION' as described below.



⚠ This symbol is displayed to indicate matters and operations. that can cause risk.

Read the part with this symbol carefully and follow the instructions in order to avoid risk.

WARNING

This indicates that the failure to follow the instructions can cause serious injury or death.

A CAUTION

This indicates that the failure to follow the instructions can cause the minor injury or damage to the product.

WARNING

Installation

- Do not use a defective or underrated circuit breaker. Use this appliance on a dedicated circuit.
 - There is risk of fire or electric shock
- For electrical work, contact the dealer, seller, a qualified electrician, or an Authorized Service Center.
 - Do not disassemble or repair the product. There is risk of fire or electric shock.

- · Always ground the product.
 - There is risk of fire or electric shock.
- Install the panel and the cover of control box securely.
 - There is risk of fire or electric shock.
- Always install a dedicated circuit and breaker.
 - Improper wiring or installation may cause fire or electric shock
- Use the correctly rated breaker or fuse.
 - There is risk of fire or electric shock.
- Do not modify or extend the power cable.
 - There is risk of fire or electric shock.
- Do not install, remove, or re-install the unit by yourself (customer).
 - There is risk of fire, electric shock, explosion, or injury.
- · Be cautious when unpacking and installing the product.
 - Sharp edges could cause injury. Be especially careful of the case edges and the fins on the condenser and evaporator.
- For installation, always contact the dealer or an Authorized Service Center.
 - There is risk of fire, electric shock, explosion, or injury.
- Do not install the product on a defective installation stand.
 - It may cause injury, accident, or damage to the product.
- Do not turn on the breaker or power under condition that front panel, cabinet, top cover, control box cover are removed or opened.
 - Otherwise, it may cause fire, electric shock, explosion or death.
- Be sure the installation area does not deteriorate with age.
 - If the base collapses, the air conditioner could fall with it, causing property damage, product failure, and personal injury.
- Use a vacuum pump or Inert (nitrogen) gas when doing leakage test or air purge. Do not compress air or Oxygen and Do not use Flammable gases. Otherwise, it may cause fire or explosion.
 - There is the risk of death, injury, fire or explosion.
- The appliance shall be stored in a well-ventilated area where the room size corresponds to the room area as specified for operation. (for R32)
- Ducts connected to an appliance shall not contain an ignition source. (for R32)
- The appliance shall be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater.)

- Keep any required ventilation openings clear of obstruction.
- The appliance shall be installed in accordance with the national wiring regulation.
- This appliance incorporates an earth connection for functional purposes only.
- This appliance is not intended to be accessible to the general public
- Always ground the product.
 - There is risk of fire or electric shock
- install the product so that the nosie or hot wind from the outdoor unit may not cause any damange to the neighbors.
 - Otherweise, it may cause dispute with the neighbors.
- Keep level parallel in installing the product.
 - Otherwise, it may cause vibration or water leakage
 - It may cause injury or an accident
- Replace the all batteries in the remote control with new ones of the same type. Do not mix old and new batteries or different types of barreies.
- Take care so that children may not step on the outdoor unit
 - Otherwise, Children may be seriously injured due to falling down.
- Always inspect gas leakage after the installation and repair of product.
 - Otherwise, it may casue the failure of product
- Equipment piping in the occupied space shall be installed in such a way to protect against accidental damage in operation and service
- Flexible pipe elements shall be protected against mechanical damage, excessive stress by torsion, or other forces. They should be checked for mechanical damage annuall
- Field-made refrigerant joints indoors shall be tightness tested. The test method shall have a sensitivity of 5 grams per year of refrigerant or better under a pressure of at least 0.25 times the maximum allowable pressure. No leak shall be detected.
- Where safety shut off valves are specified, the minimum room area may be determined based on the maximum amount of refrigerant that can be leaked as determined in GG.12.2
- Where safety shut off valves are specified, the location of the valve in the refrigerating system relative to the occupied spaces shall be as described in GG.12.1.

- The indoor equipment and pipes shall be securely mounted and guarded such that accidental rupture of equipment cannot occur from such events as moving furniture or reconstruction activities.
- Solenoid valves shall be correctly positioned in the piping to avoid hydraulic shock.
- Solenoid valves shall not block in liquid refrigerant unless adequate relief is provided to the refrigerant system low pressure side.
- Protection devices, piping and fittings shall be protected as far as possible against adverse environmental effects, for example, the danger of water collecting and freezing in relief pipes or the accumulation of dirt and debris.
- Precautions shall be taken to avoid excessive vibration or pulsation to refrigerating piping.
- Piping in refrigerating systems shall be so designed and installed to minimize the likelihood hydraulic shock damaging the system.
- Provision shall be made for expansion and contraction of long runs of piping.
- Steel pipes and components shall be protected against corrosion with a rustproof coating before applying any insulation.
- For mechanical ventilation as specified in GG.8.3, the air extraction opening from the room shall be located equal or below the refrigerant release point. For floor mounted units, it shall be as low as practicable. The air extraction openings shall be located in a sufficient distance from the air intake openings to prevent re-circulation to the space.
- servicing shall be performed only as recommended by the manufacturer

Operation

- Take care to ensure that power cable could not be pulled out or damaged during operation.
 - There is risk of fire or electric shock.
- Do not place anything on the power cable.
 - There is risk of fire or electric shock.
- Do not touch(operate) the product with wet hands.
 - There is risk of fire or electrical shock.
- Do not place a heater or other appliances near the power cable.
 - There is risk of fire and electric shock.

- Do not allow water to run into electric parts.
 - It may cause There is risk of fire, failure of the product, or electric shock.
- Do not store or use flammable gas or combustibles near the product.
 - There is risk of fire or failure of product.
- Do not use the product in a tightly closed space for a long time.
 - Oxygen deficiency could occur.
- When flammable gas leaks, turn off the gas and open a window for ventilation before turn the product on.
 - Do not use the telephone or turn switches on or off. There is risk of explosion or fire.
- If strange sounds, smell or smoke comes from product. Turn the breaker off or disconnect the power supply cable.
 - There is risk of electric shock or fire.
- Stop operation and close the window in storm or hurricane. If possible, remove the product from the window before the hurricane arrives.
 - There is risk of property damage, failure of product, or electric shock.
- Do not open the inlet grill of the product during operation. (Do not touch the electrostatic filter, if the unit is so equipped.)
 - There is risk of physical injury, electric shock, or product failure.
- When the product is soaked (flooded or submerged), contact an Authorized Service Center
 - There is risk of fire or electric shock.
- Be cautious that water could not enter the product.
 - There is risk of fire, electric shock, or product damage.
- Ventilate the product from time to time when operating it together with a stove, etc.
 - There is risk of fire or electric shock.
- Turn the main power off when cleaning or maintaining the product.
 - There is risk of electric shock.
- Take care to ensure that nobody could step on or fall onto the outdoor unit.
 - This could result in personal injury and product damage.
- Do not let the air conditioner run for a long time when the humidity is very high and a door or a window is left open.
 - Moisture may condense and wet or damage furniture.

- Do not turn on the breaker or power under condition that front panel, cabinet, top cover, control box cover are removed or opened.
 - Otherwise, it may cause fire, electric shock, explosion or death.
- Do not plug or unplug the power supply plug during operation.
 - There is risk of fire or electric shock.
- When the product is not be used for a long time, disconnect the power supply plug or turn off the breaker.
 - There is risk of product damage or failure, or unintended operation.

A CAUTION

Installation

- Always check for gas (refrigerant) leakage after installation or repair of product.
 - Low refrigerant levels may cause failure of product.
- Install the drain hose to ensure that water is drained away properly.
 - A bad connection may cause water leakage.
- · Keep level even when installing the product.
 - To avoid vibration or water leakage.
- Use two or more people to lift and transport the product.
 - Avoid personal injury.
- Any person who is involved with working on or breaking into a refrigerant circuit should hold a current valid certificate from an industry accredited assessment authority, which authorizes their competence to handle refrigerants safely in accordance with an industry recognized assessment specification. (for R32)
- The appliance shall be stored so as to prevent mechanical damage from occurring.
- Do not install the product where the noise or hot air from the outdoor unit could damage the neighborhoods.
 - It may cause a problem for your neighbors.
- If anyone other than a licensed professional installs, repairs, or alters LG Electronics air conditioning products, the warranty is voided.
 - All costs associated with repair are then the full responsibility of the owner.

- Do not install the unit in potentially explosive atmospheres.
- In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
- · Qualification of workers

The manual shall contain specific information about the required qualification of the working personnel for maintenance, service and repair operations. Every working procedure that affects safety means shall only be carried out by competent persons according to Annex HH.

Examples for such working procedures are:

- Breaking into the refrigerating circuit;
- Opening of sealed components:
- Opening of ventilated enclosures.

Operation

- Do not expose the skin directly to cool air for long periods of time. (Don't sit in the draft.)
 - This could harm to your health.
- Do not use the product for special purposes, such as preserving foods, works of art, etc. It is a consumer air conditioner, not a precision refrigeration system.
 - There is risk of damage or loss of property.
- Do not block the inlet or outlet of air flow.
 - It may cause product failure.
- Use a soft cloth to clean. Do not use harsh detergents, solvents, etc.
 - There is risk of fire, electric shock, or damage to the plastic parts of the product.
- Do not touch the metal parts of the product when removing the air filter. They are very sharp!
 - There is risk of personal injury.
- Do not step on or put anything on the product. (outdoor units)
 - There is risk of personal injury and failure of product.

- Always insert the filter securely. Clean the filter every two weeks or more often if necessary.
 - A dirty filter reduces the efficiency of the air conditioner and could cause product malfunction or damage.
- Do not insert hands or other objects through the air inlet or outlet while the product is operated.
 - There are sharp and moving parts that could cause personal injury.
- Do not drink the water drained from the product.
 - It is not sanitary and could cause serious health issues.
- Use a firm stool or ladder when cleaning or maintaining the product.
 - Be careful and avoid personal injury.
- Servicing shall only be performed as recommended by the equipment manufacturer. Maintenance and repair requiring the assistance of other skilled personnel shall be carried out under the supervision of the person competent in the use of flammable refrigerants. (for R32)
- This appliance is not intended for use by persons (including children)
 with reduced physical, sensory or mental capabilities or lack of
 experience and knowledge, unless they have been given supervision
 or instruction concerning use of the appliance by a person responsible
 for their safety.
 - Children should be supervised to ensure that they do not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
 - Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not touch refrigerant pipe and water pipe or any internal parts while the unit is operating or immediately after operation.
 - It can cause a burn or frostbite.

Prior to Operation

Preparing for Operation

- 1. Contact an installation specialist for installation.
- 2. Use a dedicated circuit.

Usage

- 1. Being exposed to direct airflow for an extended period of time could be hazardous to your health. Do not expose occupants, pets, or plants to direct airflow for extended periods of time.
- 2. Due to the possibility of oxygen deficiency, ventilate the room when used together with stoves or other heating devices.
- 3. Do not use this air conditioner for non-specified special purposes (e.g. preserving precision devices, food, pets, plants, and art objects). Such usage could damage the items.

Cleaning and Maintenance

- Do not touch the metal parts of the unit when removing the filter. Injuries can occur when handling sharp metal edges.
- Do not use water to clean inside the air conditioner. Exposure to water can destroy the insulation, leading to possible electric shock.
- 3. When cleaning the unit, first make sure that the power and breaker are turned off. The fan rotates at a very high speed during operation. There is a possibility of injury if the unit's power is accidentally triggered on while cleaning inner parts of the unit.


Service

For repair and maintenance, contact your authorized service dealer.

Operating Instructions

Forced Operation

Operation procedures when the remote control can't be used. Press the tact switch (ON/OFF button) for 2 seconds. If you want to stop operation, press again the tact switch.

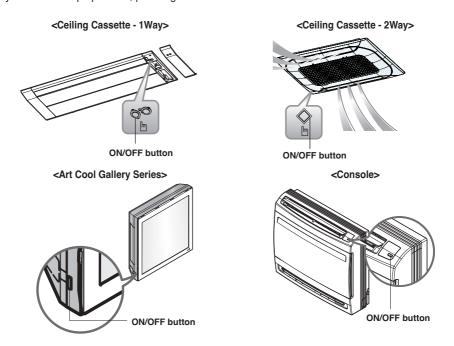

^{*} The feature may be changed according to the type of model.

Auto Restart Function

In case the power comes on again after a power failure, auto restarting operation is the function to operate procedures automatically to the previous operating conditions.

Maintenance and Service

Ceiling Cassette - 1Way (Grille + Panel)

A CAUTION

Before performing any maintenance, turn off the main power to the system.


■ Turn the system off before cleaning. Clean the unit with a soft dry cloth. Do not use bleach or abrasives.

NOTE


Power supply must be disconnected before cleaning the indoor unit

Air Filter

The air filters behind the front grille should be checked and cleaned once in every 2 weeks or more often if necessary.

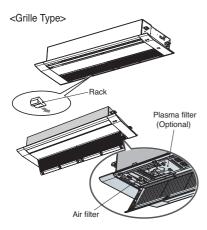


<Panel Type>

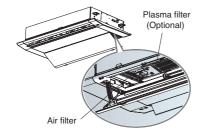


TT chassis: 6 EA Rack TU chassis: 4 EA Rack

- Never use any of the followings:
 - Water hotter than 40 °C.
 Could cause deformation
 and/or discoloration.
 - Volatile substances. Could damage the surfaces of the air conditioner.



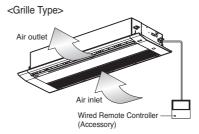

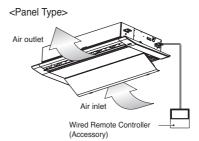

1. Remove air filters.

A CAUTION

When the air filter is to be removed, do not touch the metal parts of the indoor unit. It may cause an injury.

- 2. Remove Plasma filter (Optional).
 - Unscrew 2 screws from Plasma filter (Optional).
- Clean dirt from the air filter using a vacuum cleaner or washing with water.
 - If dirt is conspicuous, wash with a neutral detergent in lukewarm water.
 - If hot water (40 °C or more) is used, it may be deformed.
- After washing with water, dry well in the shade.
 - Do not expose the air filter to direct sunlight or heat from a fire when drying it.
- 5. Install Plasma filter (Optional) and air filter.


Ceiling Cassette - 1Way (With Air Purifier)

Cleaning the filter


A CAUTION

Before performing any maintenance, turn off the main power to the system.

1. Pull on the handles on both ends of the marked rear side of the front panel, then open the front grille and press down on the two hooks and remove the Pre-filter.

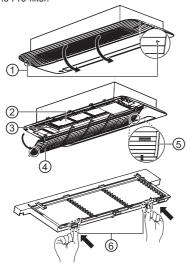

- Clean with a vacuum cleaner or a soft brush.
 - · If the filter is very dirty, wash using water and a neutral detergent.
- 3. Allow the filter to dry in the shade until completely
- 4. Install the filter in the reverse order from which it was removed, then close the front grille.
 - · When installing the filter, insert the hook in the square hole.

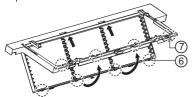

- Marker
- 2 Pre-Filter
- ③ Filter case
- 4 Front intake grille
- ⑤ Handle
- 6 Hook
- (7) Square hole

▲ WARNING

For safety, turn off the main power switch.

CAUTION


- · Make sure that the filter is properly installed in the filter case. (When you insert the filter into the case and push the handle, you will hear a clicking sound when it is secured in place.)
- · Be careful not to drop the front grille when removing
- Do not use volatile liquids or water that is 40 °C or
- · Using the filter when it is not completely dry could cause the product to malfunction.
- · Drying the filter near a fire or in direct sunlight may cause damage to the filter.
- · When cleaning the filter, be careful not to damage the filter's mesh.

NOTE


- · If dust gets in the filter, there could be a drop in cooling capacity.
- · Clean around once every two weeks.
- · If you have the filter cleaned at an LG Electronics Service Center, a separate fee may be charged. (paid service)
- The number and type of filters provided may differ depending on the model.
- · Product shape and components may differ depending on the model.
- The feature may be changed according to the type of
- · Some functions may not be supported, depending on the model.


Cleaning the deodorization filter/PM1.0 filter (Optional)

- 1. Refer to 'How to Remove the Filter' when removing the filter.
- 2. Grab the handle on the filter case holder and pull in the direction of the arrow to remove the PM1.0
 - · Do not remove the filter case holder and the intake grille.

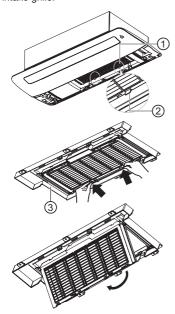


3. As shown in the figure, pull on the handle and remove the deodorization filter.

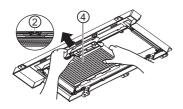

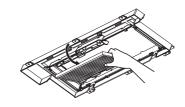

- 4. Wash the filter after checking the washing method in 'Filter Information'.
- 5. After washing, reinstall the deodorization filter and the PM1.0 filter to their original positions, respectively.
 - · When installing the PM1.0 filter, insert the hook in the square hole.

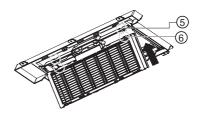

- 1 PM1.0 filter
- ② Handle
- 3 Filter case holder
- (4) deodorization filter
- (5) Hook
- 6 Square hole

▲ WARNING

For safety, turn off the main power switch.

NOTE

- · The feature may be changed according to the type of model.
- · Some functions may not be supported, depending on the model.

CAUTION

- · Be careful that the filter case is correctly assembled to the filter holder.
- · Be careful not to drop the front grille when removing the filter.
- Do not wash the dust filter with hot water over 40 °C or volatile liquids.
- · Do not wash the photocatalytic Deodorization filter in water.
- After cleaning the PM1.0 filter, the buzzer sounds 7 times if the water is not completely dry. Dry the filter thoroughly.
- Drying the filter near a fire or in direct sunlight may cause damage to the filter.
- · Wear gloves during installation.

NOTE

- · The quantity and type of filters provided by each model may differ.
- · The feature may be changed according to the type of
- · Some functions may not be supported, depending on the model.


Filter Information

Filter Name	Filter Description
Deodorization filter	Dry for 3 hours in sunlight or under fluorescent light. It is recommended to clean it every six months. (assuming 8 hours of daily use) Washing the filter with water could damage or deform it.
PM1.0 filter	Clean the filter without disassembling it. Submerge the PM1.0 filter in water, shaking it several times to clean it. If the filter is very dirty, soak it for 30 minutes in lukewarm water with mild detergent and rinse thoroughly with clean water. (Do not use acidic detergents such as citric acid.) It is recommended to clean it every six months. Dry it thoroughly in the shade for about a day. (If there is any remaining moisture, the buzzer will sound 7 times.) Drying with a hot air heater, such as a hair dryer or a heater, could damage or deform the filter. The inside of the filter is sharp, so do not rub or touch it directly.


Cleaning the PM1.0 Sensor

PM1.0 Sensor


1. As shown in the figure below, put your finger in the indicator.

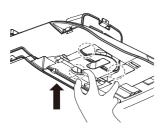


2. Open the front panel and lower the PM1.0 Sensor case as shown in the figure below.

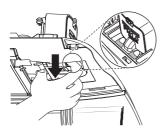


3. Once the PM1.0 Sensor case is lowered all the way, turn the PM1.0 Sensor case to secure it as shown in the figure below.

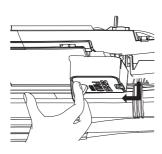

4. Open the PM1.0 sensor cover on the side of the case.

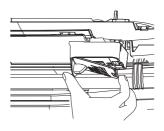

5. Use a slightly wet cotton swab to wipe dust off the lens, and then use a dry swab to remove the moisture.

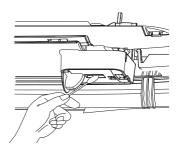

6. Close the PM1.0 Sensor case cover, then install the PM1.0 Sensor case in its original position.

▲ WARNING

- For safety, turn off the main power switch.
- · Be careful not to drop the product when removing the PM1.0 Sensor corner cover.
- · Be careful of falling accidents when cleaning the PM1.0 Sensor.

NOTE

- It is recommended to clean it every six months. (assuming 8 hours of daily use)
- PM1.0 Sensor is only included with Air purification
- · The feature may be changed according to the type of model.
- · Some functions may not be supported, depending on the model.

Ceiling Cassette - 2Way

A CAUTION

Before performing any maintenance, turn off the main power to the system.

Grille, Case, and Remote Control


■ Turn the system off before cleaning. Clean the unit with a soft dry cloth. Do not use bleach or abrasives.

NOTE


Power supply must be disconnected before cleaning the indoor unit.

Air Filters

The air filters behind the front grille should be checked and cleaned once in every 2 weeks or more often if necessary.

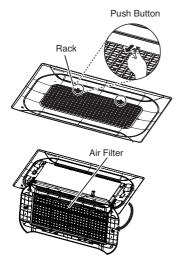

- Never use any of the followings:
 - Water hotter than 40 °C.
 Could cause deformation and/or discoloration.
 - Volatile substances. Could damage the surfaces of the air conditioner.

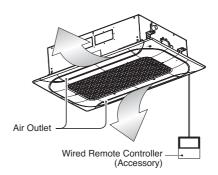

1. Remove the Air filters.

A CAUTION

When the air filter is to be removed, do not touch the metal parts of the indoor unit. It may cause an injury.

- 2. Clean dirt from the air filter using a vacuum cleaner or washing with water.
 - If dirt is conspicuous, wash with a neutral detergent in lukewarm water.
 - If hot water (40 °C or more) is used, it may be deformed.
- 3. After washing with water, dry well in the shade.
 - Do not expose the air filter to direct sunlight or heat from a fire when drying it.
- 4. Install the air filter.

Ceiling Cassette - 4Way

▲ CAUTION

Before performing any maintenance, turn off the main power to the system.

Grille. Case. and Remote Control


■ Turn the system off before cleaning. Clean the unit with a soft dry cloth. Do not use bleach or abrasives.

NOTE

Power supply must be disconnected before cleaning the indoor unit.


Air Filters


The air filters behind the front grille should be checked and cleaned once in every 2 weeks or more often if necessary.

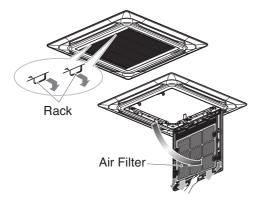

- Never use any of the followings:
 - · Water hotter than 40 °C. Could cause deformation and/or discoloration.
 - · Volatile substances. Could damage the surfaces of the air conditioner.



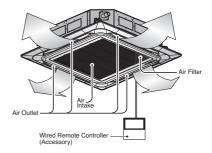

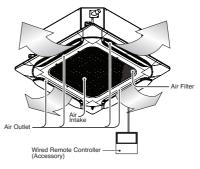

1. Remove the Air filters.


A CAUTION

When the air filter is to be removed, do not touch the metal parts of the indoor unit. It may cause an injury.


- 2. Clean dirt from the air filter using a vacuum cleaner or washing with water.
 - If dirt is conspicuous, wash with a neutral detergent in lukewarm water.
 - If hot water (40 °C or more) is used, it may be deformed.
- 3. After washing with water, dry well in the shade.
 - Do not expose the air filter to direct sunlight or heat from a fire when drying it.
- 4. Install the air filter.

Cleaning the deodorization filter/PM1.0 filter (Optional)


1. Press the fixing hooks on both sides and open the front grille.

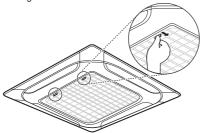

2. Remove PM1.0 filter by pressing the fixing hook.

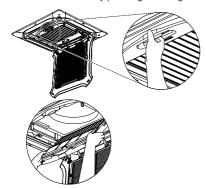

3. Remove the photocatalyst Deodorization filter by pulling upward.

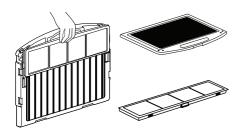

4. After assembling in reverse order, close the front grille.

WARNING

For safety, turn off the main power switch.

A CAUTION

- · Be careful that the filter case is correctly assembled to the filter holder.
- · Be careful not to drop the front arille when removing the filter.
- · Do not wash the dust filter with hot water over 40 °C or volatile liquids.
- Do not wash the photocatalytic Deodorization filter in water.
- After cleaning the PM1.0 filter, the buzzer sounds 7 times if the water is not completely dry. Dry the filter thoroughly.
- · Drying the filter near a fire or in direct sunlight may cause damage to the filter.
- · Wear gloves during installation.

NOTE

- · The quantity and type of filters provided by each model may differ.
- · The feature may be changed according to the type of model.
- · Some functions may not be supported, depending on the model.

Filter Information

Filter Name	Filter Description
Deodorization filter	Dry for 3 hours in sunlight or under fluorescent light. It is recommended to clean it every six months. (assuming 8 hours of daily use) Washing the filter with water could damage or deform it.
PM1.0 filter	Clean the filter without disassembling it. Submerge the PM1.0 filter in water, shaking it several times to clean it. If the filter is very dirty, soak it for 30 minutes in lukewarm water with mild detergent and rinse thoroughly with clean water. (Do not use acidic detergents such as citric acid.) It is recommended to clean it every six months. Dry it thoroughly in the shade for about a day. (If there is any remaining moisture, the buzzer wil sound 7 times.) Drying with a hot air heater, such as a hair dryer or a heater, could damage or deform the filter. The inside of the filter is sharp,

so do not rub or touch it directly.


Cleaning the PM1.0 Sensor

PM1.0 Sensor

1. Remove the PM1.0 Sensor corner cover on the front panel.



2. Open the PM1.0 sensor case on the side of the PM1.0 Sensor case and remove the rubber cap.

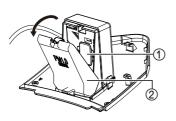

3. Use a cotton swab to wipe the dirt off the lens, and then use a dry swab to remove the moisture.



Tighten the rubber cap, close the PM1.0 sensor case, and assemble the PM1.0 Sensor corner cover to its original position.

- 1 Rubber cap
- 2 PM 1.0 sensor case



- · For safety, turn off the main power switch.
- · Be careful not to drop the product when removing the PM1.0 Sensor corner cover.
- · Be careful of falling accidents when cleaning the PM1.0 sensor.

NOTE

- It is recommended to clean it every six months. (assuming 8 hours of daily use)
- PM1.0 Sensor is only included with Air purification panel.
- · The feature may be changed according to the type of model.
- · Some functions may not be supported, depending on the model.

Ceiling Cassette - Round

CAUTION

Before performing any maintenance, turn off the main power to the system.

Grille. Case. and Remote Control


■ Turn the system off before cleaning. Clean the unit with a soft dry cloth. Do not use bleach or abrasives.

NOTE

Power supply must be disconnected before cleaning the indoor unit.


Air Filters

The air filters behind the front grille should be checked and cleaned once in every 2 weeks or more often if necessary.

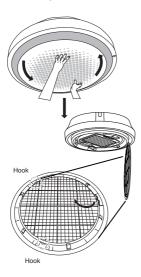

- Never use any of the followings:
 - Water hotter than 40 °C. Could cause deformation and/or discoloration.
 - · Volatile substances. Could damage the surfaces of the air conditioner.



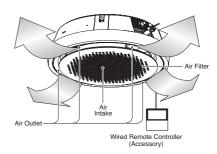

1. Remove the Air filters.

A CAUTION

When the air filter is to be removed, do not touch the metal parts of the indoor unit. It may cause an injury.

- 2. Clean dirt from the air filter using a vacuum cleaner or washing with water.
- If dirt is conspicuous, wash with a neutral detergent in lukewarm water.
- If hot water (40 °C or more) is used, it may be deformed.
- 3. After washing with water, dry well in the shade.
 - Do not expose the air filter to direct sunlight or heat from a fire when drying it.
- 4. Install the air filter.

Ceiling Concealed Duct & Fresh Air Intake Unit

A CAUTION

Before performing any maintenance, turn off the main power to the system.

Grille, Case, and Remote Control

■ Turn the system off before cleaning. Clean the unit with a soft dry cloth. Do not use bleach or abrasives.


NOTE


Power supply must be disconnected before cleaning the indoor unit.


Air Filter

The air filters behind Indoor unit (the suction side) should be checked and cleaned once in every 2 weeks or more often if necessary.



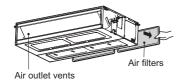

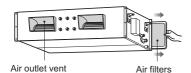

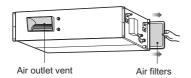

- ☐ Never use any of the followings:
 - · Water hotter than 40 °C Could cause deformation and/or discoloration
 - Volatile substances Could damage the surfaces of the air conditioner.



1. Remove the Air filters.

A CAUTION

When the air filter is to be removed, do not touch the metal parts of the indoor unit. It may cause an injury.

- 2. Clean dirt from the air filter using a vacuum cleaner or washing with water.
 - If dirt is conspicuous, wash with a neutral detergent in lukewarm water.
 - If hot water (40 °C or more) is used, it may be deformed.
- 3. After washing with water, dry well in the shade.
 - Do not expose the air filter to direct sunlight or heat from a fire when drying it.
- 4. Install the air filter.

^{*} The feature can be changed according to the type of model.

Concealed Floor Standing

A CAUTION

Before performing any maintenance, turn off the main power to the system.

Grille, Case, and Remote Control


■ Turn the system off before cleaning. Clean the unit with a soft dry cloth. Do not use bleach or abrasives.

NOTE

Power supply must be disconnected before cleaning the indoor unit.

Air Filter

The air filters bottom Indoor unit (the suction side) should be checked and cleaned once in every 2 weeks or more often if necessary.

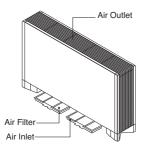

- Never use any of the followings:
 - Water hotter than 40 °C Could cause deformation and/or discoloration.
 - Volatile substances
 Could damage the surfaces of the air conditioner.



- Clean the filter with a vacuum or warm, soapy water.
 - If very dirty, wash with a solution of detergent in lukewarm water.
 - If hot water (40 °C or more) is used, filter may be deformed.
- 2. After washing with water, dry well in the shade.
- 3. Re-install the air filter.

Art Cool Gallery Series

A CAUTION

Before performing any maintenance, turn off the main power to the system, disconnect the circuit breaker and unplug the power cord.

Clean the unit with a soft dry cloth. Do not use bleach or abrasives.



Never use any of these

- Water hotter than 40 °C. It may cause deformation and discoloration.
- Volatile substances. They may damage the surface of the air conditioner.

Air Filters

The air filters behind the front panel / grill should be checked and cleaned once in every 2 weeks or more often if necessary. To remove the filters see the self explanatory diagrams for each model type. Clean the filters with a vacuum cleaner or warm soapy water. If dirt is not easily removed, wash with a solution of detergent in luke warm water. Dry well in shade after washing and reinstall the filters back in place.

Plasma Filters (Optional)

The plasma filters behind the air filter should be checked and cleaned once in every 3 months or more often if necessary. To remove the filters see the self explanatory diagrams for each model type. Clean the filters with a vacuum cleaner. If it is dirty wash it with water and dry well in shade an install back in place.

Deodorizer Filters

Remove the deodorizer filters behind the air filter and expose them in direct sunlight for 2 hours.

And then insert these filters into original position.


Removal of Filters


Art Cool Type:

Pull out the upper section of front panel and lift it up. Take out a filter with front panel held.

With PUSH button pressed, pull out grip to take out a plasma filter. Dry it completely in the shade after cleaning.

Then set a plasma filter and a filter orderly. Put the hook of front panel onto the hanger, in order to close the front panel.

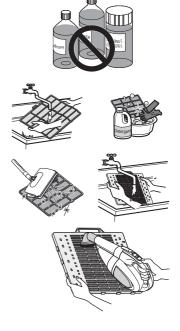

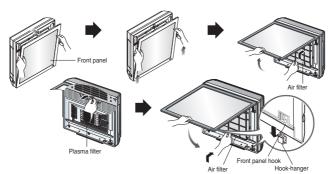

▲ CAUTION

Don't touch this plasma filter within 10 seconds after opening the inlet grille, it may cause an electric shock.

How to replace picture & photograph

1. Turn off power and then open the upper part of front panel.



2. Pull out the both links of lower part of front panel, as described in the below picture.



3. Push and close the top part of the front panel and then pull the bottom part of the panel forward until it is secured.



4. Take out picture.



with hand(s) until contacting

closely.

5. Turn upside-down of the picture and turn over mat, then take off a protective tape attached at the mat.






8. Slide the photo graph/drawing requested under both hanger parts as following, and fix them. Press the front panel lightly to close.



9. Push both links of lower part of panel inside and fix it. Then turn on.

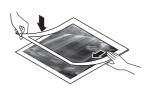





* In case a mat is not used, recommended size of a photo/picture: 522 mm x 522 mm

When powering on after replacing filter and picture, the front panel doesn't intervene.



Wall Mounted

CAUTION

Before performing any maintenance, turn off the main power to the system.

Never use any of the followings:

- Water hotter than 40 °C. Could cause deformation and/or discoloration.
- · Volatile substances. Could damage the surfaces of the air conditioner.

Air Filters

The air filters behind the front panel / grill should be checked and cleaned once in every 2 weeks or more often if necessary. To remove the filters see the self explanatory diagrams for each model type. Clean the filters with a vacuum cleaner or warm soapy water. If dirt is not easily removed, wash with a solution of detergent in luke warm water. Dry well in shade after washing and reinstall the filters back in place.







Clean the air filter

Clean the air filter once in every 2 weeks or more if necessary.


- 1. Turn off the power and unplug the power cord.
- 2. 5~24 kBtu/h: Hold the knob of air filter, Lift it up slightly. 30~36 kBtu/h: Open the front panel as shown.

5~24 kBtu/h 30~36 kBtu/h

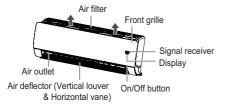

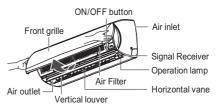

- * The feature can be changed according to type of model.
- 3. 5~24 kBtu/h: Hold the knob of air filter, Lift it up slightly and remove it from the unit. 30~36 kBtu/h: Pull the filter tab slightly forward to remove the air filter.

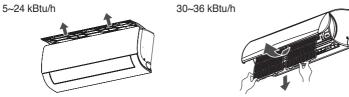

- * The feature can be changed according to type of model.
- 4. Clean the filter with a vacuum cleaner or with warm water.
 - If dirt is difficult to remove, wash the filter in lukewarm water with detergent.
- 5. Dry the filter in the shade.

The air filter can be broken when it is bended.

Convertible

CAUTION

Before performing any maintenance, turn off the main power to the system.

Grille, Case, and Remote Control

■ Turn the system off before cleaning. Clean the unit with a soft dry cloth. Do not use bleach or abrasives.

NOTE

Power supply must be disconnected before cleaning the indoor unit.


- Never use any of the followings:
 - Water hotter than 40 °C. Could cause deformation and/or discoloration.
 - · Volatile substances Could damage the surfaces of the air conditioner.



AIR FILTERS

The air filters behind the front grille should be checked and cleaned once in every 2 weeks or more often if

- 1. Lift the front access panel and pull the filter tab slightly forward to remove the filter.
- 2. Clean the filter with a vacuum cleaner or warm, soapy water.
 - If dirt is conspicuous, wash with a solution of detergent in lukewarm water.
 - If hot water (40 °C or more) is used, it may be deformed.
- 3. After washing with water, dry well in the shade.
- 4. Re-install the air filter.

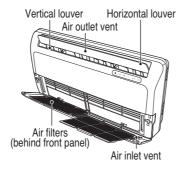

Console

CAUTION

Before performing any maintenance, turn off the main power to the system, disconnect the circuit breaker and unplug the power cord.

Cleaning of Panel and filters

Clean the unit with a soft dry cloth. Do not use bleach or abrasives.

CAUTION

Never use any of these

- Water hotter than 40 °C. It may cause deformation and discoloration.
- · Volatile substances. They may damage the surface of the air conditioner.

Air Filters

The air filters behind the front panel / grill should be checked and cleaned once in every 2 weeks or more often if necessary. To remove the filters see the self explanatory diagrams below. Clean the filters with a vacuum cleaner or warm soapy water. If dirt is not easily removed, wash with a solution of detergent in luke warm water, Dry well in shade after washing and reinstall the filters back in place.




Allergy Filter

Remove the Allergy Filter behind the air filter and expose them in direct sunlight for 2 hours.

And then insert these filters into original position.

Removal of Grille

- 1. Open the front grille by pulling forward
- 2. Then pull out the link of grille from groove in front panel.
- 3. Then pull out 2 hinges of grille from grooves in front panel.

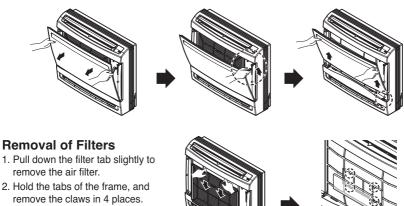

- 1. Pull down the filter tab slightly to remove the air filter.
- remove the claws in 4 places.



When the air conditioner is not going to be used for a long time

When it is not going to be used for a long time.



Operate the air conditioner at the following settings for 2 to 3 hours.

- Type of operation: Fan operation mode.
- · This will dry out the internal mechanisms.



Turn off the breaker.



Turn off the breaker when the air conditioner is not going to be used for a long time.

Dirt may collect and may cause a fire.

Helpful information

The air filters and your electric bill. If the air filters become clogged with dust, the cooling capacity will drop, and 6 % of the electricity used to operate the air conditioner will be wasted.

When the air conditioner is to be used again.



Clean the air filter and install it in the indoor unit.



Check that the air inlet and outlet of the indoor/outdoor unit are not blocked.



Check that the ground wire is connected correctly. It may be connect to the indoor unit side.

Operation Tips

Do not overcool the room.

This is not good for the health and wastes electricity.

Clean the air filter regularly.

Blockages in the air filter reduce the airflow and lower cooling and dehumidifying effects. Clean at least once every two weeks.

Keep blinds or curtains closed.

Do not let direct sunshine enter the room when the air conditioner is in operation.

> Ventilate the room occasionally.

Since windows are kept closed, it is a good idea to open them and ventilate the room now and then.

Make sure that the doors and windows are shut tight.

Avoid opening doors and windows as much as possible to keep the cool air in the room.



Before you call for service...

Troubleshooting Tips! Save time and money!

Check the following points before requesting repairs or service.... If the malfunction persist, please contact your dealer.

T 1	Here we have a state to the grown of the G
The air conditioner does not operate.	 Have you made a mistake in timer operation? Has the fuse blown or has the circuit breaker been tripped?
The room has a peculiar odor.	Check that this is not a damp smell exuded by the walls, carpet, furniture or cloth items in the room.
It seems that condensation is leaking from the air conditioner.	Condensation occurs when the airflow from the air conditioner cools the warm room air.
Air conditioner does not operate for about 3 minutes when restart.	This is the protector of the mechanism. Wait about three minutes and operation will begin.
Does not cool or heat effectively.	Is the air filter dirty? See air filter cleaning instructions. The room may have been very hot when the room air conditioner was first turned on. Allow time for it to cool down. Has the temperature been set incorrectly? Are the indoor unit's air inlet or outlet vents obstructed?
The air conditioner operation is noisy.	For a noise that sounds like water flowing. This is the sound of freon flowing inside the air conditioner unit. For a noise that sounds like the compressed air releasing into atmosphere. This is the sound of the dehumidifying water being processed inside the air conditioning unit.
Crack sound is heard.	This sound is generated by the expansion/ constriction of the front panel, etc. due to changes of temperature.
Remote control display is faint, or no display at all.	Are the batteries depleted? Are the batteries inserted in the opposite (+) and (-) directions?
The air conditioner changes generated airflow during operation.	When the air conditioner reaches the desired temperature, the airflow rate reduces in order to avoid generating cool airflow during heating, or to minimize energy consumption and indoor humidity change during cooling. This symptom is normal.
The buzzer sounds. (7 times)	Is the suction panel completely closed? Close the suction grille completely. Is the water completely dried after cleaning PM1.0 filter? If moisture remains, let it dry in the shade for about a day. Is PM1.0 filter film torn? Contact the LG Electronics Service Center.

NOTE

- · Water resistant: The outdoor side of this appliance is WATER RESISTANT. The indoor side is not water resistant and should not be exposed to excess water.
- Some functions may not be supported, depending on the model.



Manufacturer:

LG Electronics Inc.

84, Wanam-ro, Seongsan-gu, Changwon-si, Gyeongsangnam-do, KOREA

UK Importer : LG Electronics U.K. Ltd

Velocity 2, Brooklands Drive, Weybridge, KT13 0SL

Eco design requirement

• The information for Eco design is available on the following free access website. https://www.lg.com/global/support/cedoc/cedoc