

NB-Series Quick Start Guide




Set gas type, location, and label the appliance

Power on the water heater.

Water heater displays SEt.

Priority button LED blinks.


Push Priority button once.

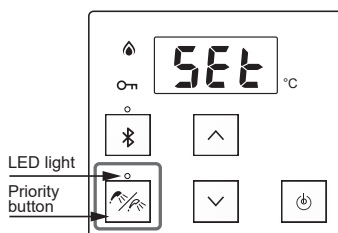

Controller displays nG.

Push up/down arrow to select gas type.


Push on/off button to confirm.

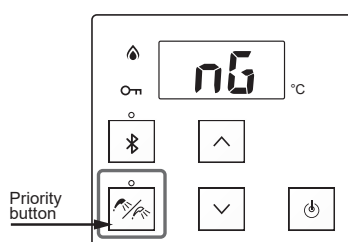

Controller displays In.


Push up/down arrow to select location.

Push on/off button to confirm.

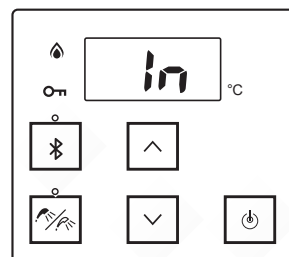

Controller alternates display between gas type and location.

Push up button to go back and change.

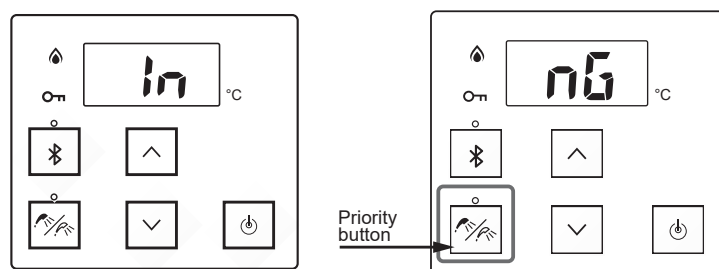

Push Priority button to confirm settings.

Controller displays 888 and beeps.

Controller alternates between gas type and set temperature.

Please see over for labelling

To check or change please see over

Rinnai

Labelling

In the plastic bag with the instruction manuals are the gas type and location labels.

Apply the selected gas type label in the position marked at the top of the data badge, like that shown for Universal LPG.



Check the appliance location on the warning label above the data badge.

Apply the correct location label over the existing text.




If changing from outdoor to indoor, be sure to cover over the text 'DO NOT ENCLOSE THIS APPLIANCE', like the example shown above.

To change gas type or location

1. Remove the front cover.
2. Push Button A on the PCB.
3. Push the up arrow to scroll to the parameter.
4. Push on/off button to change the value.


| | Parameter | Value |
|---------|-----------|-------|
| NG | 09 | c |
| LPG | 09 | A |
| Butane | 09 | b |
| Indoor | 16 | A |
| Outdoor | 16 | b |

Push button A on PCB to set values and return to normal operation.

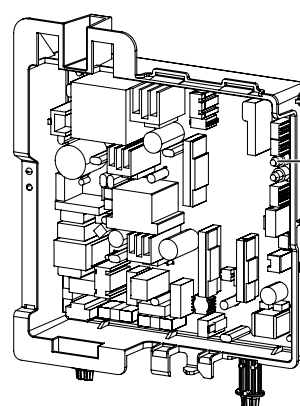

PB-A
Places PCB into programming mode.

Pressing PB-A again from a menu number will display the actual value, for example the temperature.

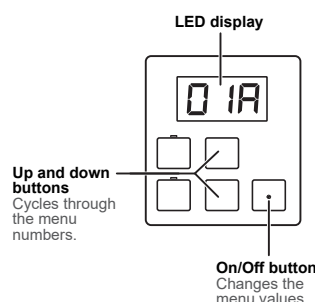

LED display

Up and down buttons
Cycles through the menu numbers.

On/Off button
Changes the menu values.