

HOVERAir

Propeller change instruction

Disassembly Step 1

Remove the screw * 6 pcs



Disassembly Step 2

Remove the lower frame



Disassembly Step 3

Remove the screw * 3 pcs



Disassembly Step 4

Remove the propeller



Notice: Please use same rotation type propeller for replacement.



Assembly Step 1

Install the new propeller and screw * 3



Assembly Step 2

Install the frame and screw * 6

