 



ÆElement Fusion for ANSI mortise locks

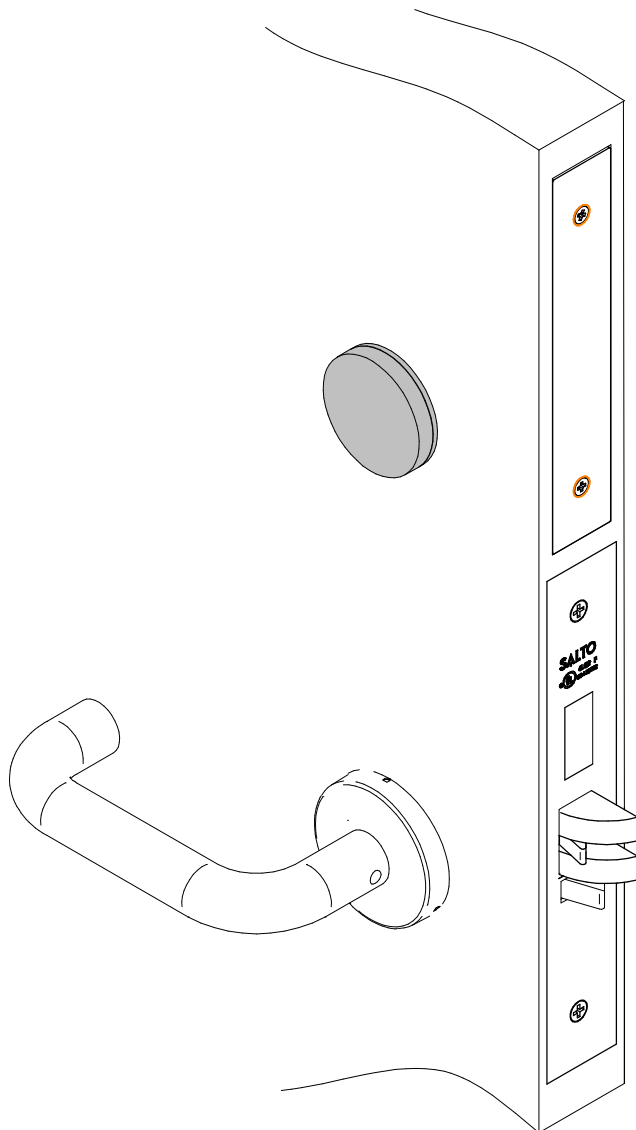

The ÆElement Fusion's small, customizable light ring reader offers a discreet electronic lock for any type of building looking to deploy electronic access control with a stylish, yet technologically-advanced solution. Salto offers a variety of door handles and finishes to complement any door style. The ÆElement Fusion ANSI version is specially designed to fit on ANSI standards profile doors.




 
AF i 2xx.. series
AF i 7xx.. series

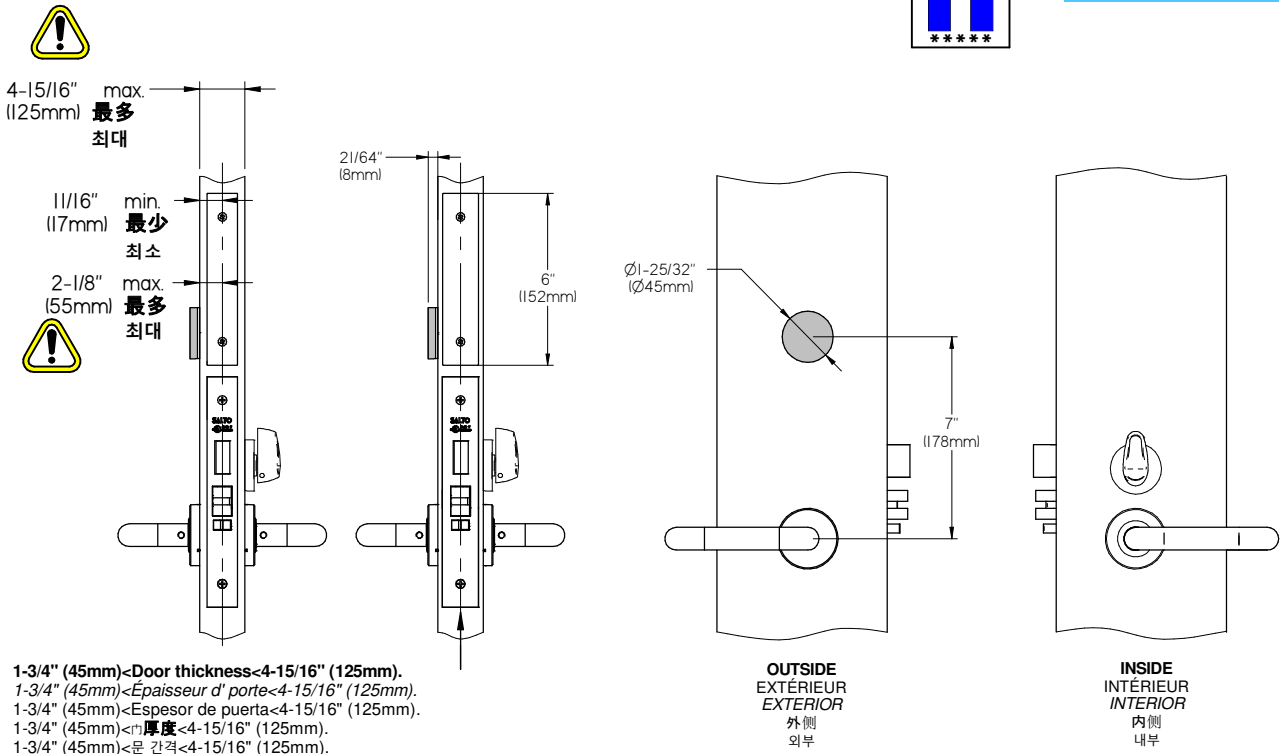

Only SALTO spindle.
Seulement carrés SALTO.
Solo cuadradillos SALTO.
只限SALTO的轴。
SALTO 스펀들만.

  Lock and control must be aligned.
La serrure et le contrôleur doivent être alignés.
Cerradura y control alineados.
螺栓 (取决于门的厚度)
잠금 및 제어가 정렬되어야 합니다.

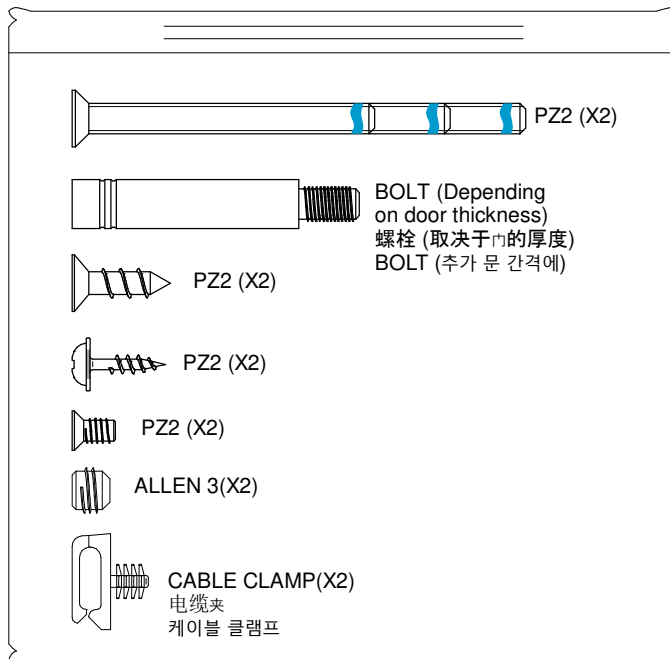

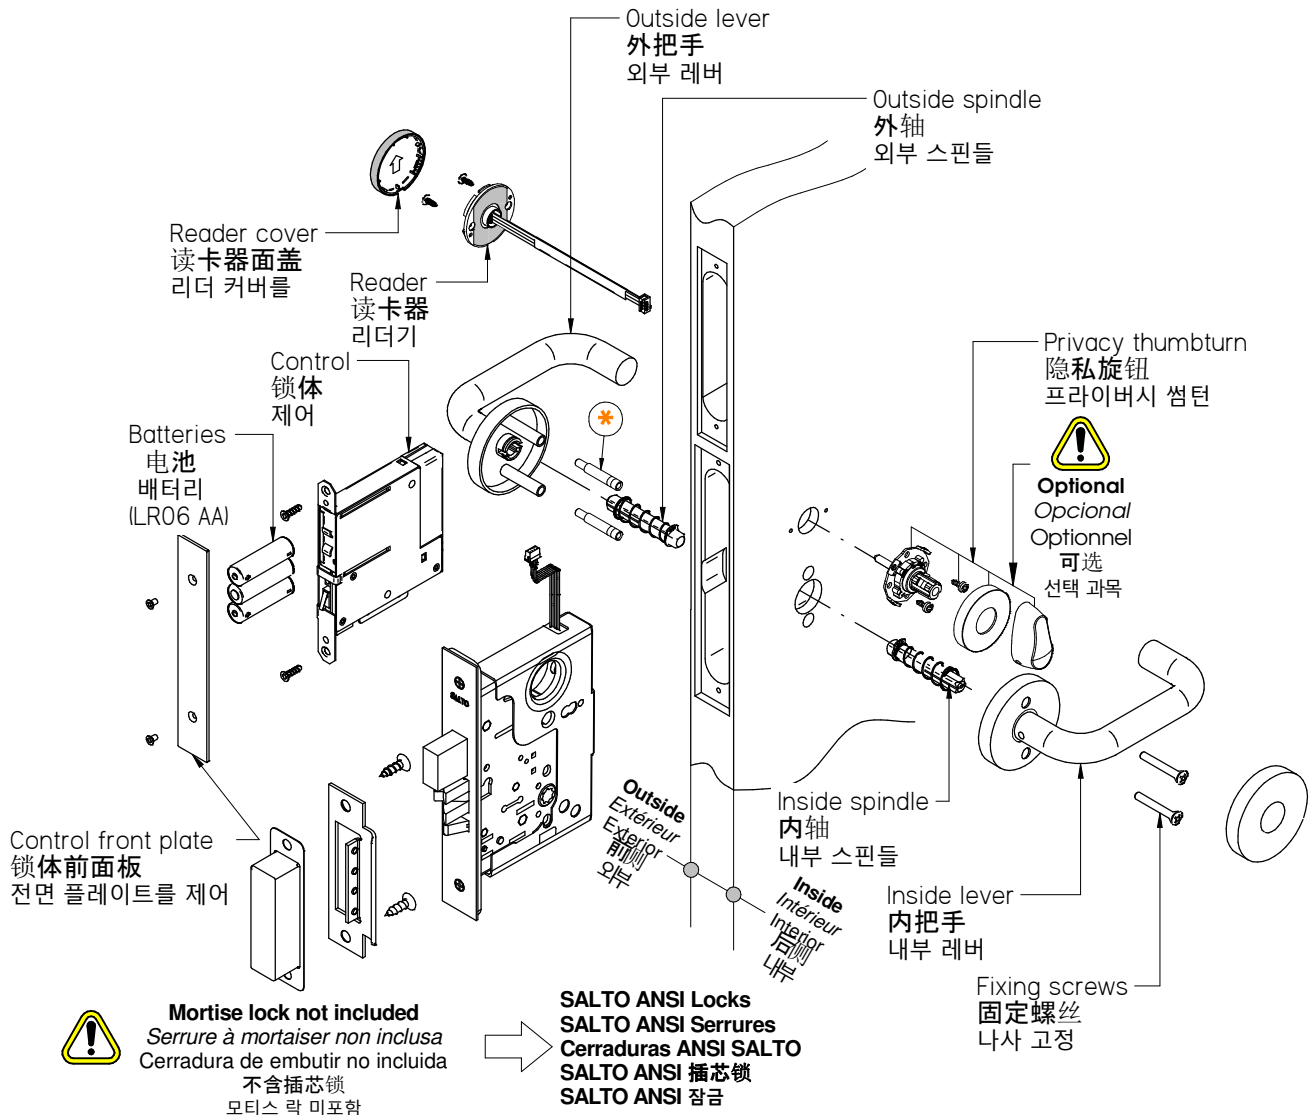

For door preparation see: 221373 or 4DS00020.
Pour préparation de la porte, voir: 221373 ou 4DS00020.
Para mecanizado de puerta, ver: 221373 ó 4DS00020.
有关门的准备, 请看: 221373-4DS00020.
문 준비를 위해: 221373 또는 4DS00020 를 보십시오.

The mounting with other spindles voids the guaranty.
Le montage d'autres carrés annule la garantie.
El montaje de otros cuadradillos anula la garantía.
与其他轴安装在一起, 则保修无效。
다른 스푼들과 함께 장착하면 보증이 무효화됩니다.

NOTE: Screws and spindles are included in the box of the reader.
NOTE: Les vis et les carrés sont inclus dans la boîte du lecteur.
NOTA: Los tornillos y cuadradillos están incluidos en la caja del lector.
注意: 螺丝和把手是包含在读卡器的盒子里
참고: 나사와 스푼들은 리더의 상자에 포함되어 있습니다.

(*) Only for door thickness > 2-9/16" (65mm).
(*) Seulement pour portes de épaisseur > 2-9/16" (65mm).
(*) Solo para grosor de puerta > 2-9/16" (65mm).
(*) 只用于厚度超过2-9/16" (65mm) 的门
(*) 도어 두께만 > 2-9/16"(65mm)

 
Recommendation for Customer's lever set installation on SALTO AElement. See : 4AN01299

Recommandation pour l'installation des béquilles client sur Salto AElement. Voir: 4AN01299


Recomendaciones para la instalación de manillas Cliente en SALTO AElement. Ver: 4AN01299

有关客户的把手组安装在SALTO Aelement上的建议, 请见:
SALTO AElement 에 고객의 레버 세트 설치 권장 사항. 참조:
4AN01299



1

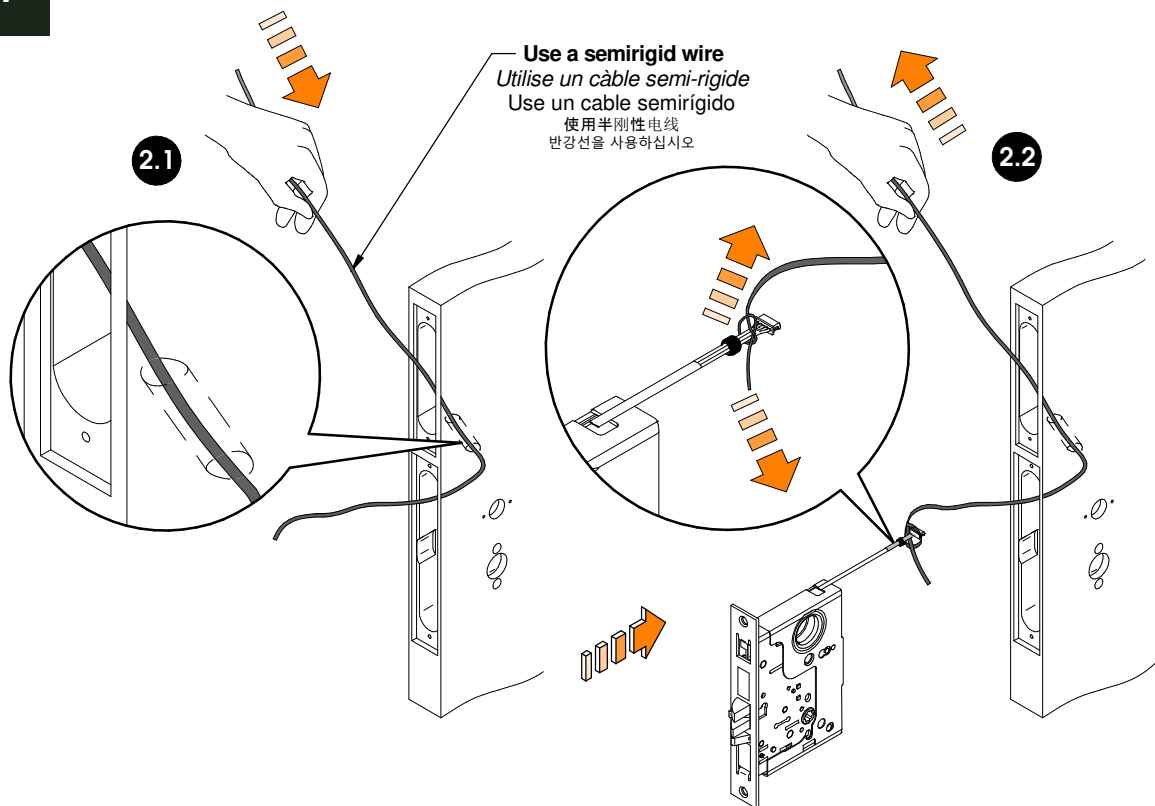


2

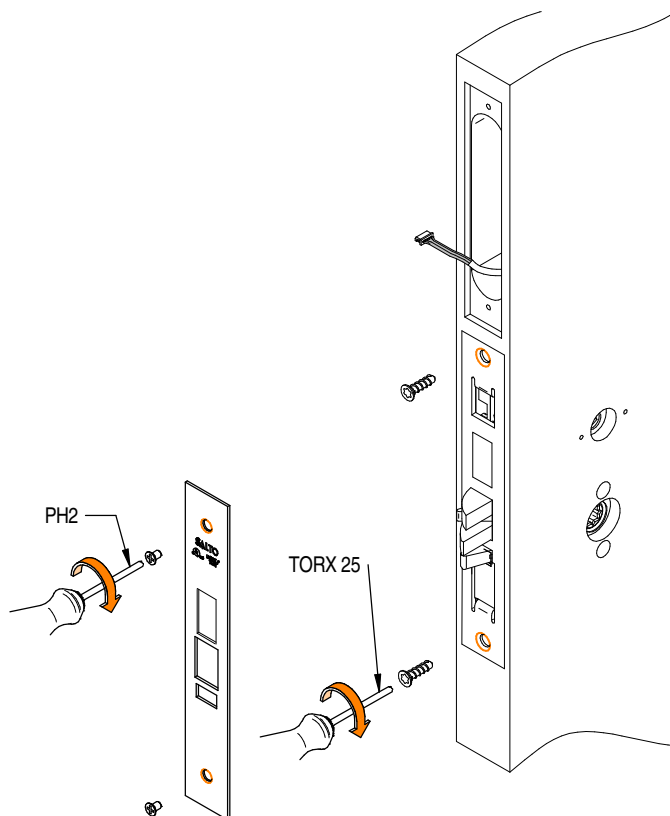 


3

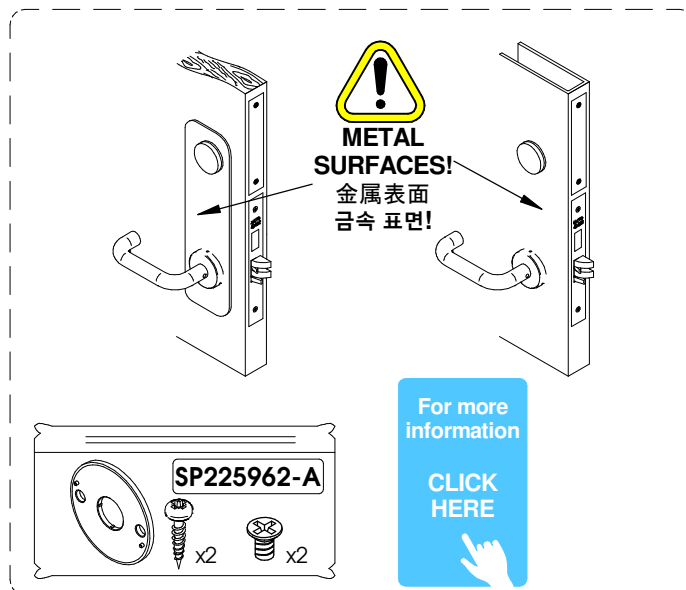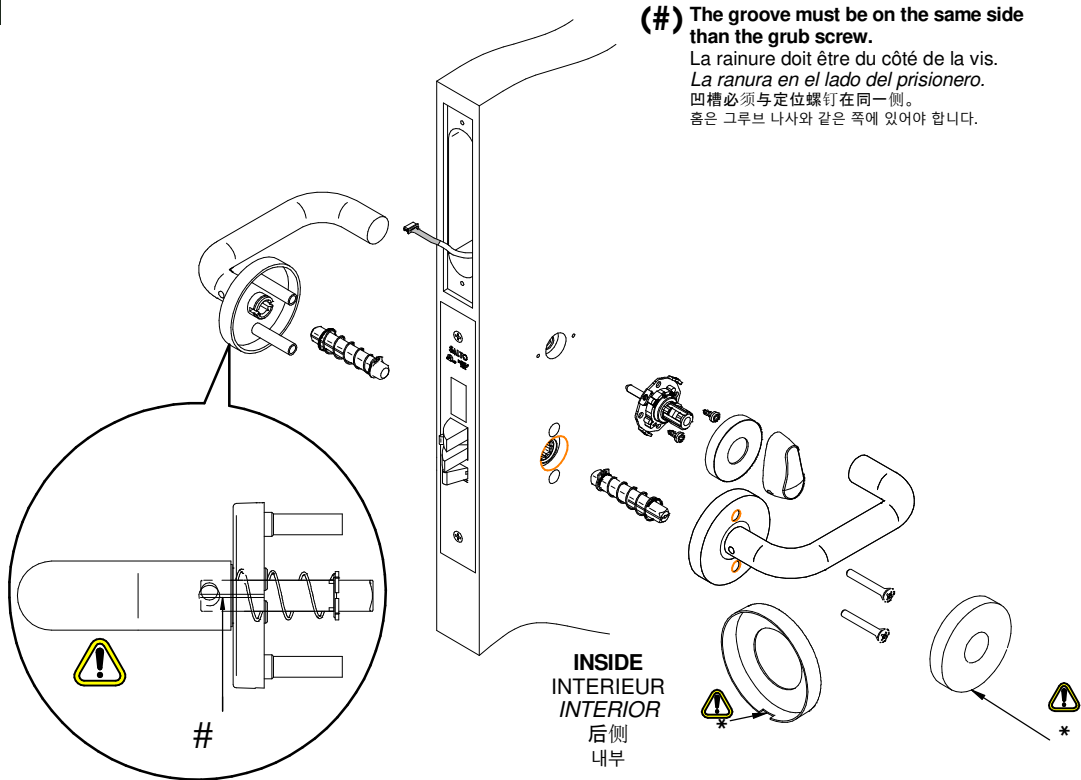  

4

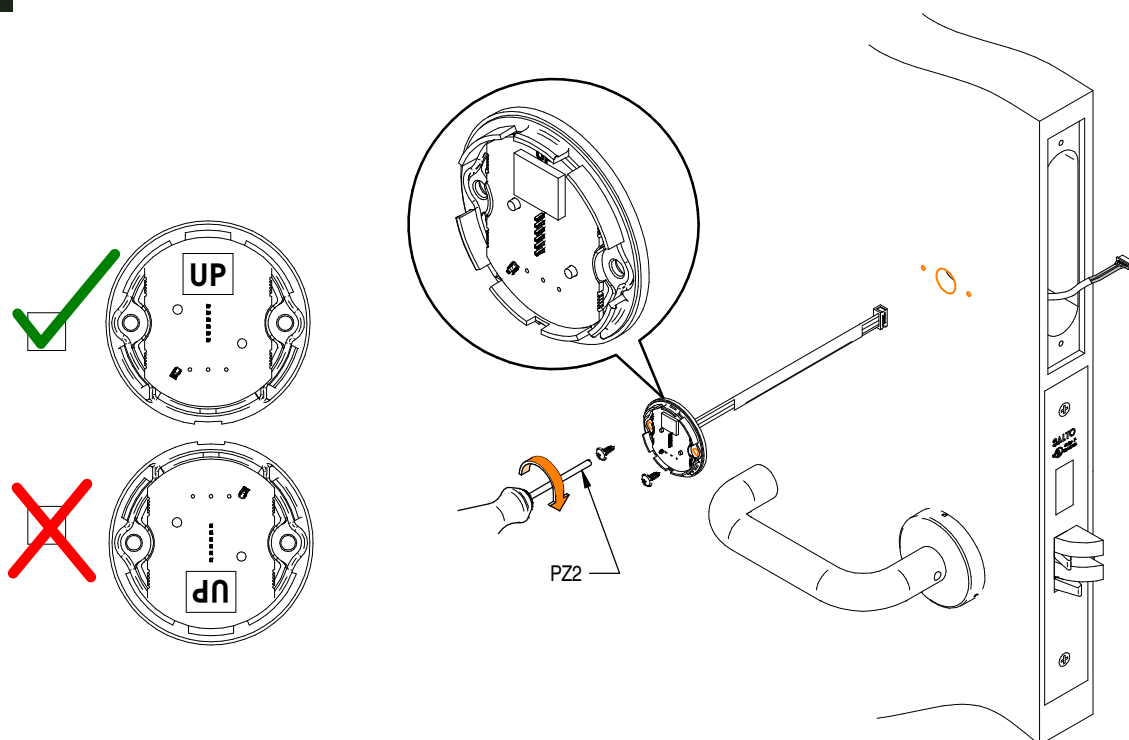 

5

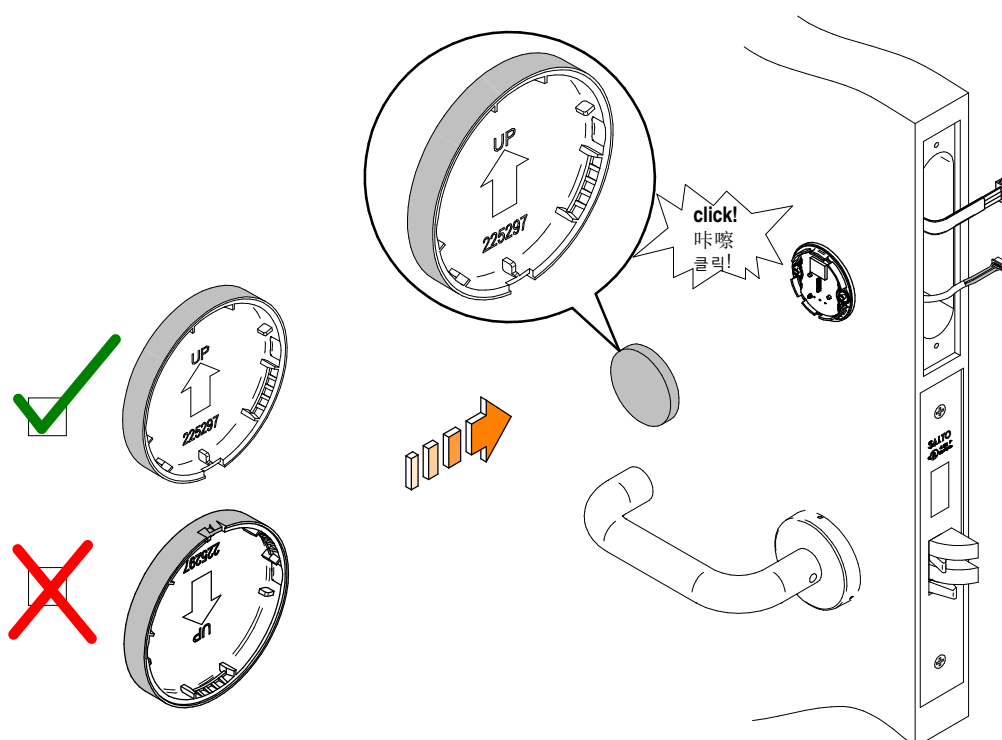 


(Eng) Cable connection (F) Câble de raccordement (E) Conexión cableado (ZH) 电线连接 (KR) 케이블 연결




Select an option depending on the position of the reader (a or b).
Sélectionnez une option en fonction de la position du lecteur (a ou b).
Seleccionar una opción dependiendo de la posición del lector (a ó b).
根据读卡器的位置选择一个选项 (a或b)
리더의 위치(a 또는 b)에 따라 옵션을 선택합니다.

 
6a

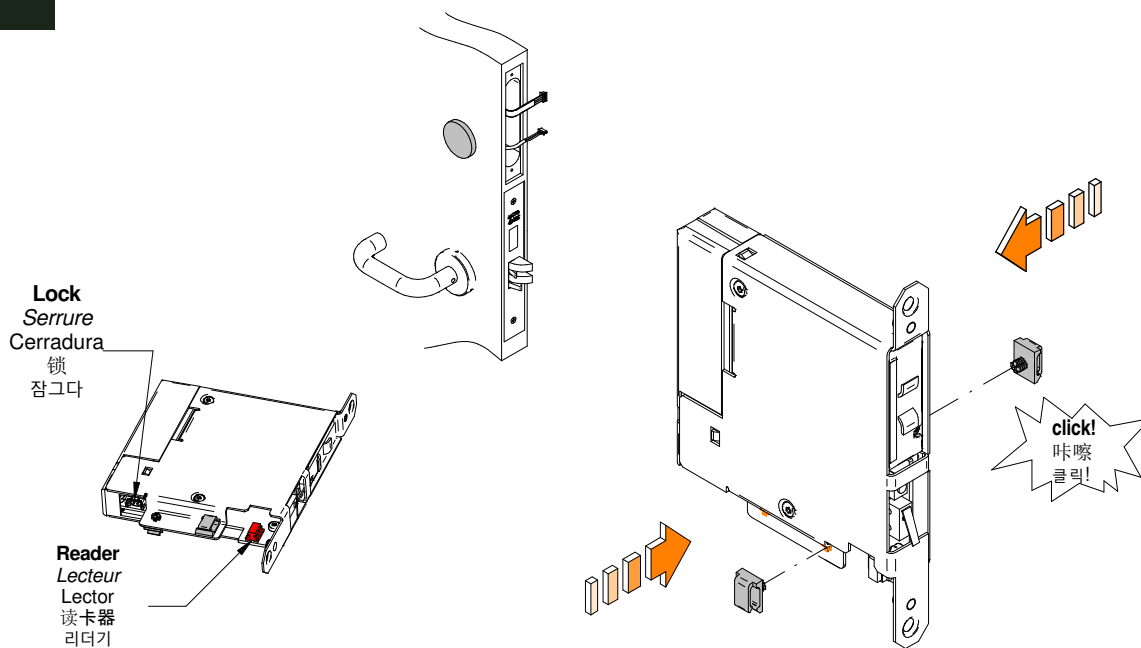


6b

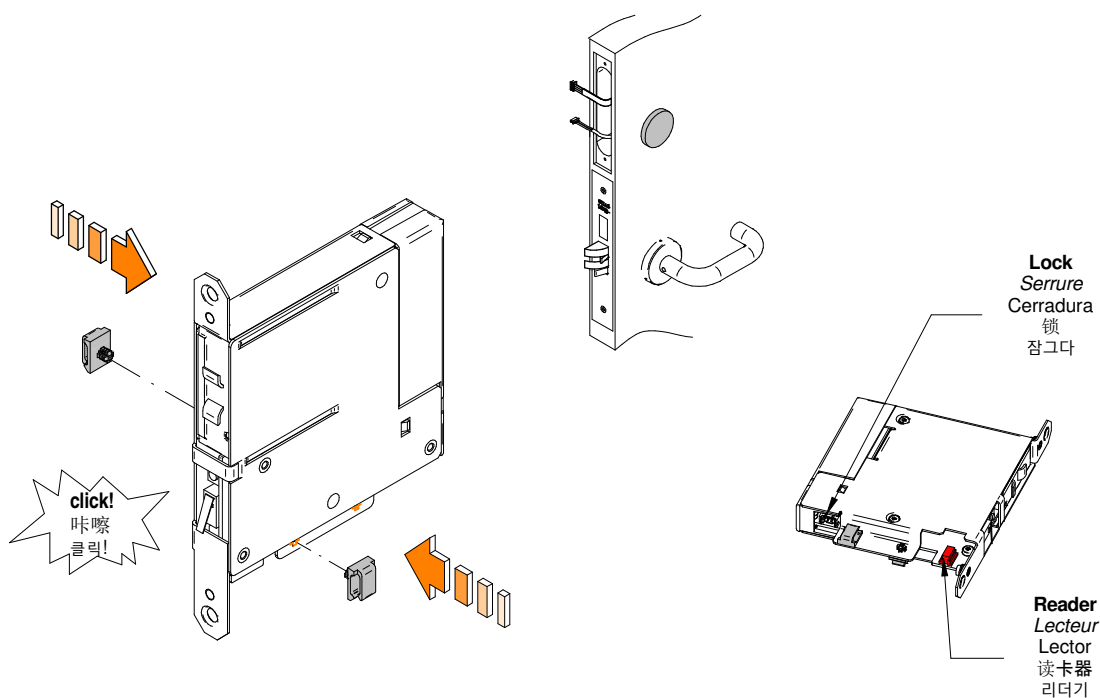 


7a

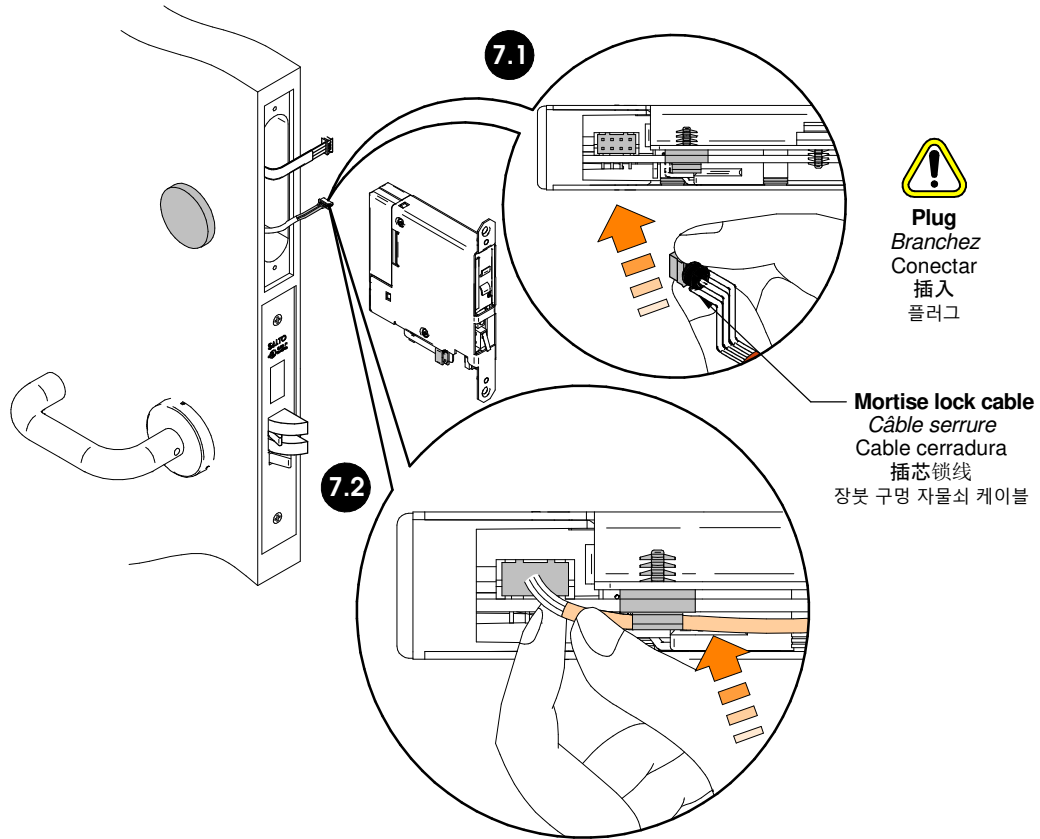 


7b

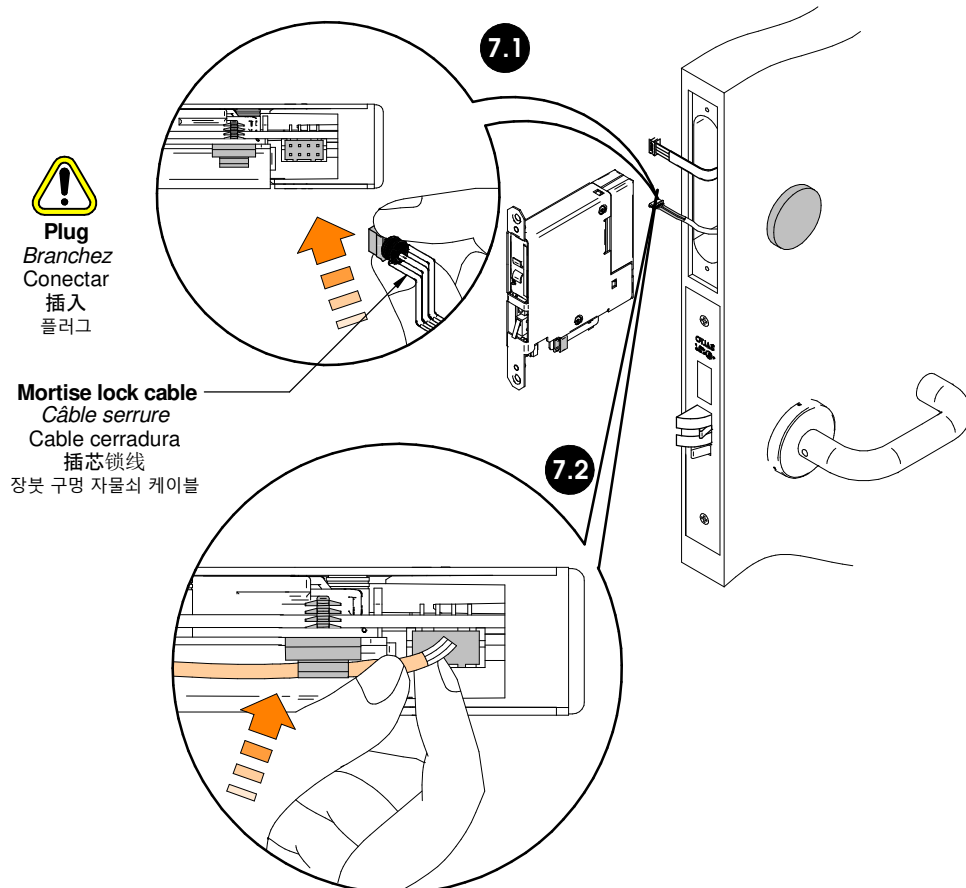 


8a

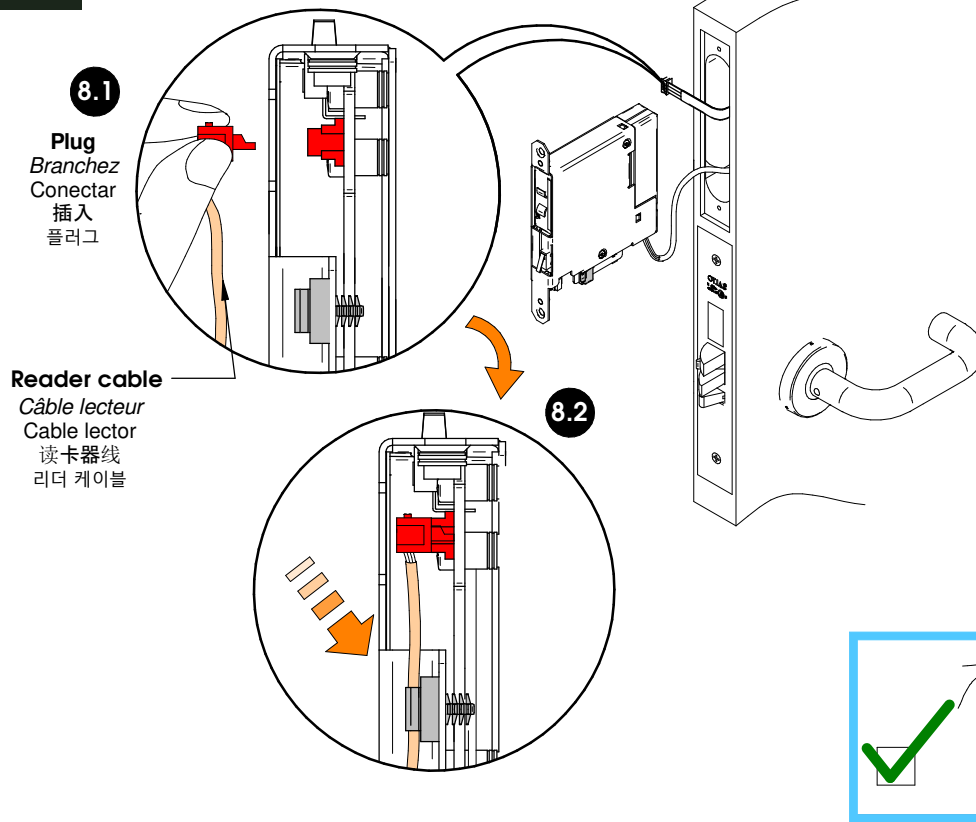 


8b

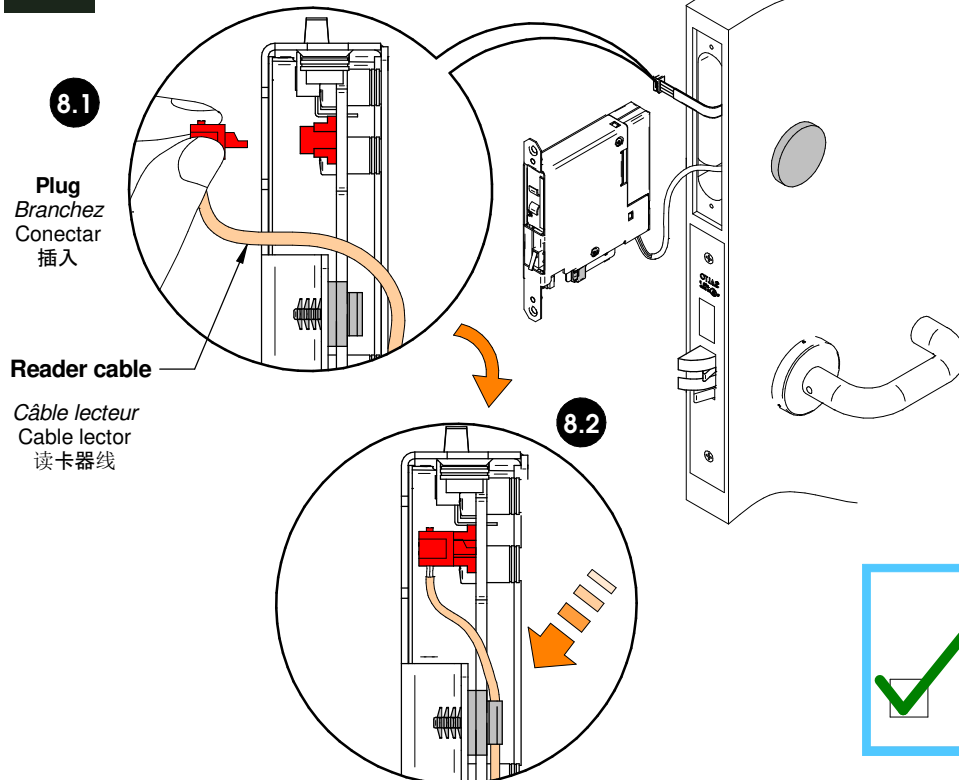 


9

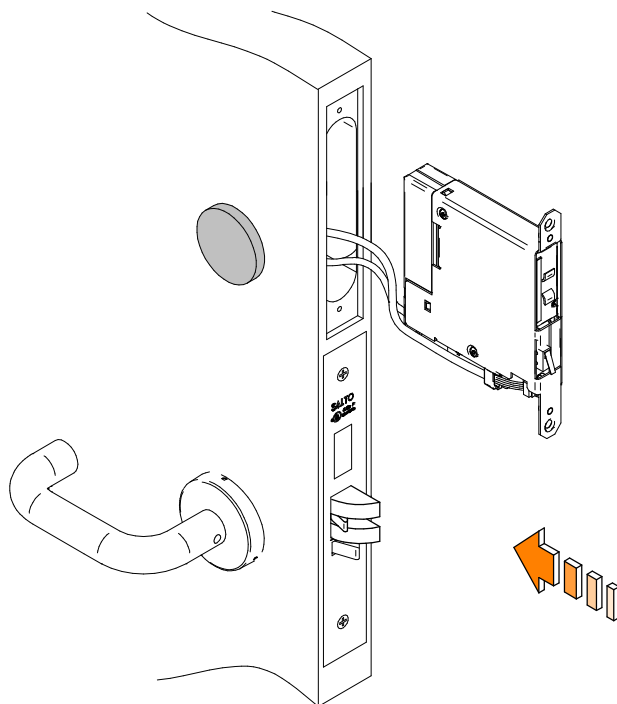 


10

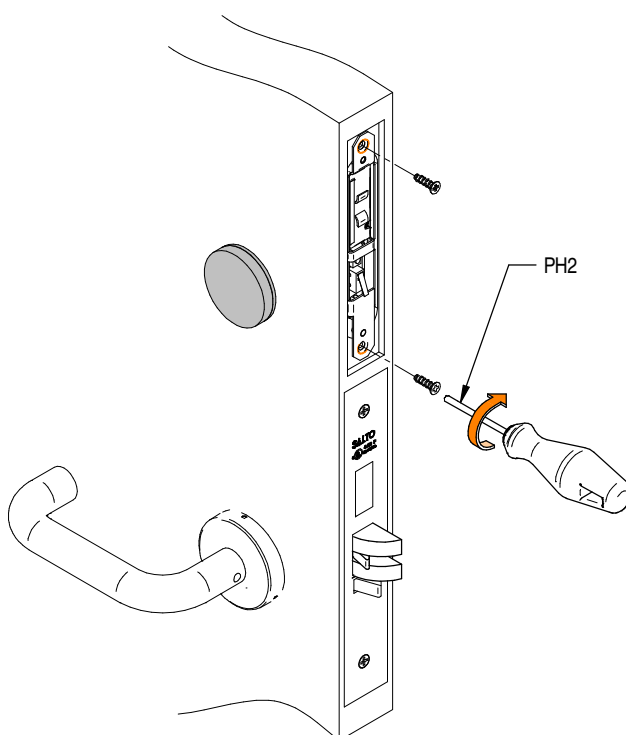 

11

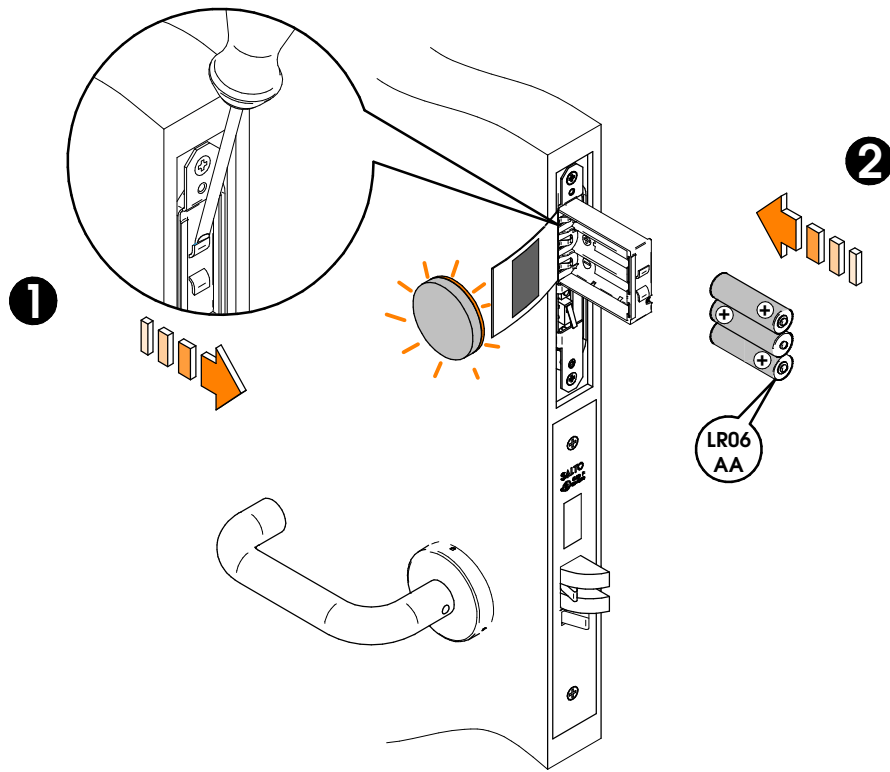 

12

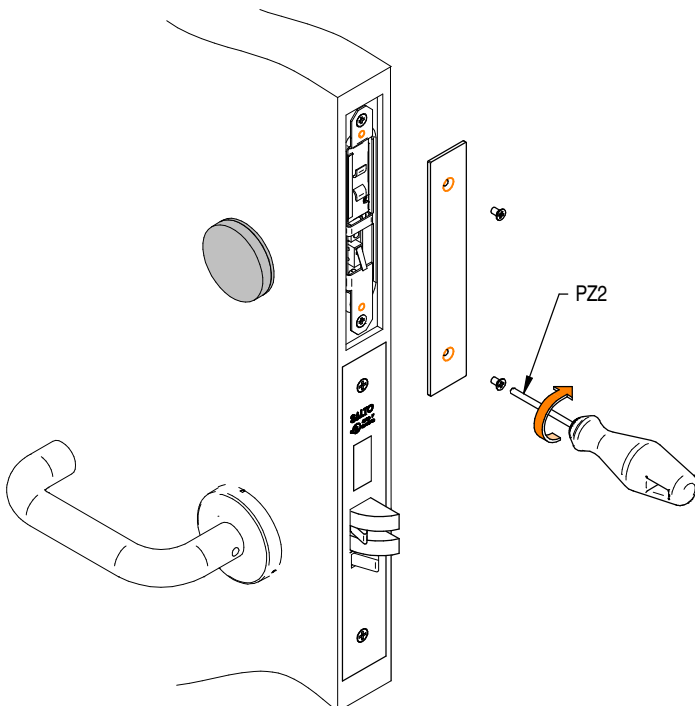 

(Eng)

**AT THIS POINT DO NOT
CLOSE THE DOOR.
PROGRAM THE LOCK FIRST**

(F)

**NE FERMEZ PAS LA PORTE.
PROGRAMMEZ LA BÉQUILLE
AVANT**

(E)

**NO CIERRE LA PUERTA.
PROGRAME LA CERRADURA**

 
(ZH)

在这里，不要关门，先对锁进行编程


(KR)

**이때 문을 닫지 말고 먼저 잠금 장치를
프로그래밍하십시오.**



1

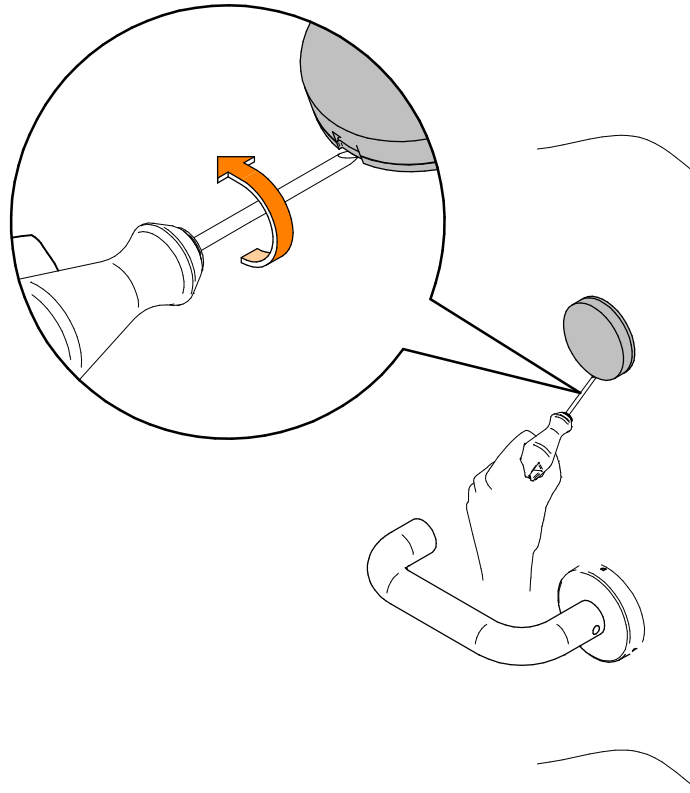

2

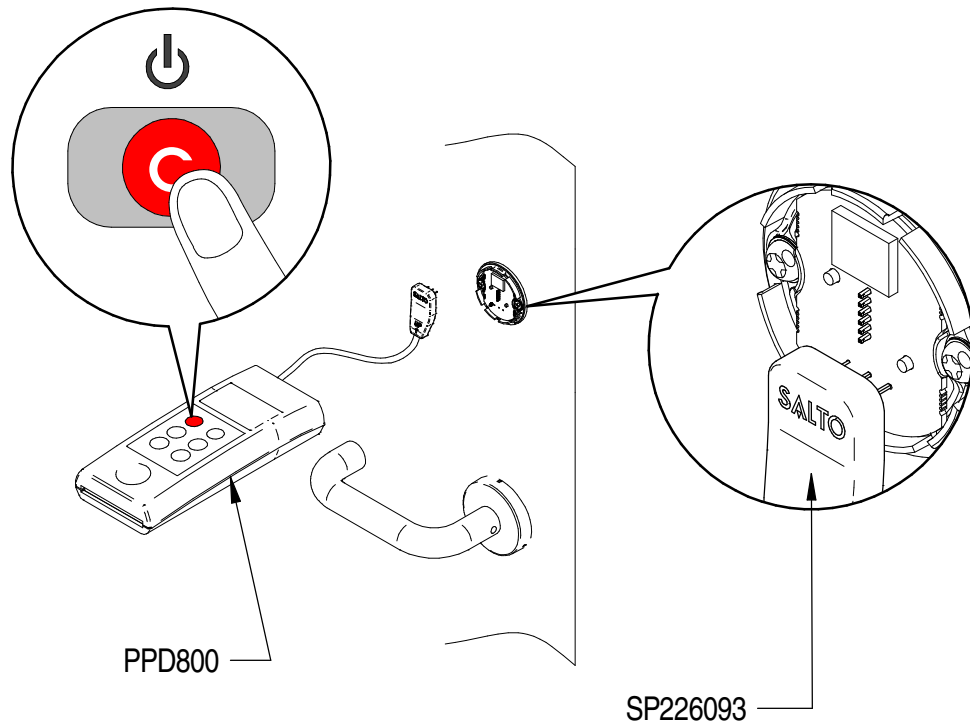 

3

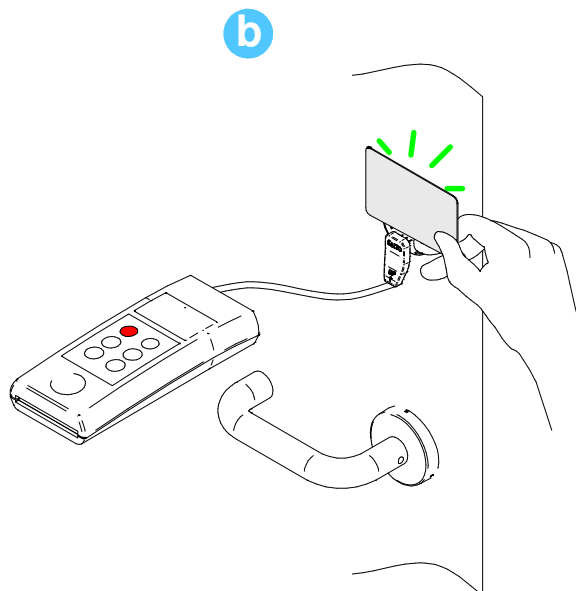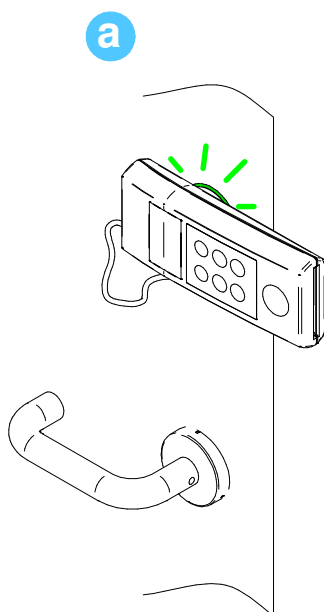  

(Eng) Use and maintenance (F) L'utilisation et l'entretien (E) Uso y mantenimiento (ZH) 使用和维护 (KR) 사용 및 주요결속

Operating conditions: $0^{\circ}\text{C} < t < 60^{\circ}\text{C}$.

Condition de

fonctionnement: $0^{\circ}\text{C} < t < 60^{\circ}\text{C}$.

Condiciones de funcionamiento:

$0^{\circ}\text{C} < t < 60^{\circ}\text{C}$.

操作条件: $0^{\circ}\text{C} < t < 60^{\circ}\text{C}$.

작동 조건: $0^{\circ}\text{C} < t < 60^{\circ}\text{C}$.

To use in non condensing environments.

Pour des environnement sans condensation.

Para uso en entornos sin condensación.

在非冷凝环境中使用.

비 응축 환경에서 사용.

(Eng) Battery change (F) Remplacer les piles (E) Cambio de pilas (ZH) 更换电池 (KR) 배터리 교체

