

# User Manual



Manufacture: Yi Technology Co., Ltd  
Address: Building 18, NO 55, Chuanhe Road, Shanghai China

Email:  
supportus@yitechnology.com (North America)  
support-eu@yitechnology.com (Europe & UK)  
supportasia@yitechnology.com (Asia Pacific)  
support@yitechnology.com (others)

Website: [www.yitechnology.com](http://www.yitechnology.com)  
<https://www.yitechnology.com/legal/privacy-policy>

Y621 EU V1.6

Thank you for choosing the YI Home 2K Pro Camera

印刷颜色 ▶ PANTONE Cool Gray 11 C+K100

成品尺寸 ▶ 80 × 80mm

物料材质 ▶ 68g晨鸣云镜双胶

特种工艺 ▶ 骑马钉装订（两钉）

 
图号 ▶ Y62Q6099AAAP

料号 ▶ 6099Y62Q00AR1A（景琛）/ 6099Y62Q00AR2A（海天）

## Table of Contents

1. English .....	1
2. Français .....	7
3. Deutsch .....	13
4. Español .....	19
5. Italiano .....	25
6. Русский .....	31

## 1. What's in the box

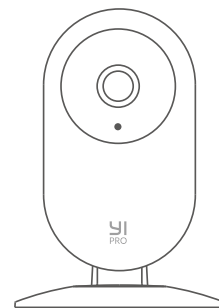

YI Home 2K Pro Camera x1



USB Cable x1




Manual x1



Adaptor x1

## 2. Get to know the Camera

 **Note:** To enable local recording of video clip, please insert a microSD card\* (not included) to the slot as shown below.

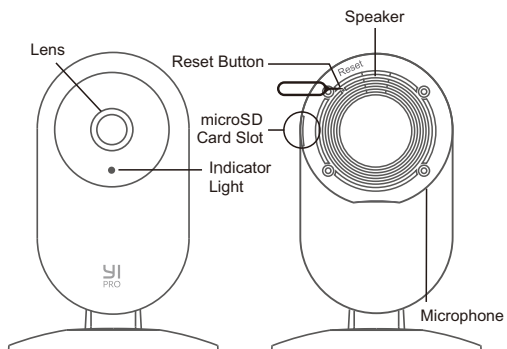

2

## 3. Pairing Your Camera

 
### Prerequisite:

- Ensure that your cell phone is connected to a 2.4 GHz Wi-Fi network.
- Download the YI Home app from the Apple App Store or Google Play.
- Register a YI account or log on to an existing YI account.

### Step 1

Connect the power adapter to an outlet to activate the camera. The camera indicator will flash red and you will hear the introductory message "Welcome to YI home", followed by "Waiting to connect". When you hear "waiting to connect", tap "I heard waiting to connect".

**Note:** To install a camera that was previously installed on a different network or if you change your password, you must reset your camera.

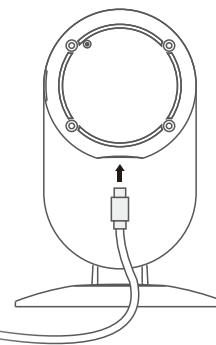

3

**Step 2**

Log into the YI Home App, you can tap the "+" sign to select your device or scan the camera's QR code with your phone.

**Step 3**

Enter the password of the same Wi-Fi network that is connected to your phone, then use the YI Home 2K Pro Camera to scan the QR code that will be generated.

**Step 4**

Tap "Next Step". You will hear "Pairing is successful" and then the YI Home 2K Pro Camera is ready to use.

**4. Reset Wi-Fi Networks**

When you need to switch Wi-Fi networks or update your Wi-Fi password, follow the instructions below:

1. Restore your camera to its default settings by pressing the reset button.
2. Open the YI Home app on your phone, and connect the camera to your phone again. Your videos stored on your microSD card will not be affected.



## 5. Specifications

Max Resolution: 2304 x 1296p (3MP)

Lens: Wide-Angle

Audio: Built-in Microphone and Speaker

Alert Modes: Face Detection, Human Detection, Motion Detection, Sound Detection, Customized Activity Zone Alert

Wi-Fi: 802.11b/g/n, 2.4GHz

Support: Android, iOS, PC & Mac

Power Supply: 5V 1A

Power Consumption: 3.5 W ( Max )

Operating Temperature: -10°C to 50°C (14°F to 122°F )

## FCC COMPLIANCE STATEMENT:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The distance between user and products should be no less than 20cm.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver .
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

#### IC WARNING

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:  
(1) This device may not cause interference.  
(2) This device must accept any interference, including interference that may cause undesired operation of the device.

The distance between user and products should be no less than 20cm

#### ADVERTENCIA IC

Cet appareil contient des émetteurs / récepteurs exempts de licence conformes aux RSS (RSS) d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes :  
(1) Cet appareil ne doit pas causer d'interférences.  
(2) Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil.

La distance entre l'utilisateur et de produits ne devrait pas être inférieure à 20cm

Operating conditions:  
Temperature: 0°C-40°C  
Humidity: 10%-90%RH



FCC ID: 2AFB-YY562121  
IC: 25436-YY562121