


# Quick start guide

Iron

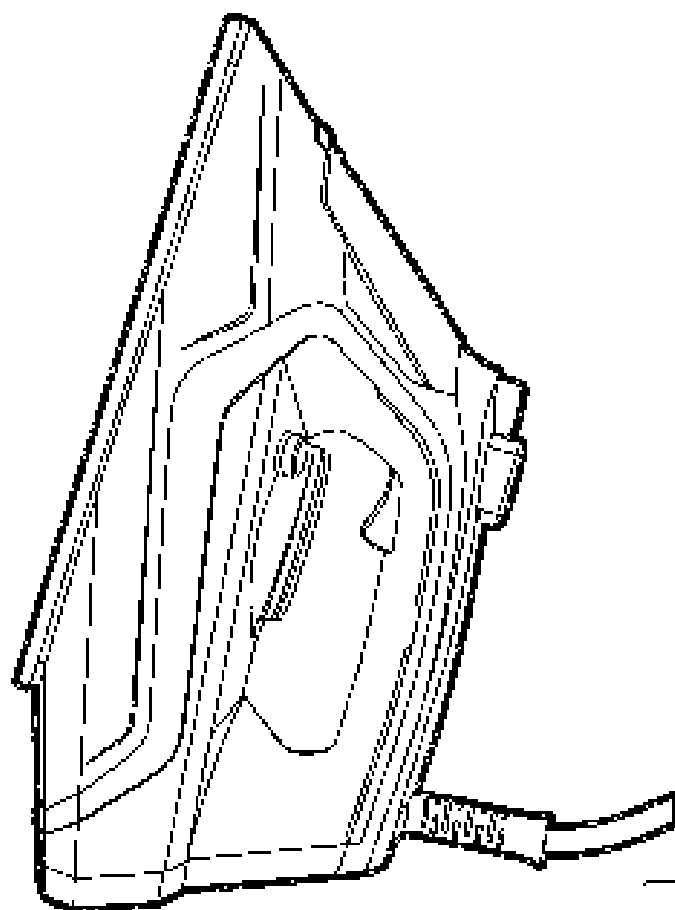


QR Code linking to the manual, available at:  
<https://www.beldray.co.uk/qr>  
or scan the QR code with your smartphone  
to access the manual on your mobile device.



## Beldray

### Description of parts

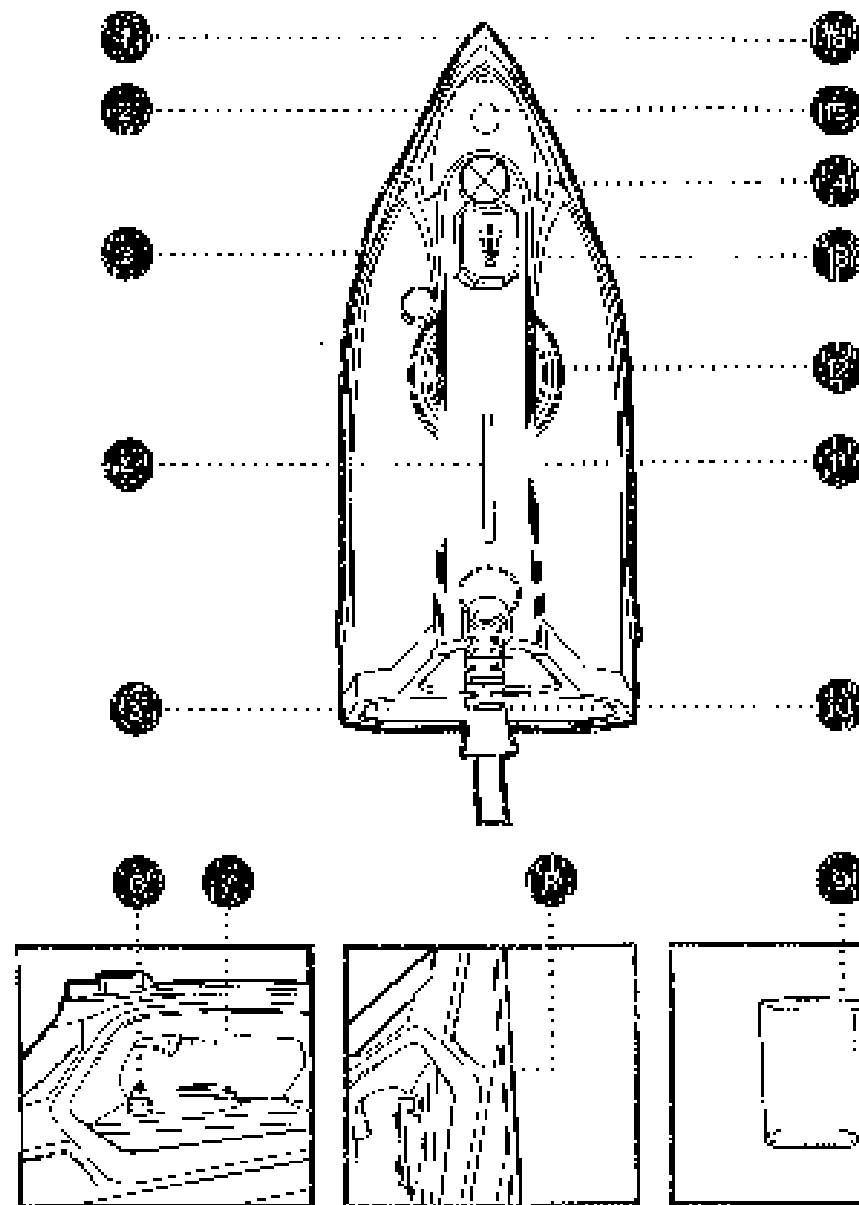

- [illegible]

- [illegible]

## SAFETY INSTRUCTIONS

- When using electrical appliances, basic safety precautions should always be followed.
- Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should be supervised to ensure that they do not play with the appliance.
- Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.
- If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Do not leave the appliance unattended whilst connected to the mains power supply.
- Do not use the appliance for anything other than its intended use.
- Do not direct steam at people or animals or towards equipment containing electrical components, such as the interior of ovens.
- Always unplug the appliance after use and allow to cool fully before any cleaning or user maintenance.
- This appliance must only be used and rested on a stable surface.
- This appliance should not be operated by means of an external timer or separate remote control system.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.



The appliance must be used on a stable surface. Do not use the appliance on uneven or unstable surfaces. Do not use the appliance on surfaces that are not designed for it.



Do not use the appliance for anything other than its intended use. Do not use the appliance for anything other than its intended use.

## Care and maintenance

- STEP 1:** Drain the remaining water from the water tank to prevent it from leaking during cleaning.
- STEP 2:** Wipe the ceramic soleplate with a soft, damp cloth and dry thoroughly.
- STEP 3:** If polyester has burnt onto the ceramic soleplate, wipe it with a soft cloth dipped in methylated spirits. Clean off the methylated spirits with a soft, damp cloth and dry thoroughly.
- STEP 4:** To remove any build-up around the steam holes, use a cotton wool tip dampened with methylated spirits. Wipe off the methylated spirits with a soft, damp cloth and dry thoroughly.

## Instructions for use Before first use

- STEP 1:** Switch off the appliance and unplug it from the mains power supply.
- STEP 2:** Wipe the external surface of the iron with a soft, damp cloth and dry thoroughly.
- STEP 3:** To remove any impurities that may have occurred during the manufacturing process, it is best to use the iron on a piece of clean, making sure that it is on the highest temperature setting suitable for the material.



**NOTE:** Always use the iron on the highest temperature setting before use. Do not use the iron on a piece of clean, making sure that it is on the highest temperature setting suitable for the material.

## Filling the water tank



Do not use the iron on a piece of clean, making sure that it is on the highest temperature setting suitable for the material.

## Using the iron

- STEP 1:** Switch off and unplug the iron from the mains power supply.
- STEP 2:** Fill the water tank following the instructions in the user manual (Filling the water tank).
- STEP 3:** Plug in and switch on the iron to the mains power supply.
- STEP 4:** Rotate the temperature control dial to the desired temperature setting (see the user manual).
- STEP 5:** To increase the temperature of the iron, rotate the control dial in a clockwise direction until the desired heatsetting is reached. To decrease the temperature, rotate the control dial in an anti-clockwise direction. The temperature indicator light will illuminate to signal that the iron is heating up. It will switch off once the iron is ready to use. The iron will only produce steam when the temperature dial is set to the 2-dot heatsetting or higher.

## Ironing with steam

The steam setting is ideal for removing creases from fabrics such as cotton and linen with ease.

- STEP 1:** Fill the water tank following the instructions in the user manual (Filling the water tank).
- STEP 2:** Plug in the iron to the mains power supply.
- STEP 3:** To increase the temperature of the iron, rotate the temperature control dial in a clockwise direction until the desired heatsetting is reached. The iron will only produce steam when the temperature control dial is set to the 2-dot heatsetting.
- STEP 4:** Select the desired steam setting by rotating the steam control dial clockwise. The steam setting can be switched on at any time by rotating the steam control dial to the on position.
- STEP 5:** After use, rotate the temperature control dial to the OFF position. Switch off and unplug the iron from the mains power supply and allow to cool thoroughly before being stored with the cord neatly away from any surrounding objects.



**NOTE:** Always use the iron on the highest temperature setting before use. Do not use the iron on a piece of clean, making sure that it is on the highest temperature setting suitable for the material.



Do not use the iron on a piece of clean, making sure that it is on the highest temperature setting suitable for the material.

## Ironing without steam

For removing creases from delicate fabrics, ironing without steam.

**STEP 1:** Move the steam control dial to the off position.

**STEP 2:** Plug in and switch on the iron at the mains power supply.

**STEP 3:** Choose the temperature (1-4) and, using the temperature control dial, choose the desired temperature when the desired heat setting is selected.

**STEP 4:** Turn the iron on a small part of the fabric to check that the selected temperature is suitable, adjust if necessary.

## Steam burst function

For areas that are stubborn and difficult to remove, use the steam burst trigger to select the desired steam setting. If necessary, press the steam burst button for extra steam. Wait approx. 5 seconds before each burst to prevent the water boiling off from the steam lines.

## Water spray function

The water spray function can be used to help to remove stubborn creases on heavy fabrics. It can also be used when drying ironing delicate fabrics to remove the steam effect.

To use the water spray function, hold the iron over the area to be ironed and then press the water spray button.



**NOTE:** When using the water spray function, the iron must always be held vertically to prevent water dripping.

## Self-clean function

The self-clean function removes the scale and mineral film that can build up in the ceramic soleplate.

It is recommended to use this function once thoroughly every 6 months when the iron is used in a hard water area. For further details please see the entire instruction manual.

## Storage

Check that the iron is cool and dry and put the water tank securely into storage in a cool, dry place. When the cord is coiled around the iron, never wrap it tightly as this could cause damage.

## Specifications

Product code: UJLJ1800

Input: 220-240 V ~50-60 Hz

Output: 2600 W

Water tank capacity: approx. 220 ml

Product dimensions: approx. 29 x 19 x 11.5 cm

Length of cord: approx. 250 cm

FR Veuillez conserver ces instructions pour référence future.

## CONSIGNES DE SÉCURITÉ

- Lors de l'utilisation d'appareils électriques, les consignes élémentaires de sécurité doivent toujours être respectées.
- Les enfants âgés de 8 ans et plus, et les personnes dont les capacités physiques, sensorielles ou mentales sont réduites ou dont l'expérience et les connaissances sont insuffisantes peuvent utiliser cet appareil uniquement s'ils sont sous surveillance ou s'ils ont reçu des instructions quant à l'utilisation sûre et s'ils comprennent les dangers potentiels.
- Veillez à ce que les enfants ne jouent pas avec l'appareil.
- Sauf s'ils sont âgés de plus de 8 ans et sous surveillance, les enfants ne doivent pas effectuer de nettoyage ou de maintenance.
- Si le cordon d'alimentation, la prise ou toute autre partie de l'appareil ne fonctionne pas

correctement ou si l'appareil est tombé ou endommagé, cessez immédiatement d'utiliser le produit pour éviter tout risque de blessure.

- Cet appareil ne contient aucune pièce réparabile par l'utilisateur ; seul un électricien qualifié est autorisé à effectuer des réparations. Des réparations non autorisées peuvent nuire à l'utilisateur et à l'appareil.
- Ne laissez pas l'appareil sans surveillance lorsqu'il est branché sur l'alimentation secteur.
- N'utilisez pas l'appareil à d'autres fins que celles pour lesquelles il a été conçu.
- Ne dirigez pas directement la vapeur vers des personnes, des animaux, ou des équipements contenant des composants électriques, tels que l'intérieur d'un four.
- Débranchez toujours l'appareil après utilisation et laissez-le refroidir complètement avant toute intervention de nettoyage ou de maintenance.
- Posez et utilisez cet appareil uniquement sur une surface stable.
- N'utilisez pas ce produit externe ni de système de commande à distance avec cet appareil.
- Cet appareil est destiné à un usage domestique uniquement. Il ne doit pas être utilisé à des fins commerciales.



**ATTENTION:** L'appareil ne doit pas être utilisé sur des surfaces inflammables ou sur des surfaces qui pourraient être endommagées par la vapeur. Ne dirigez pas la vapeur vers des personnes, des animaux ou des équipements contenant des composants électriques.

**ATTENTION:** Ne laissez pas l'appareil sans surveillance lorsqu'il est branché sur l'alimentation secteur.

## Entretien et maintenance

**ÉTAPE 1 :** videz le contenu résidu du réservoir d'eau pour éviter qu'elle ne fuie pendant le nettoyage.

**ÉTAPE 2 :** essayez la semelle en céramique avec un chiffon doux et humide, puis séchez-la soigneusement.

**ÉTAPE 3 :** si du polyester a brûlé sur la semelle en céramique, essayez celle dernière avec un chiffon doux imbibé d'alcool à brûler. Nettoyez l'alcool brûlé à l'aide d'un chiffon doux et humide, puis séchez soigneusement la semelle.

**ÉTAPE 4 :** pour éliminer toute accumulation d'impuretés autour des orifices de vapeur, utilisez une pointe en coton hydrophile imbibée d'alcool à brûler. Essayez l'alcool à brûler à l'aide d'un chiffon doux et humide, puis séchez soigneusement le produit.

## Règle d'emploi

Avant la première utilisation

**ÉTAPE 1 :** éteignez le fer et débranchez-le de l'alimentation secteur.

**ÉTAPE 2 :** essuyez la semelle en céramique avec un chiffon doux et humide, puis séchez soigneusement.

**ÉTAPE 3 :** pour éliminer les impuretés accumulées pendant le processus de fabrication, l'alcool à brûler est utilisé. Nettoyez l'alcool brûlé à l'aide d'un chiffon doux et humide, puis séchez soigneusement le produit.