



Original	Replacement	Original	Replacement
 Power Receiver	 Power	 Left	 Left
 Power Source	 +  Shift + Power	 Enter	 Ok
 1	 1	 Top Menu	 +  Shift + Menu
 2	 2	 Pop Up Menu	 Menu
 3	 3	 On Screen	 +  Shift + Options
 4	 4	 Option	 Options
 5	 5	 Return	 Back
 6	 6	 Display	 +  Shift + Info
 7	 7	 Mode	 Media
 8	 8	 Stop	 Stop
 9	 9	 Pause	 Pause
 0	 0	 Play/Band	 Play
 +10/Memory	 +  Shift + Guide	 << Tuning	 <<
 ENT	 +  Shift + Ok	 Tuning >>	 >>
 Up	 Up	 I<< Preset	 I<<
 Down	 Down	 Preset >>I	 >>I
 Right	 Right	 Movie	 Smart





Original	Replacement
 Music	 +  Shift + Media
 Sur.Decode	 Dual
 Straight	 Subt
 Info	 Info
 Sleep	 Sleep
 Enhancer	 TV/R
 Pure Direct	 Text
 Program+	 Ch +
 Program-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 BD/DVD	 Red
 TV	 Green
 NET	 Yellow
 Radio	 List
 Party	 Format

Original	Replacement
 HDMI Out	 AV
 HDMI 1	 +  Shift + 1
 HDMI 2	 +  Shift + 2
 HDMI 3	 +  Shift + 3
 HDMI 4	 +  Shift + 4
 HDMI 5	 +  Shift + 5
 V-AUX	 +  Shift + 6
 AV 1	 +  Shift + 7
 AV 2	 +  Shift + 8
 AV 3	 +  Shift + 9
 AV 4	 Guide
 AV 5	 +  Shift + 0
 AV 6	 Pre Ch
 Audio	 +  Shift + Dual
 Tuner	 +  Shift + TV/R
 USB	 +  Shift + Subt
 Bluetooth	 3D







Original	Replacement
 Power Receiver	 Power
 Power Source	 +  Shift + Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10/Memory	 +  Shift + Guide
 ENT	 +  Shift + Ok
 Info	 INFO Info
 Sleep	 Sleep
 Top Menu	 +  Shift + Menu

Original	Replacement
 Pop Up Menu	 Menu
 On Screen	 +  Shift + Options
 Option	 Options
 Return	 Back
 Display	 +  Shift + Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Mode	 Media
 Stop	 Stop
 Pause	 Pause
 Play/Band	 Play
 << Tuning	 <<
 Tuning >>	 >>
 I<< Preset	 I<<





Original	Replacement	Original	Replacement
	Preset >>I		>>I
	Program+		Ch +
	Program-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	BD/DVD		Red
	TV		Green
	NET		Yellow
	Radio		TV/R
	Party		Format
	HDMI Out		AV
	HDMI 1		Shift + 1
	HDMI 2		Shift + 2
	HDMI 3		Shift + 3
	HDMI 4		Shift + 4
	HDMI 5		Shift + 5

	V-AUX		Shift + 6
	AV 1		Shift + 7
	AV 2		Shift + 8
	AV 3		Shift + 9
	AV 4		Guide
	AV 5		Shift + 0
	AV 6		Pre Ch
	Audio		Dual
	Tuner		D. Menu
	Bluetooth		Subt
	USB		Text
	NET		Shift + Media
	Phono		Smart

