



Operating Instructions – Washer Dryer Electrolux EWD 1214 I

Detergent dispenser drawer

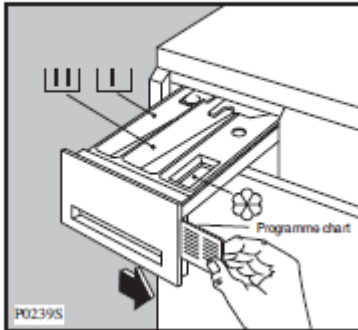

The Control Panel

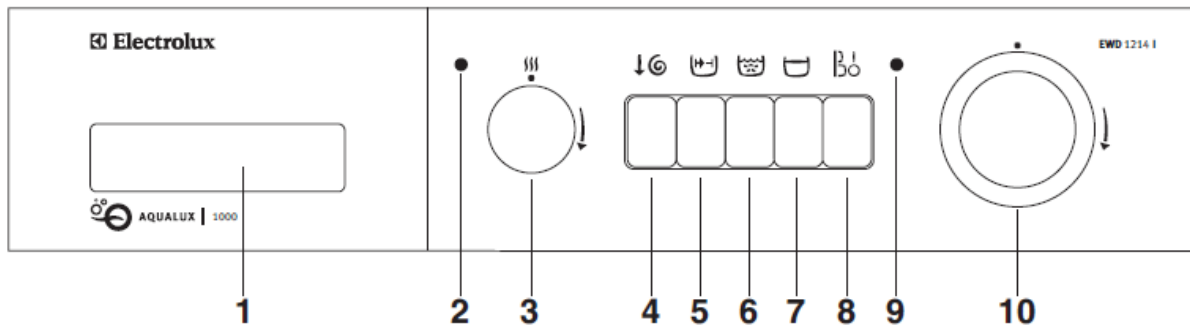

1. Detergent dispenser drawer
2. Drying indicator light (This light illuminates when the machine is drying)
3. Drying time selector dial

Graduated up to 120 mins for cottons and synthetics, this dial allows you to select the desired drying time according to the type and quantity of laundry and the required degree of dryness. Blue sector – for cottons, Green sector – for synthetics.


Turn the dial clockwise only.

Depress the dial to pop it out.



Cooling Phase

To allow the laundry to cool down, a cooling phase starts automatically 10 minutes before the end of drying and this phase must in no circumstances be reduced or interrupted.

4. Spin speed reduction button 

By depressing this button the spin speed is reduced as follows:

- Cotton and linen from 1200rpm to 650rpm

- Synthetics and wool from 850rpm to 650rpm
- Delicates from 650rpm to 450rpm

5. Quick wash button 

By depressing this button on programmes A,B,C,D and H the wash time is reduced. This is suitable only for garments which are lightly soiled.

6. Super Rinse button 

By depressing this button on programmes for cottons and linens the machine will perform an additional rinse. This is recommended for people who are allergic to detergents and in areas where the water is very soft.

7. Rinse Hold button 

Press this button to make the machine stop with water in the drum after the last rinse. This prevents any creasing which may occur if the clothes are left damp in the drum. When it is convenient for you to empty the machine, simply press this button again so that the machine can proceed to drain and spin, or turn the dial to the drain programme "R". If this button is not activated, the washing programmes will end with a spin. (This button is not compatible with the automatic washing and drying programme.)

8. On/Off button 

By depressing this button the machine starts operating. When depressing it again, the machine stops.

9. Mains-on light


This light will illuminate when the machine starts working and goes out when the On/Off button is depressed again to switch the machine off.

10. Programme selector dial

With the programme selector dial you choose the desired washing and drying programme. Turn it clockwise. Depress the dial to pop it out. Before setting the dial to any position the machine must be switched off by depressing the On/Off button.

Operating sequence washing

1. Load the laundry
2. Measure out the detergent and pour into the main wash compartment (I I). If you wish to carry out the prewash, pour detergent into the compartment marked (I).

3. Measure out the fabric softener if required and pour into the compartment marked  not exceeding the 'Max' mark in the drawer.
4. Select the required option (s)
Depress Spin Reduction and/or Quick Wash and/or Super Rinse and/or Rinse Hold button, if required.
5. Select the required programme. Turn the programme selector dial clockwise to the desired programme.
6. Start the machine by pressing the On/Off button. The mains on light will illuminate and the machine will start.
7. At the end of the programme the machine stops automatically. If you have pressed the Rinse Hold button the machine will stop with the water of the last rinse left in the tub, to prevent the fabric from creasing. To drain the water and spin, release the same button. To drain only, select programme "R". The door is controlled by a safety device which releases 2 minutes after the end of the programme. Switch the machine off by depressing the On/Off button again, the mains-on light goes out.


Operating sequence drying

1. Load the laundry
2. Select the programme by turning the programme selector dial clockwise to the appropriate drying programme.
3. Select the required time (See programme chart) turn the drying time selector dial clockwise to the correct time setting in the blue sector.
4. Start the machine by depressing the On/Off button, the mains-on light and drying light will illuminate and the machine starts operating.
5. At the end of the programme the machine stops automatically and the drying light goes out. The door is controlled by a safety device which releases 2 minutes after the end of the programme. Switch the machine off by depressing the On/Off button again, the mains-on light goes out. If the laundry is still too damp, select a further brief drying time, bearing in mind that during the last 10 minutes the appliance carries out a cooling and anticrease phase.

Operating sequence washing and drying

Follow this sequence if you intend to wash and dry automatically



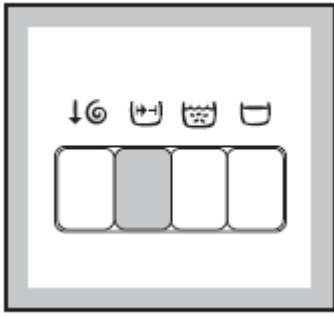







 


















1. Load the laundry
2. Measure out the detergent and fabric softener
3. Select the required programme
Turn the programme selector dial clockwise to the appropriate programme.
4. Select the required option, depressing the quick wash button if required.




 
 








In order to save energy and to avoid too long drying times we suggest not to reduce the spin speed when you wash and dry automatically.

5. Select the required time following indications given in the programme chart on the following page. Turn the time selector dial clockwise to the appropriate number of minutes in the green sector.
6. Start the machine by pressing the On/Off button, the mains-on light comes on and the machine starts operating.
7. At the end of the programme the machine stops automatically and the drying light goes out. The door is controlled by a safety device which releases 2 minutes after the end of the programme. Switch the machine off by depressing the On/Off button again, the mains-on light goes out. If the laundry is still too damp, select a further brief drying time, bearing in mind that during the last 10 minutes the appliance carries out a cooling and anticrease phase.

Washing programmes for cotton and linen

Wash programme	Degree of soil and type of laundry	Programme dial position	Description	Possible options	Max. load	Progr. time mins.
 WHITES WITH PREWASH	For heavy soiled cotton items (whites and coloureds).	A	Prewash at 40 °C Wash at 95 °C 3 rinses, Long spin at 1200 rpm	     	5 kg	25
 WHITES	White cotton, for example normally soiled work garments, sheets, household linen, underwear, towels.	B	Wash at 95 °C 3 rinses Long spin at 1200 rpm	     	5 kg	125
 FAST COLOURED	Fast coloured cotton or linen fabrics, shirts, underwear, towels.	C(*)	Wash at 60 °C 3 rinses Long spin at 1200 rpm	     	5 kg	140
 NON- FAST COLOURED	Non fast coloured cotton or linen fabrics, shirts, blouses, underwear.	D	Wash at 40 °C 3 rinses Long spin at 1200 rpm	     	5 kg	115
LONG SPIN	Separate spin for cotton and linen items	F	Long spin at 1200 rpm		5 kg	12

Programmes for synthetics, mixed fabrics, delicates and wool

Wash programme	Degree of soil and type of laundry	Programme dial position	Description	Possible options	Max. load	Progr. time mins.
 SYNTHETICS	Synthetic or mixed fabrics, underwear, coloured garments, non-shrink shirts, blouses.	H	Wash at 50 °C 3 rinses Short spin at 850 rpm		2 kg	60
30° WORN ONCE	Lightly soiled synthetics or mixed fabrics	J	Wash at 30°C 3 rinses Short spin at 850 rpm		2 kg	30
SHORT SPIN	Separate spin for hand washed synthetics, delicates and wool	K	Draining of water and short spin at 850 rpm		2 kg	6
 WOOL 	Specially tested programme for wool garments bearing the "Pure new wool, non-shrink, machine washable" label.	M	Wash at 40 °C 3 rinses Short spin at 850 rpm		1 kg	50
 DELICATES	Delicate fabrics, for example curtains	N	Wash at 40 °C 3 rinses Short spin at 650 rpm		2 kg	50
RINSES	Separate rinse cycle for synthetics, hand washed wool or delicate items	P	3 rinses Short spin at 650 rpm		2 kg	18
SOFTENERS	This programme can be used for softening hand washed garments	Q	1 rinse Short spin at 650 rpm		2 kg	8
DRAIN	For emptying out the last rinse water in programmes with the Rinse Hold option.	R	Draining of water		-	1

Drying programmes

Degree of drying	Programme/ Type of fabric	Max. load	Spin speed	Drying time mins
Store dry (*) Suitable for items to put away without ironing	G Cotton and linen (towels, T-shirts, bathrobes)	2.5 kg	1200	100-110
		1.5 kg	1200	55-65
	L Synthetics and mixed fabrics (jumpers, blouses, underwear, household linen)	1.5 kg	850	100-110
		1 kg	850	55-65
Iron dry Suitable for ironing	G Cotton and linen (sheets, tablecloths, shirts, etc.)	2.5 kg	1200	70-80
		1.5 kg	1200	40-50
	L Synthetics and mixed fabrics (shirts, blouses, household linen)	1.5 kg	850	70-80
		1 kg	850	40-45