



Item #1012 388 248
Model #K40526

USE AND CARE GUIDE

800 LUMEN RECHARGEABLE LED DETACHABLE TRIPOD LIGHT

Questions, problems, missing parts?

Before returning to the store, call

 
Husky Customer Service

8 a.m. - 7 p.m., EST, Monday - Friday

9 a.m. - 6 p.m., EST, Saturday

1-888-HD-HUSKY

HUSKYTOOLS.COM

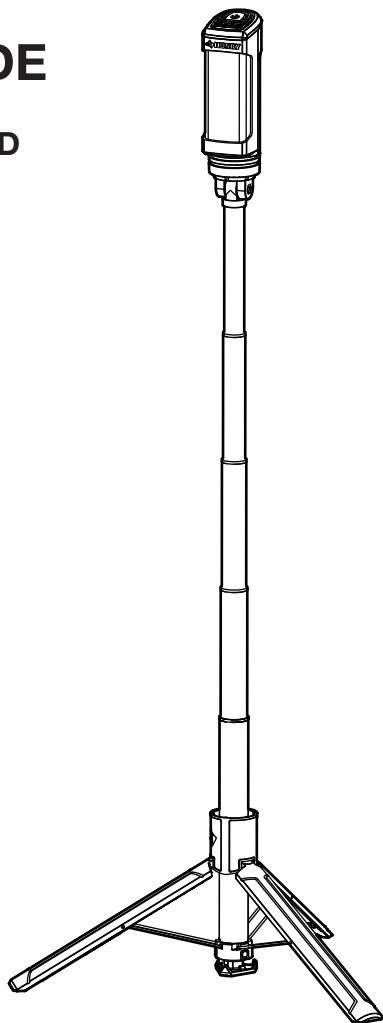

THANK YOU

We appreciate the trust and confidence you have placed in Husky through the purchase of this LED worklight. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Husky!

Table of Contents

Table of Contents	2	Installation	5
Safety Information	2	Operation	6
Warranty	3	Care and Cleaning	7
Pre-Installation	3	Troubleshooting	7
Specifications	3		
Package Contents	3		

Safety Information

SAVE THESE INSTRUCTIONS.

Read and understand all Safety and Operating instructions in this manual before using this product.

The charging and discharging ambient temperature is 0~+40°C. Fill time is about 4 hours.

Input rating: DC 5V 2A



WARNING: Read and follow all warnings and instructions in this manual to avoid personal injury or property damage.



WARNING: To reduce the risk of injury, do not stare at operating lamp. Serious eye injury could occur.

WARNING: When using flashlights or lanterns, additional precautions should always be followed, including the following:

- ☐ To reduce the risk of injury, close supervision is necessary when a product is used near children.
- ☐ Do not contact hot parts.
- ☐ Only use attachments recommended or sold by the manufacturer.
- ☐ To reduce the risk of electrical shock, do not put lamp in water or other liquid. Do not place or store product where it can fall or be pulled into a tub or sink.
- ☐ Always unplug the USB cable from the power source when not in use.
- ☐ Do not use this product for other than its intended use.
- ☐ Do not attempt to charge or operate this light if the USB, battery, bulb or any part of the light is damaged or corroded.
- ☐ Do not disassemble or tamper with the light and battery.
- ☐ Do not dispose of the battery in a fire as this may result in an explosion.

FCC STATEMENT



WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTICE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RESPONSIBLE PARTY

THE HOME DEPOT
2455 PACES FERRY ROAD
ATLANTA, GA 30339
(770)433-8211

Warranty

LIMITED WARRANTY

This item is warranted to be free from defects in materials or workmanship for a period of three (3) years from the original date of purchase under normal conditions of intended use. If this product is defective, the Warrantor will, within the warranty period, replace the product or refund the purchase price of the product, at the Warrantor's option, at the place of purchase upon presentation of sales receipt or other proof of purchase. This warranty extends only to the original retail purchaser and excludes any damage to the product resulting from accident, misuse, abuse, damage caused by electrical power surge, or operation not recommended or authorized by these operating and safety instructions. This warranty is voided if the product is ever used in a commercial or business environment.

There are no warranties beyond this limited warranty. This limited warranty is your complete and exclusive remedy. The Warrantor makes no other warranties, express or implied, including but not limited to any implied warranty of merchantability or of fitness for a particular purpose. The Warrantor undertakes no responsibility for the quality of the product except as otherwise provided herein. The Warrantor assumes no responsibility that the product will be fit for any particular purpose for which you may be buying this product. The Warrantor expressly disclaims liability for any special, incidental, indirect, or consequential damages arising from the purchase or use of this product.

The amount of the Warrantor's liability under this warranty is limited to the amount of the original purchase price paid for the product by the original retail purchaser. If the Warrantor cannot lawfully disclaim statutory or implied warranties, then all such warranties shall be limited to the duration of this warranty and to the amount of the original purchase price paid for the product by the original retail purchaser.

This warranty gives you specific legal rights; you may also have other rights that vary by jurisdiction. This warranty is valid only within the United States of America (USA).

Contact the Customer Service Team at 1-888-HD-HUSKY or visit www.HUSKYTOOLS.com.

Pre-Installation

SPECIFICATIONS


Product Weight	1.14 lbs
Product Width	13.00 in.
Product Depth	11.22 in.
Product Height	32.05 in.

PACKAGE CONTENTS




NOTE: Hardware not shown to actual size.

Part	Description	Quantity
A	LED light	1
B	1.64 ft. USB-C charger cord	1

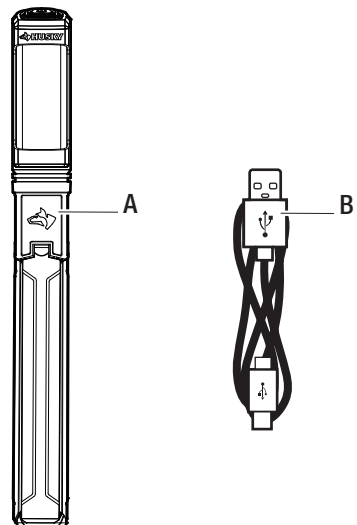 

Pre-installation (continued)


Part	Description
C	Power button
D	Indicator light
E	USB-C port
F	Lamp head
G	Telescopic pole
H	Tripod leg
I	Release button
J	Hinge
K	Magnet integrated

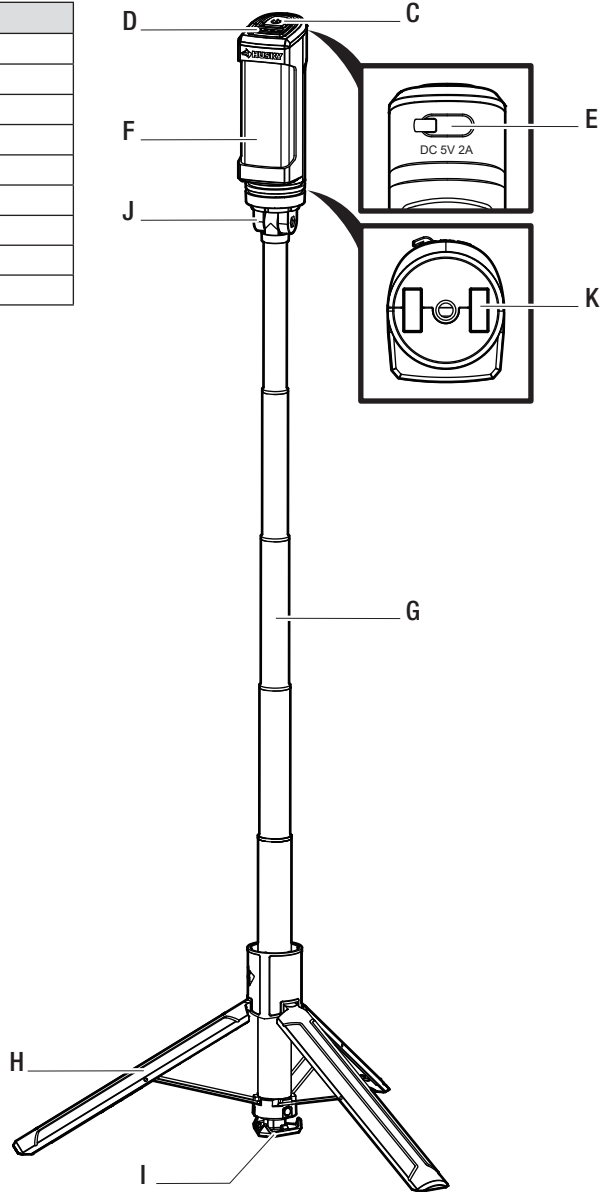 

Installation


1 Preparing the Tripod

 - Hit the release button (I) against the ground to open the tripod legs (H).
- Lift the lamp head (F) and pull the telescopic pole (G) to the required height.

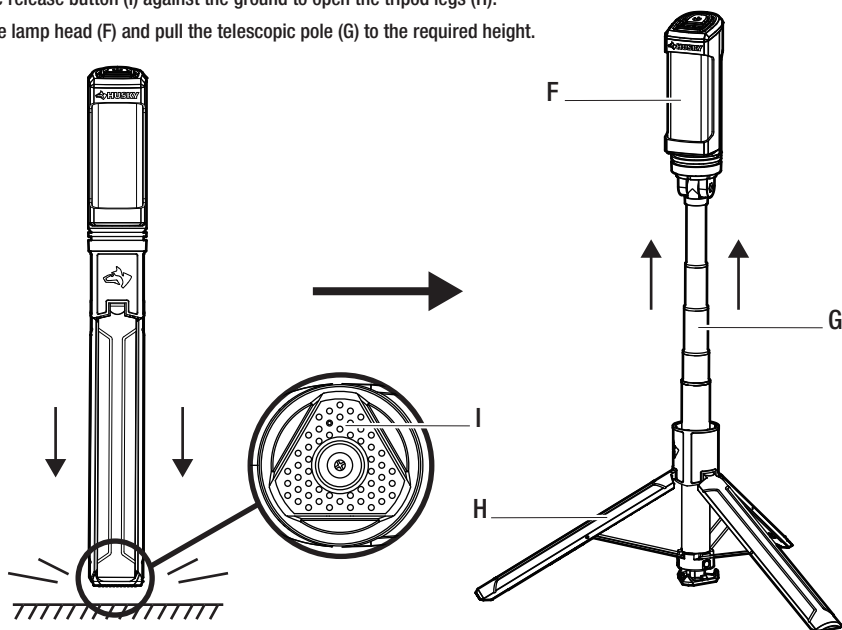

2 Positioning the Light

 
- The Lamp head (F) can rotate 360° horizontally.
- The Lamp head (F) can rotate 180° vertically from hinge (J).

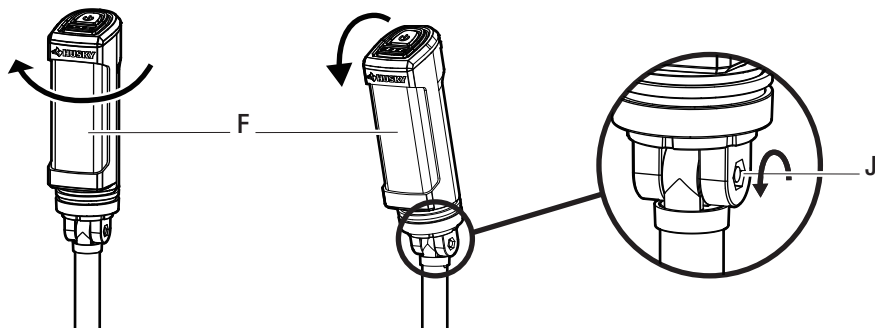

Installation (continued)

3 Lamp head Assembly (Optional)

 - Remove lamp head (F) from the tripod by rotating the lamp head (F).
- The magnet integrated (K) on the base of the light can attach to any iron-based metal surface.

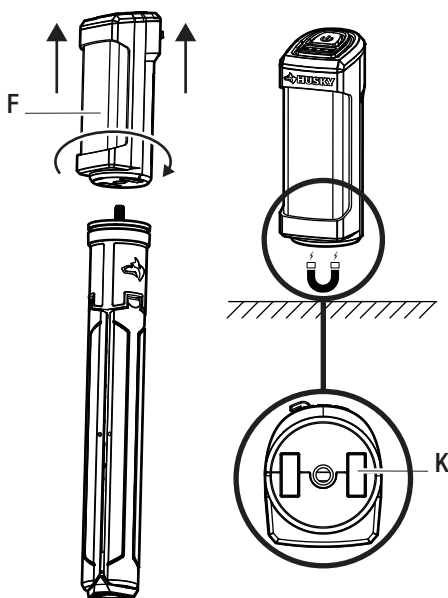

Operation

1 How to Recharge

 


WARNING: Keep the USB-C cover closed when not in use or used in wet locations.



NOTE: Charge this light before first use.


- When battery indicator light (D) shows one bar, the light should be charged.
- Remove the silicone USB-C cover and USB-C charger cord into the USB-C port (E). The charging voltage is 5V 2A, it takes 4 hours to fully charge the light.

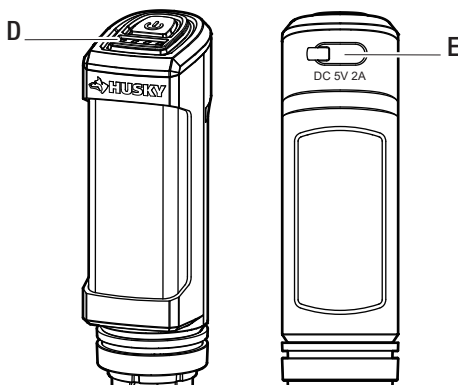

Operation (continued)

2 Adjusting the Light

 - ☐ Press the power button (C) once to turn the light on high mode (800 lumens output).
- ☐ Press the power button (C) again for medium mode (400 lumens output).
- ☐ Press the power button (C) a third time for low mode (200 lumens output).
- ☐ Press the power button (C) a fourth time for light flicker (flashing mode).
- ☐ Press the power button (C) a fifth time to turn the light off completely.

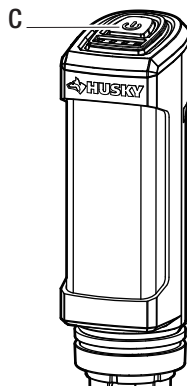

Care and Cleaning



WARNING: Always make sure that the worklight is cooled down before attempting to clean it.

- ☐ Clean the lamp head, lens cover, and lamp stand regularly with a non-abrasive cleaner.
- ☐ Allow the work light to cool down completely before storing.
- ☐ Store in a safe place, out of the reach of children.

Troubleshooting

Minor problems often can be fixed without calling customer service.

Problem	Possible Cause	Corrective Action
The light does not work.	<ul style="list-style-type: none"><input type="checkbox"/> No electricity.<input type="checkbox"/> The power button is turn off.	<ul style="list-style-type: none"><input type="checkbox"/> Ensure the fixture is charged.<input type="checkbox"/> Ensure the power button turns on.
Tripod can't fold or release.	<ul style="list-style-type: none"><input type="checkbox"/> Foreign matter in the telescopic pole of the tripod.<input type="checkbox"/> The release button of the tripod isn't pressing hard enough.	<ul style="list-style-type: none"><input type="checkbox"/> Clean the foreign matter in the telescopic pole of the tripod.<input type="checkbox"/> Need to press the release button hard enough.



Questions, problems, missing parts? Before returning to the store,
call Husky Customer Service
8 a.m. - 7 p.m., EST, Monday-Friday
9 a.m. - 6 p.m., EST, Saturday

1-888-HD-HUSKY

HUSKYTOOLS.COM

Retain this manual for future use.