

VEVOR

Affordable. Reliable. Home Improvement.

ICE CRUSHER

Model:WF-A177/WF-B177

VEVOR



Affordable. Reliable. Home Improvement.

ICE CRUSHER

MODEL:WF-A177/WF-B177



This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

	<p>Warning-To reduce the risk of injury, user must read instructions manual carefully.</p>
	<p style="text-align: center;">CORRECT DISPOSAL</p> <p>This product is subject to the provision of European Directive 2012/19/EC. The symbol showing a wheellie bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices</p>

IMPORTANT SAFETYINSTRUCTIONS

When using electrical appliances,basic safety precautions should be followed to reduce the risk of fire,electric shock and injury to persons or property. Read all instructions before operating the machine for the first time.

Install the machine correctly before using

Keep the ice crusher and power cable away from heat sources and hot surfaces.

To avoid electrical shock, do not place the cord, plug or ice crusher in water or other liquids.

We do not recommend the use of an extension cord,as it may overheat and become a risk of fire.

Do not operate appliance with wet hands or operate in a wet working environment.

Always protect the power cable from undue flexing and wearing -do not allow the cable to hang off edge of the counter or table.

If the supply cord is damaged, do not use the product. Contact customer service for repair or replacement.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Do not move the ice crusher while it is switched on.

Do not leave your Professional Blender unattended when power is connected.

Unplug the ice crusher before cleaning or making any repairs or servicing.

NOTE: strongly recommend to repair the machine by professional technician.

It's forbidden to pull the cable to unplug the plug, pull the plug is a must.

The ice crusher is commercial machine which is intended to be used in staff kitchen areas in shops, offices and other working environments.


Warning: Don't use your ice crusher outdoors. Avoid direct sunlight and make sure that there is at least 15cm of space between the back and sides of your unit and the wall.

Do not tip the machine over.

The blade must be replaced by original blade.

The manufacturing will not be responsible for injury that occurs as result of failure to follow these precautions.

List of different parts

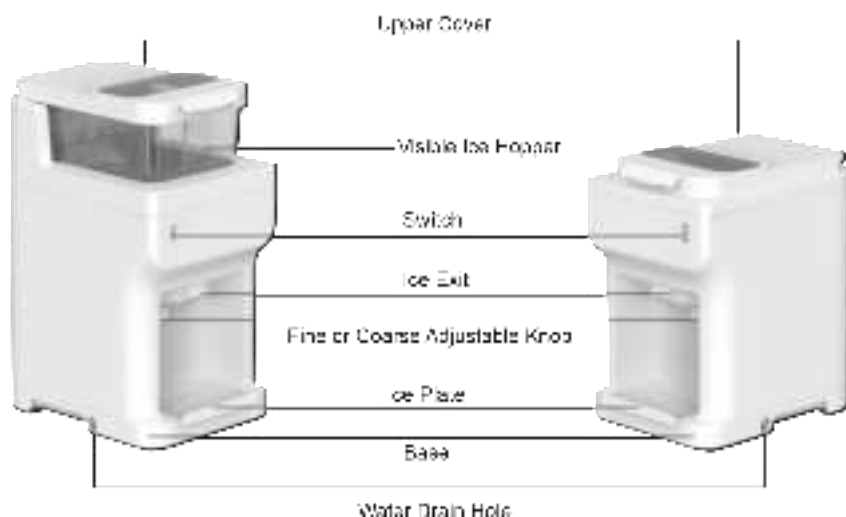

Usage instruction

1. Open the machine lid, clean and mop the ice slot with dry cloth. Check whether knives are firmly fixed.
2. Check power cord and plug. SEE whether somewhere of them is broken, electricity loss or well connected. Turn off the switch and then plug in.
3. Open the machine lid, cast in proper ice then close the lid.
4. Turn on the switch.
5. According to your need, adjust the knife-adjustment handle.
6. The best diameter of ice cube is 3-5cm. You can also shave bigger ice cube into smaller one.

Notice Items

1. Single-phase 120V/60Hz volts is a must.
2. The machine lid has secure defensive equipment. If you press the on-off button without covering the lid, the machine won't work.

3. Place the machine somewhere smooth. Evenly casting ice is required. Otherwise it may cause the machine shaking.
4. The amount of cast ice should be restricted 1 cm below the up-edge of the red line of the ice slot.
5. Only dry cloth is allowed to mop the ice slot. No water.
6. Clean the water inside the ice slot after shaving ice.
7. While cleaning, avoid touch the knives in case of hurt fingers.
8. Never disassemble the machine while cleaning.

