




Rito Pro

User Manual

BOULT

Know your Rito Pro

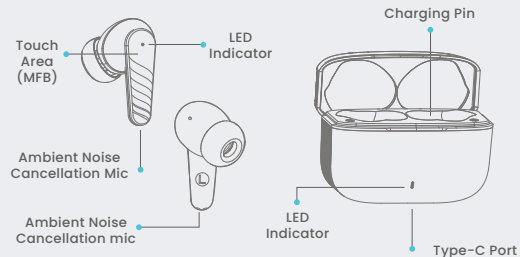

What's in the box ?

Charging Case
Earbuds
Type C Charging Cable
User Manual
Extra pair of eartips

Product specification

Product Name – TWS Bluetooth Headset
Model – Boult Audio AirBass
Bluetooth Version V5.3
Speaker – 10mm
Bluetooth Range – ~10m/33ft (without any obstacles)
Earbud Charging Time – 45 mins
Frequency Range – 20Hz-20KHz
Technology – HFP/HSP/A2Dp/AVRCP
Input DC5V=1A

How to use your Rito Pro ?

Touch Control

The Touch Area (MFB Touch Panel) is located in the upper part of earbuds handle.

Wearing Earbuds

The earbud marked with L is worn on the left ear and the earbud marked with R is worn on the right ear.

Power On/Off

Power on: Auto : Open the charging case and take out the earbuds to power on. Manually : Press and hold the MFB for 3s.

Power off: Auto : Place both earbuds in the charging case, close the lid. Manually : Press and hold the MFB for 5s.

Play/Pause : Tap the MFB once.

Voice Assistant : Long press the MFB for 2s.

Next Track : Double tap the right MFB.

Answer the call : Tap the MFB once

Previous Track : Double tap the left MFB.

End Call / Reject : Double tap the MFB

Volume+ : Triple tap the right MFB.

Volume- : Triple tap the left MFB.

Game Mode : Quadruple tap the MFB.

High Fidelity Acoustics



Pairing

Open the charging case, and take out the earbuds, earbuds will pair automatically, One of the earbuds flashes blue and red, the other earbud light goes out.

Activate bluetooth on the device, turn on Bluetooth, search for pairing name "Boult Audio Airbass" and click on it.

Single Mode : When on dual mode, put one earbud into the charging case. Only take one earbud out of the charging case and connect it.

Bluetooth Lost : Turn off mobile phone's Bluetooth, earbuds will enter pairing mode and can pair with other devices.

If the connection range is exceeded, the earbuds will enter the back connection mode. No connection within 5 minutes, the earbuds will turn off.

Reset

If your earbuds fail to pair, or only one works, reset them.

1. Delete all "Boult Audio Airbass" Bluetooth records on the phone and turn off bluetooth.
2. Put earbuds in the charging case and then take out to pairing modes, tap L&R 5 times simultaneously, hear "DU" prompt voice to clear all pairing.
3. Put earbuds back into the charging case.

Voice Prompt

You will hear 'power on' when the headset powers on.

You will hear 'power off' when the headset powers off.

You will hear 'connected' when the headset is paired.

You will hear 'low battery' when the headset is in low power status

You will 'gaming mode' when headset is in gaming mode.

Maintenance Instructions

Warranty is valid/invalid only basis of the below criteria:

The product should be purchased through legal and formal channels to be applicable for warranty.

Damaging the product intentionally/unintentionally, or due to natural disasters, etc. is not covered in the warranty.

Exquisite
Design



Pro+
Calling MIC

Touch Contro



IPX5 Water
Resistant

