


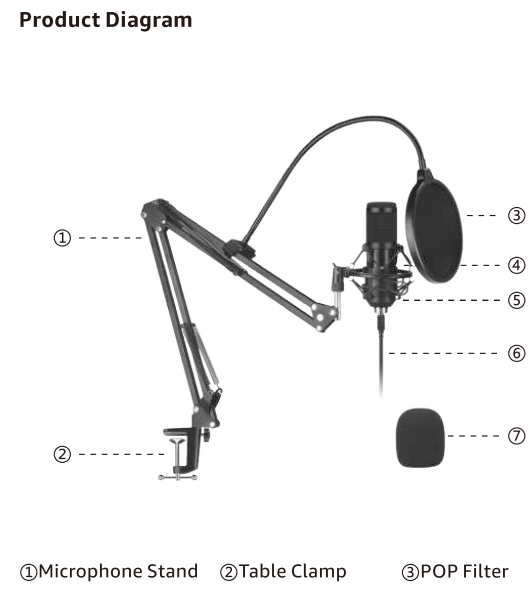 
折页-风琴折-展开尺寸：595x100mm 成品尺寸：85x100mm 128g铜版纸双面单黑印刷



amazon basics

Microphone
AB-MIC-06


Product Diagram



 
①Microphone Stand ②Table Clamp ③POP Filter
④Microphone ⑤Microphone Clip ⑥USB Audio Cable
⑦Mic Windshield

Installation


(1) Step 1, check the accessory list.




POP Filter Microphone Microphone Clip

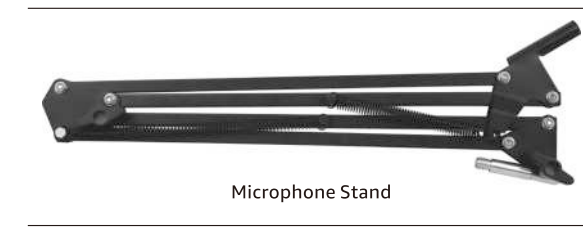


Microphone Stand

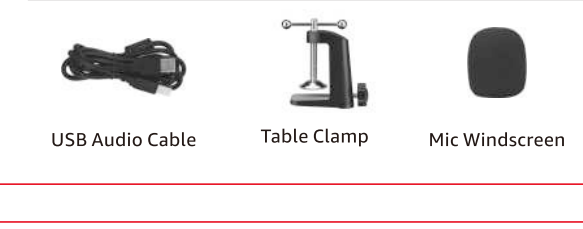 


USB Audio Cable Table Clamp Mic Windscreen



 
(2) Step 2, fix the clamp on the edge of the table. (table thickness up to 45mm)




(3) Step 3, insert the foot base (black) of the adjustable microphone stand into the table clamp.




(4) Step 4, tighten the screw.

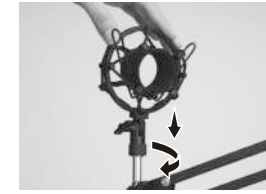


(5) Step 5, screw the shock mount onto the threaded end of the adjustable microphone stand.



(6) Step 6, insert the microphone into the microphone clip.



 (7) Step 7, fix the pop filter on the adjustable microphone stand to complete the assembly.

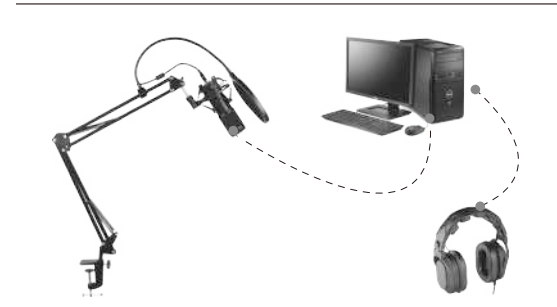

(8) Step 8, connect the microphone with your computer, prepare a wired headphones to hear the voices from the microphone.

Specifications


Polar Pattern	Cardioid
Sensitivity	-42±3dB(1.5V, 680KΩ; 0db=1V/Pa, 1KHz)
Frequency Response	100Hz-18000Hz
Impedance	< 680 KΩ
S/N Ratio	>70dB
Max SPL	125dB
Sampling Rate	192KHz/24Bit

General Operation Content

To manually adjust your input level via your computer's system preferences, use the following instructions relevant to your device platform/operating system.


Adjusting the input level on a Mac OS computer:

 1.Click on the Apple symbol at the top left of your screen, and select System Preferences.

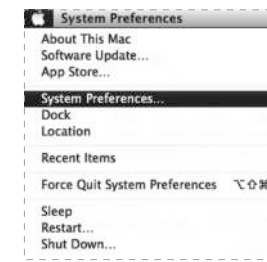

Accessing Mac OS System Preferences

 2.Click on 'Sound' to open the sound options.

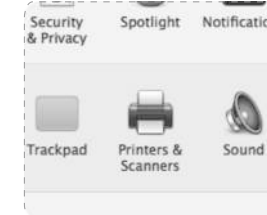


Opening 'Sound' options

3.Open the 'Input tab'.

4.From here, select the 'AB-MIC-06' from the list of devices, and adjust the input level using the slider.


Adjusting the input level on a Windows computer:

 1.Open the Start menu and click on 'Control Panel'.

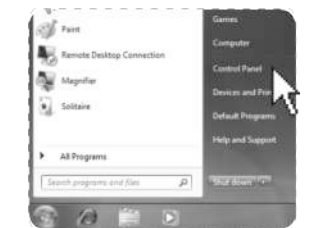

Accessing Windows Control Panel

 
2.Open the 'Sound' preferences from the Control Panel folder.

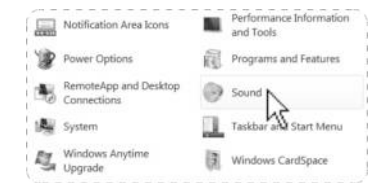

Opening 'Sound' options


3.Open the 'Recording' tab and double click on 'AB-MIC-06' from the list of devices.

 4.Adjust the input level using the slider.

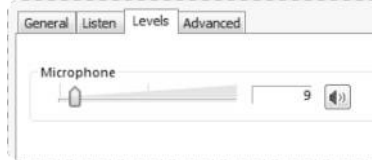


Adjusting input level

5.Microphone can work after finishing Step 4. If you want to test it and let the speaker play the sound of your Microphone, switch to the 'Listen' tab and enable option 'Listen to this device'. Sound delay or disturbance may occur on the microphone so that it can not be applied to party or speech in which occasions AMP or professional sound card are needed.



E-Waste Disposal:



Be a Responsible User. Recycle or refurbish your old Amazon brand products to help protect the environment. The crossed-out bin symbol on this product or its packaging signifies that this product should be discarded separately from ordinary household waste at its end of life. Be aware that it is your responsibility to dispose-off e-waste in such a manner that no damage to human health and environment occur. E-waste is generated from electronic and electrical appliances/components which have reached their end-of-life period or are no longer fit for their original intended use and are destined for recovery, recycling or disposal. E-waste when disposed or recycled improperly, can cause severe environmental pollution and adversely aspect the human body as they contain toxic chemicals. Please ensure that the electronic products that are unwanted, not working, and nearing or at the end-of-life are disposed-off only through authorize recycling or refurbishing points. Please contact your municipal waste management authority or your house-hold waste disposal service for additional details. This product and the components there of confirm to the provisions of hazardous substances. Specified under Rule 16 (1) and Rule 16 (4) of E-waste (Management) Rules, 2022 [Chapter VII titled the Reduction in the Use of Hazardous Substances in the manufacture of electrical and electronic equipment and their components or consumables or parts or spares].

Warranty & Service:

1. We grant 1 year warranty on the product commencing from the date of purchase against defects in manufacturing, materials,and assembly.

2. Within the warranty period, we will correct any defects in materials or Workmanship, either by repairing or replacing the complete appliance, as we may choose, free of charge. The warranty is valid to the original Purchase only.

3. For customer service related queries, please contact us:1800-419-2373 (available Monday to Saturday from 9.30 am to 6:00 pm expect national Holidays). For warranty detail, please visit the product page or call Customer service number.

4. Any accessories provided with the product are not covered under warranty. Any physical and/or water damage to the product shall void any warranty.

This warranty exclude, or does not apply or become void if:

1. Damage is caused by improper use, abuse or excessive use outside the Intended purpose.

2. Normal wear or use as well as defects that have a negligible effects on the value or operation of the appliance.

3. Repairs or product modifications have been carried out by unauthorized organization or person and if original amazon basics part are not used.

4. Consequential damages (including but not limited to loss of data or loss of income), nor compensation for activities done by yourself.

5. The proof-of-purchase has been altered in any way or is made illegible.

6. The model number, serial number or production date code on the product has been altered, removed or made illegible.

7. The defects are caused by connecting peripherals, additional equipment or accessories other than those recommended in the user manual.

Instructions of handling the product during and after its use and Do's and Dont's with respect to handling the product:

Do's:

a) Always look for information in the product's user's guide for end-of-life equipment handling.

b) Ensure that only authorized recyclers handle your electronic products.

c) Always call local authorized e-waste collection centers to dispose products that have reached end-of-life phase.

d) When your used electronic products, batteries or accessories reach the end of their life, always dispose them at your nearest authorized e-waste collection center.

e) Wherever possible or as instructed, separate the packaging material according to responsible waste disposal options and sorting for recycling.

f) Always ensure any glass surface is protected against breakage

g) Kindly ensure that the product is properly packaged as per instructions before handing it over to the authorized recycler.

Don't's:

a) Do not dismantle your electronic products on your own.

b) Do not throw electronics having "Do not Dispose" symbol on the product package in your regular garbage bins along with municipal waste since it will ultimately reach a landfill.

c) Do not give e-waste to informal and unorganized sectors like local scrap dealers. Be a Responsible User. Recycle your e-waste for a Greener Planet.