



INSTRUCTIONS FOR USE

①

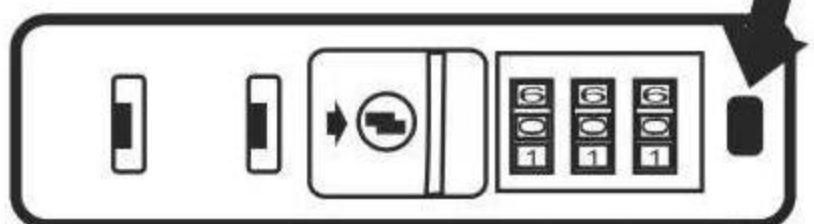

Sharp object press the right button

②

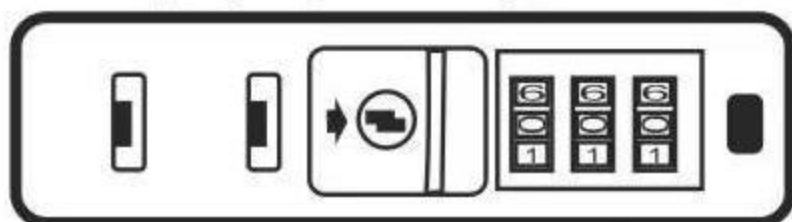

3-Digit rotation

③



button forward to reset

INSTRUCTIONS FOR USE

The default password is: 000

The steps to change the password are as follows:

- ① Press the button on the right side of the code lock with a sharp object and hold it until you set it successfully (sounds like "click")
- ② Turn the password wheel to adjust to the desired password combination (note! There will be some rotational resistance).
- ③ Push the switch to reset the structure (the small button on the right side pops up). If the switch is pushed again, the setting is successful.

Please remember the changed password!