 


Dr Brown's™

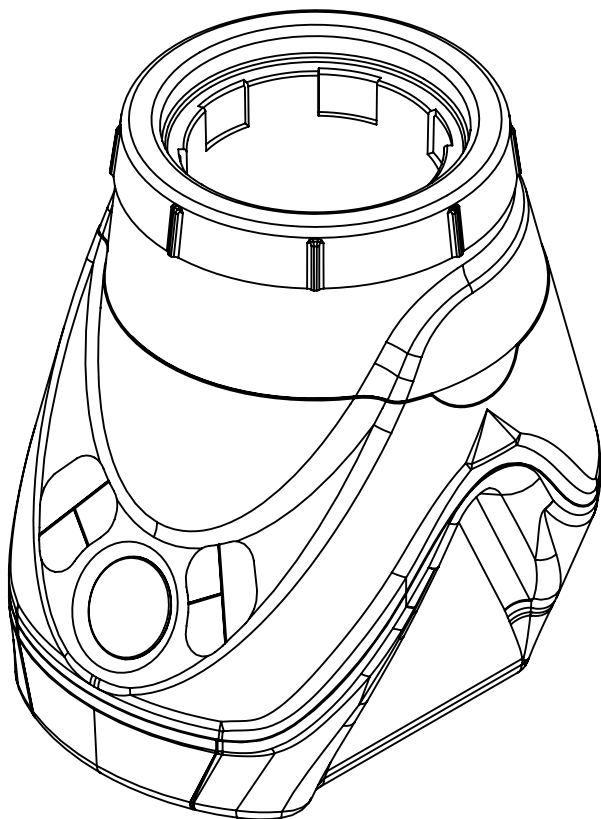

MilkSPA™ Breast Milk & Bottle Warmer

Model Number AC143

**Chauffe-biberon et
Chauffe-lait Maternel
MilkSPA^{MC}**

Modèle numéro AC143

**Calentador de
Biberones y Leche
Materna MilkSPA™**

Número de modelo AC143

EN READ AND SAVE THESE INSTRUCTIONS

Package Contents:

MilkSPA™ Breast Milk & Bottle Warmer

Quick Reference Guide

2x Storage Caps

Specifications:

Nominal voltage: 120VAC/60Hz

WARNING: Read the entire instruction manual to become familiar with the features of the product before operating. Failure to operate the product correctly can result in damage to the product, personal property and cause serious injury. Failure to operate this Product in a safe and responsible manner could result in injury or damage to the product or other property. This product is not intended for use by children without direct adult supervision. Do not attempt disassembly or use with incompatible components. This manual contains instructions for safety, operation and maintenance. It is essential to read and follow all the instructions and warnings in the manual, prior setup or use, in order to operate correctly and avoid damage or serious injury.

IMPORTANT SAFETY INSTRUCTIONS

READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS BEFORE USING THIS APPLIANCE

WHEN USING ELECTRICAL APPLIANCES, PRECAUTIONS SHOULD ALWAYS BE FOLLOWED TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK AND INJURY TO PERSONS, INCLUDING THE FOLLOWING:

- Read all instructions.
- Do not touch hot surfaces or heated water in the reservoir.
- To protect against electrical shock, do not immerse appliance in water or other liquid.
- Close supervision is necessary when any appliance is used near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Call Handi-Craft's Customer Service at 1-800-778-9001.
- Misuse of the product may cause potential injury.
- The heating element surface is subject to residual heat after use.
- The use of accessory attachments not recommended by Handi-Craft Company may cause injuries.
- Do not use outdoors. Household and indoor use only.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot liquids.
- To operate, plug cord into wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Never immerse the warmer or power cord in water.
- When in use, the warmer contains hot water. Be careful to avoid spilling or splashing any water on yourself when removing contents from the warmer.
- Before serving be sure food is at a safe temperature.
- Warming food for long periods is not recommended.
- Before feeding, pour a few drops of the liquid content from the baby bottle on to the back of your hand to test the temperature.

CAUTION: Always check the content temperature of the bottle or food jar before feeding your baby.

- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

- Before servicing, unplug cord from wall outlet. Do not leave cord within child's reach.
- Always UNPLUG the warmer before remove and install the reservoir. Do not add water directly to the chamber, only add water to the reservoir.
- The preheating of the appliance is not necessary.
- A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.

 
CAUTION: Do not use an extension cord.

- Any maintenance servicing should be performed by an authorized service representative
- **Using tap water may shorten the life of the unit. We recommend Distilled Water for best performance.**

SAVE THESE INSTRUCTIONS

Parts of the Warmer:


1. Warmer Base
2. Controls
3. Warming Chamber
4. Basket
5. Storage Caps

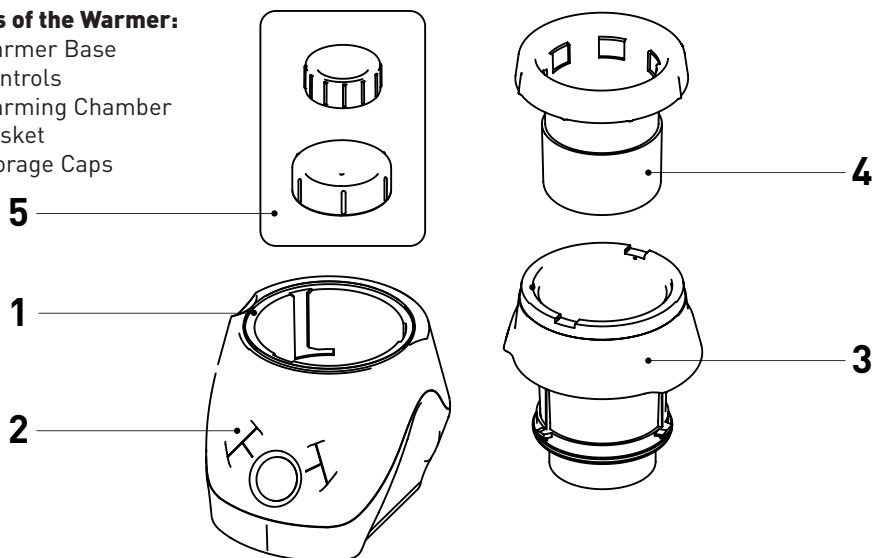

OPERATING INSTRUCTIONS

Always UNPLUG the warmer before filling.

 1. Firmly hold the warmer base and with the basket in place, twist the warming chamber counter-clockwise. Lift and remove the basket and warming chamber from the base.
2. Add water to the inner rim indicated by the arrow.
3. Reinstall warming chamber and plug in the power cord.

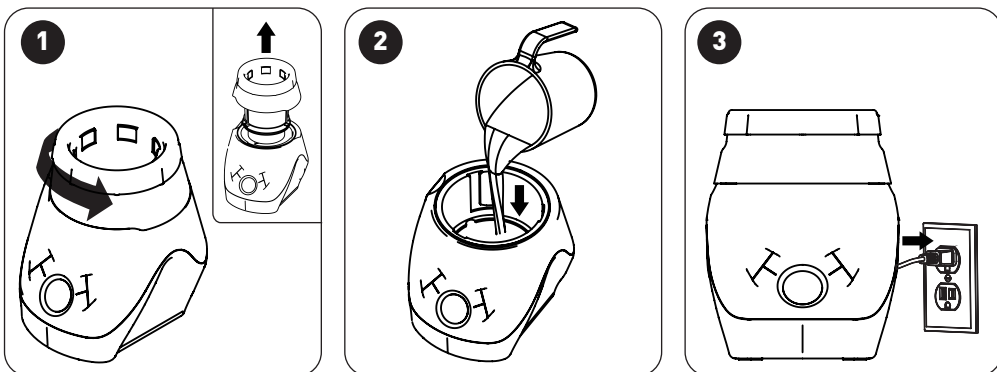

USING YOUR WARMER

Warming Plastic Bottles

CAUTION: Always check the content temperature before feeding your baby.

 
- To prevent leakage when warming Dr. Brown's bottles, do not include insert and reservoir. You may warm with the nipple and collar reinstalled or use the included storage caps (recommended).



- Place vessel in warming basket.

- When warming items that are too large for the basket, warming water may overflow. Remove the basket and insert the item in the warming chamber.


Note: Use of the basket will raise the water level and speed the time in which the bottle will warm.

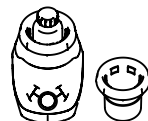

Warming Glass Bottles

CAUTION: Always check the content temperature before feeding your baby.

 - Glass bottles should never be warmed from frozen as breakage may occur during warming.
- To prevent leakage when warming Dr. Brown's bottles, do not include insert and reservoir. You may warm with the nipple and collar reinstalled or use the included storage caps (recommended).
- In the event that warming water overflows when heating wide-neck bottles, simply remove the basket and warm directly in the warming chamber.

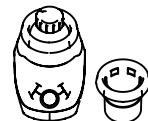

Warming Milk Storage Bags

CAUTION: Always check the content temperature before feeding your baby.

Milk Storage Bags are available in a variety of sizes depending on the manufacturer. Frozen bags can also be in a variety of contorted shapes depending on the freezing condition. The basket may or may not be used depending on the bag shape.

Note: Use of the basket will raise the water level and speed the time in which the milk will thaw and warm.



SETTING WARMING TIME

With the power connected, press any of the 5 function keys to turn the unit on.



 
Power Off



Starting Temperature Condition



Vessel/Volume/Units Selection

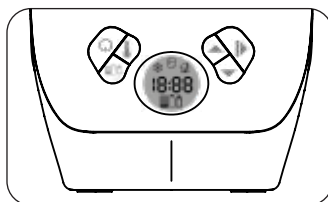

Up



Cycle Start



Down

Changing Units: To change between oz and ml, hold the  button for 3 seconds.

SETTING WARMING TIME (continued)

This chart corresponds to the times pre-programmed into the warmer.

MilkSpa WARMING TIME CHART					
Dr. Brown's bottle	Volume	(22°C / 72°F)	(4°C / 39°F)	(-17°C / 0°F)	Basket
2oz / 60mL	Plastic	2:15	3:30	12:15	
4oz / 120mL	Plastic	2:45	6:00	17:00	
4oz / 120mL	Glass	2:30	4:45	X	
8oz / 250mL	Plastic	3:30	8:45	19:59 + 6:15	
8oz / 250mL	Glass	3:15	5:45	X	
5oz / 150mL	Plastic	3:00	5:45	19:00	
5oz / 150mL	Glass	2:30	4:30	X	
9oz / 270mL	Plastic	3:45	8:45	19:59 + 4:30	
9oz / 270mL	Glass	2:45	6:30	X	
11oz / 325mL	Plastic	5:00	10:30	X	
2oz / 60mL	Bag	X	3:00	9:45	
4oz / 120mL	Bag	X	3:30	12:30	
6oz/180mL	Bag	X	5:00	15:30	
WARNING: THIS TIME CHART IS APPROXIMATE FOR DR. BROWN'S™ VESSEL SIZES. WARMING TIMES WILL VARY DEPENDING ON THE VESSEL MATERIAL, SHAPE AND VOLUME. TEMPERED GLASS HAS BEEN TESTED FOR USE IN THE DR. BROWN'S BREAST MILK AND BOTTLE WARMER. WE DO RECOMMEND GRADUAL WARMING TO PREVENT BREAKAGE. ALWAYS TEST TEMPERATURE BEFORE FEEDING! DO NOT FREEZE GLASS BOTTLES!					

6. Select the vessel material type. Each button press toggles options.



Plastic Bottle

 


Glass Bottle



Storage Bag

7. Select the volume in the vessel. Use the UP or DOWN Arrow button to adjust between 2oz (60ml) and 11oz (325ml).

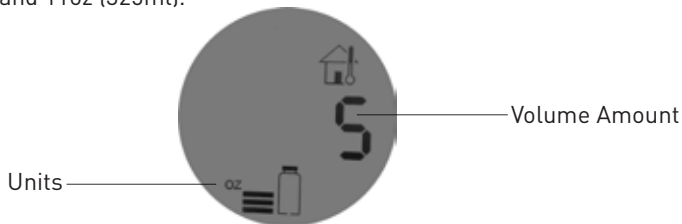

8. Select the start temperature condition of the vessel. Each button press toggles the 3 options.



Room Temperature



Refrigerator



Frozen

Start Condition ————



Manual Time Adjustment: While in the temperature condition mode, use the UP and DOWN buttons to change the timer setting. NOTE: The last used warming time is remembered for your next use.

9. Press the "Cycle Start" button. The timer will count down until warming is finished.

CLEANING THE WARMER

Daily

1. Allow unit to cool before cleaning.
2. Remove the top warming chamber from the base.
3. Empty the water from the base.
4. Rinse the reservoir, warming chamber and components with clean water. If storing unit for longer than a day, dry or allow to air dry before re-assembly. **DO NOT SUBMERGE BASE IN WATER.**

Special Cleaning

If the unit warming chamber and/or warmer base becomes contaminated with milk: Hand wash with clean water and mild detergent.

If buildup occurs on the heating element surface, follow this descale procedure:

1. Mix 175 ml (5 oz) of distilled water with 45 ml (2 oz) white vinegar.
2. Fill lower reservoir with the water/vinegar mix.
3. Run an 8 minute warming cycle.
4. Allow to cool, disassemble and rinse warmer base, warming chamber and components with clean water.

DO NOT SUBMERGE BASE IN WATER.

Using tap water may shorten the life of the unit. We recommend Distilled Water for best performance.

TROUBLESHOOTING

If the warmer is not operating, check that:

1. The power cable is connected to the power outlet.
2. The water is filled to the proper level.
3. The unit is correctly assembled.
4. If display shows the error "ERR"-"H2O", the warmer has low water condition. Unplug from power. Fill water to the correct level. Reconnect to Power.
5. Water overflowing from the warming chamber: This can occur if the bottle has a very large diameter such as with a wide-neck glass bottle with silicone sleeve. Remove the basket and warm bottle directly in the warming chamber.

WARRANTY

This warming appliance is warranted against defective material or workmanship for a period of one year from the date of purchase. Any defective part will be repaired or replaced at no charge if it has not been tampered with and appliance has been used according to these printed instructions. This Warranty gives you specific legal rights as well as other rights which vary from state to state.

CUSTOMER SERVICE

If you experience unsatisfactory operation or have any questions/comments, call Handi-Craft's Customer Service at 1-800-778-9001, send an email to info@handi-craft.com, or write to Handi-Craft Company, Customer Service, 4433 Fyler Avenue, St. Louis, Missouri 63116 USA. Our Customer Service Representative will advise you how to correct the problem yourself, or will ask you to return the product for repair or replacement.

Handi-Craft Company
St. Louis, Missouri 63116 USA
drbrownsbaby.com (800) 778-9001
Made in China.
May be patented, see drbrownsbaby.com/patents .
©2018 Handi-Craft Company. All Rights Reserved. F1

DR. BROWN'S and all other trademarks are owned or used under license by Handi-Craft Company.

