

CYC Ride Control

App Users Guide



INTRODUCTION

CYC RIDE CONTROL

Monitor & customize your e-bike riding experience for all CYCMOTOR mid-drive systems. Use it as a secondary dashboard, settings set-up, or both. Unleash all the possibilities of e-bike customization at your fingertips.

The mobile app is not the only way to customize your system. The controller is also programmable via the included display- integrated for your convenience.

This platform is your go-to-station for your CYCMOTOR kit & X6/X12 controllers.

FEATURES


- Bluetooth connectivity
- Complete with torque sensor configuration
- Compatible with X6 & X12 controllers
- Real-time dashboard for all your motor & riding information
- Fully customizable parameters for pedal assist, throttle, & gear preferences



DASHBOARD

Brake sensor
indicator **COMING
SOON**

ALL PARAMETERS SHOW
REAL-TIME INFORMATION

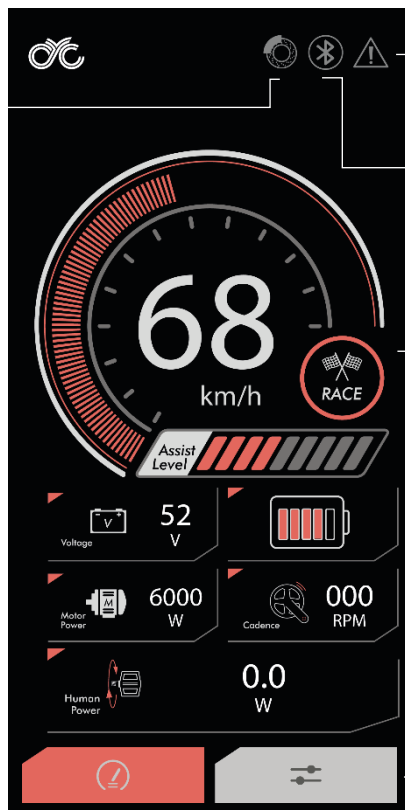

Warning icon to check error
codes & clear faults

Bluetooth icon to connect to your
device

Instantly change between
STREET & RACE mode

Change between your
DASHBOARD & SETTINGS
page


ALL PARAMETERS SHOW
REAL-TIME INFORMATION



Serial number connected to
the controller



CONNECTING A DEVICE

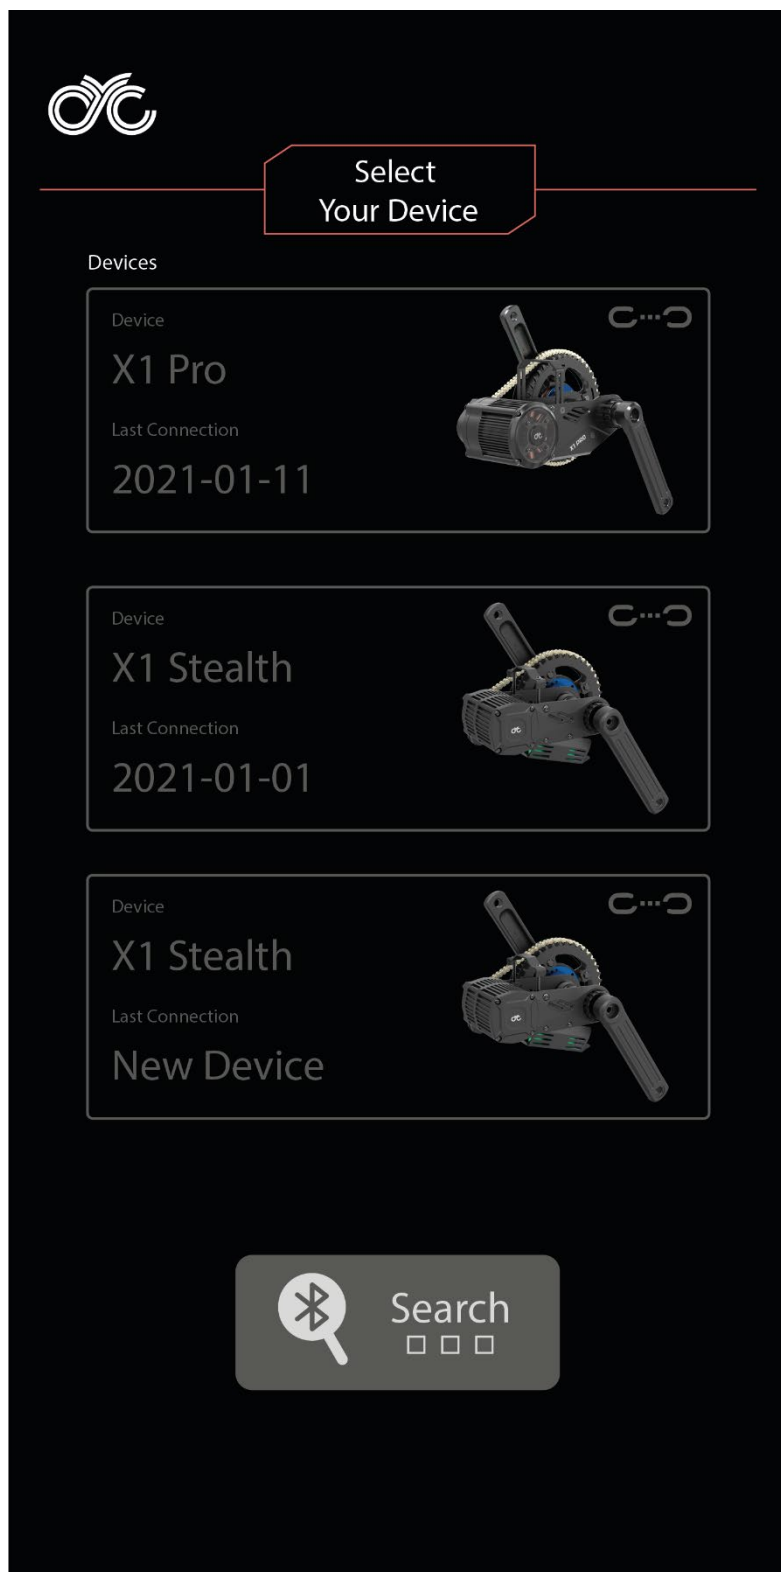

STEP #1:

Open the app and tap the Search button at the bottom of the screen. Kindly ensure your phone's Bluetooth is enabled. (Please keep close to the motor while connecting)

STEP #2:


Available devices will then be listed, select your kit and it will begin connecting to the controller. (Please note signal strength)

STEP #3:

Once connected, the CONNECT icon will change stating you are connected & can select again to disconnect.



MAIN SETTINGS PAGE

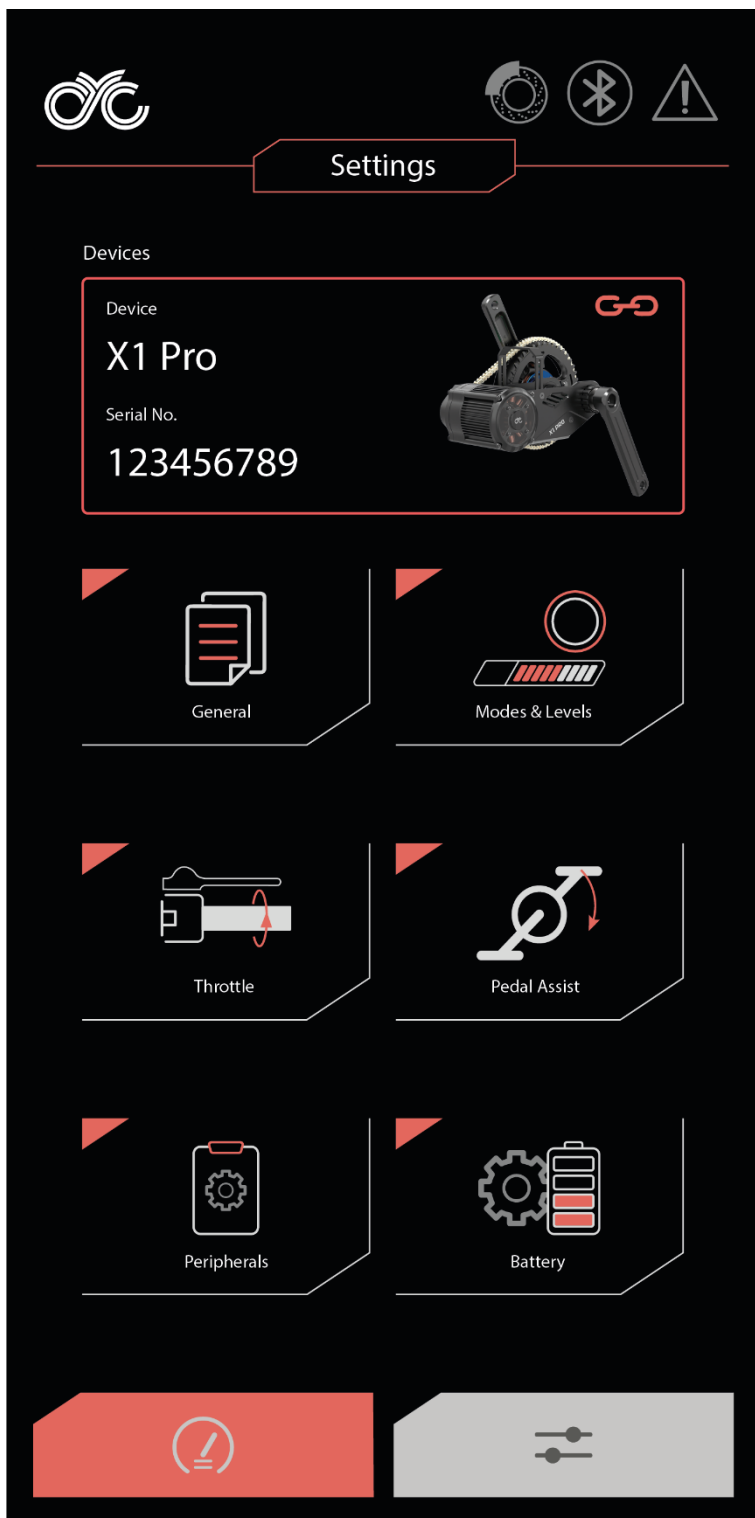

The settings page allows you to navigate through different parameter categories. There are six different categories with each providing a set of adjustable parameters or readings from your ebike system.


IMPORTANT

Save all new changes in parameters to flash or risk losing progress. Any changes made that were not saved will be lost after a restart. Note to save after every change in value.

To save to flash, tap the 'Save' button in the upper righthand corner, 'Save successful' message will appear upon completion.



GENERAL

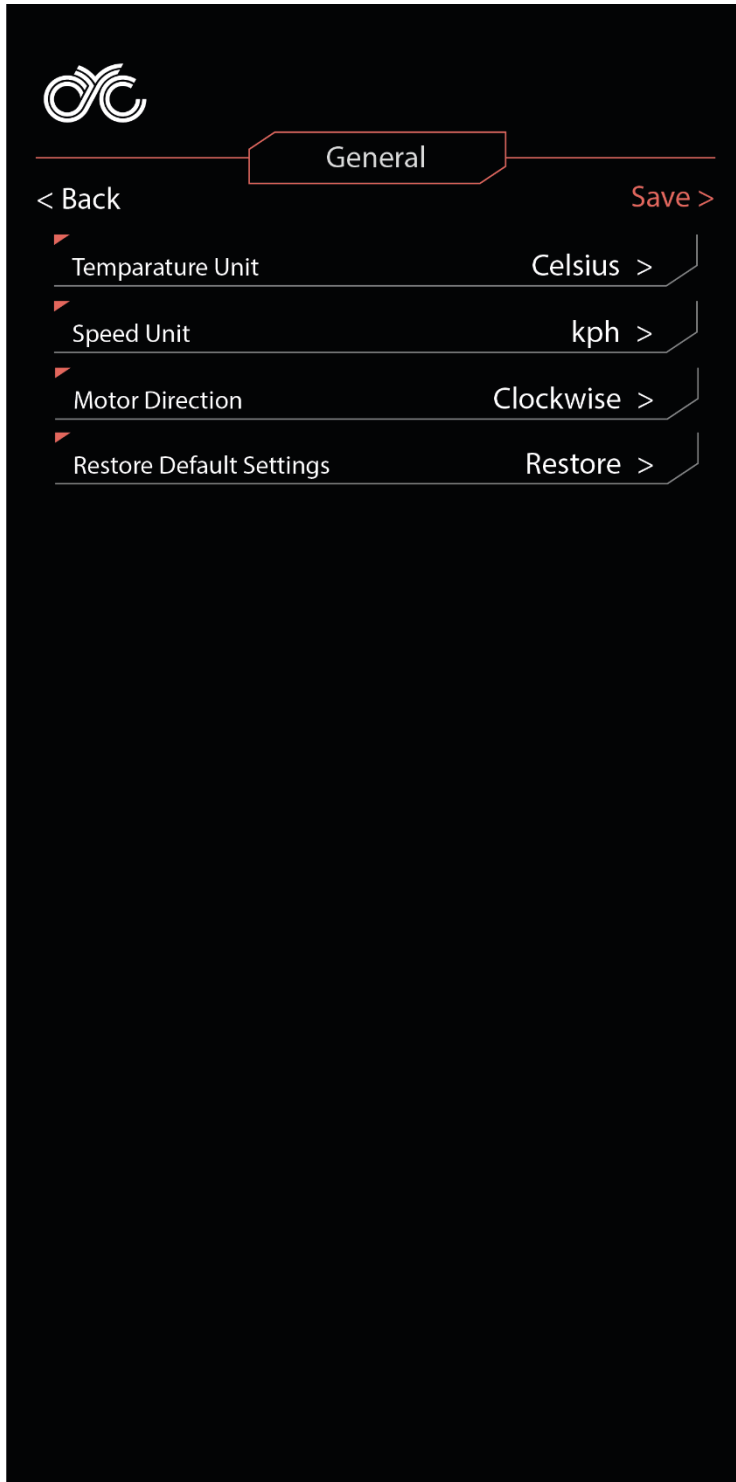

TEMPERATURE UNIT

Set your units to display in degrees Celsius (°C) or Fahrenheit (°F)

SPEED UNIT

Set the speed unit to miles or kilometers.

MOTOR DIRECTION

This setting is for users who'd want to switch the direction to where the motor is facing. Note that this is reserved for specific uses only.

WARNING: Do not change this setting if using the motor in its default position. Contact CYC for assistance.

RESTORE DEFAULT SETTINGS

Restore to factory/default settings.



MODES & LEVELS



Modes & Levels

< Back

Save >

Mode After Restart

Enabled >

Street

Race >

Throttle Assist

Pedal Assist

Throttle Assist

Pedal Assist

 
Speed Limit

Speed Limit

Throttle Power Level

(Slide or Inout for Setting)


1000 Low



1000 Mid



 1000 High




5000


Throttle Torque Level

(Slide or Inout for Setting)

 1000 Low



1000 Mid

 

1000 High



100

RACE & STREET MODE

You can set the throttle & PAS output independently for both modes.

RACE MODE THROTTLE & PAS

Race Mode is your “boost” or “full power” mode and has parameters set for reaching closer to the system’s full capabilities. You can adjust these to your own preference within the capabilities of your controller. The default setting in Race Mode is 3000W & 100 km/hr.

STREET MODE THROTTLE & PAS

Street Mode is intended to be set to your region’s legal limits. You can adjust these to your own preference or to your region’s legal limits. You can adjust these to your own preference or to your region’s legal limits. The default setting in Street Mode is 750W & 25Km/hr.



THROTTLE



Throttle

< Back

Save >

 
Throttle Control

Enabled >

Ramp up

Adjust via slider or input value


0 S >



Input Deadband

Adjust via slider or input value

 0 >



Max Voltage

4.0 V >

Min Voltage

0.9 V >

Throttle Auto Setup

RAMPING TIME

This is the time it takes for the motor to achieve the required input. For example, if you open the throttle fully, it will take 250ms (by default) before the motor gives you full power. It will gradually ramp up to full power within the set time. We recommend not to set this below 150ms.

INPUT DEADBAND

This value pertains to opening the throttle when it's completely closed. This is the amount of throttle can be moved from the zero position without generating a response from the motor. If this value is set lower, your throttle will engage quicker and vice versa.

MAX VOLTAGE


This value should be the same as the Throttle Voltage Reading when the throttle is closed and sets the output when it is not active.

MIN VOLTAGE

This is the output of the throttle when opened fully and is pre-set when purchased. This does not need any change with CYC supplied throttles.

THROTTLE AUTO SETUP

If you'd like to use your own throttle, this will automatically setup the minimum and maximum voltage accordingly. Follow the steps as prompted on the screen.

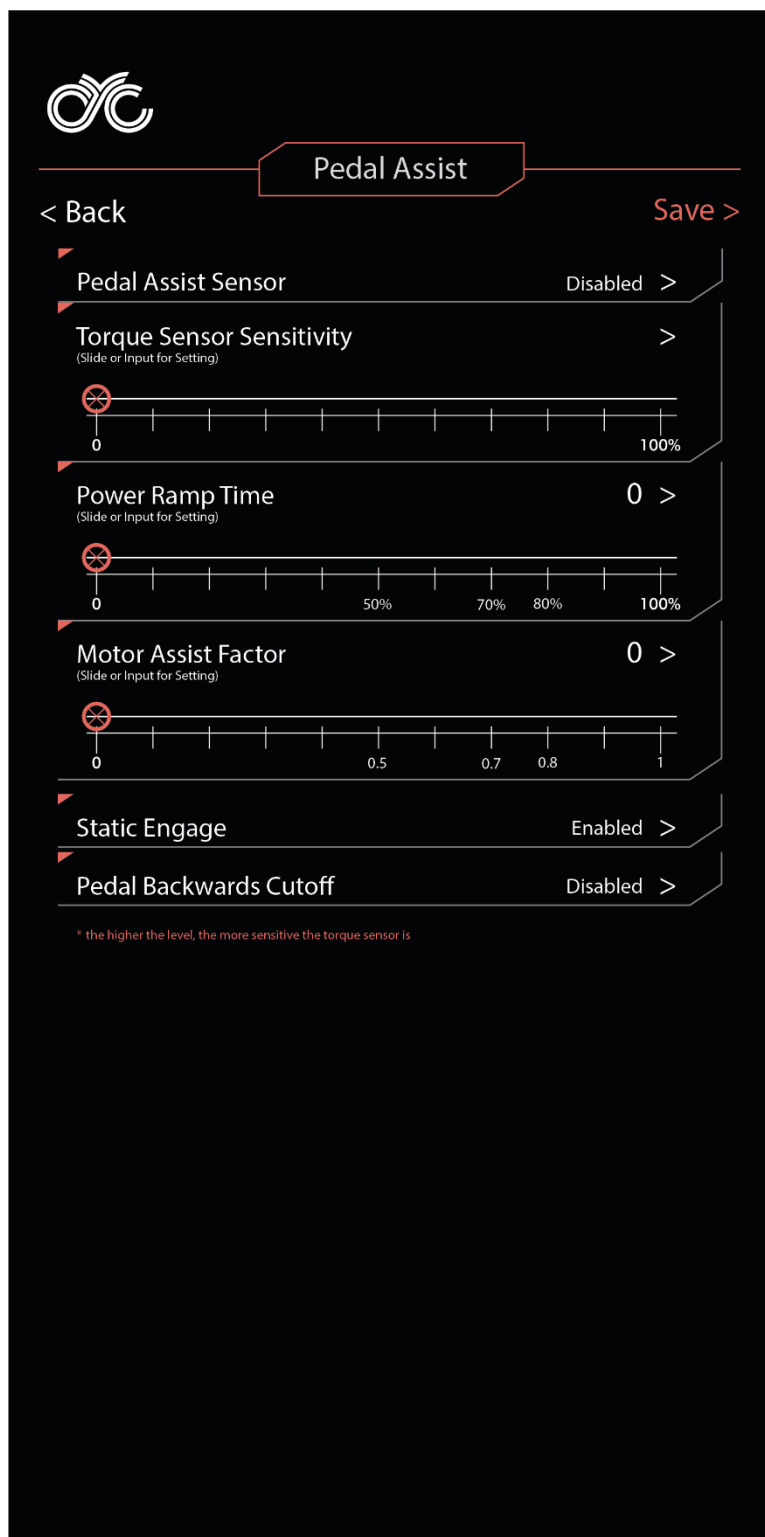

PEDAL ASSIST

PEDAL ASSIST SENSOR

Enabling pedal assist.

TORQUE SENSOR SENSITIVITY

This value pertains to activating pedal assist when it's completely off. This is the amount of pedal force required to activate the pedal assist. If this value is set higher, your pedal assist will engage with less force and vice versa.

POWER RAMP TIME

The amount of time it takes to reach the desired input. This is the responsiveness of the motor.

MOTOR ASSIST FACTOR

This value pertains to how hard you need to pedal to get full power.

STATIC ENGAGE

This feature allows for a cadence-free pull away. i.e., only torque (40N.m.) is required to activate pedal assist.

Pedal Backwards Cutoff

This features all you to cut the motor power when you pedal backwards.



PERIPHERALS SETUP



< Back

Peripherals

 
Save >

Speed Sensor

Wheel Diameter 29 inches >

Wheel Magnet(s) 1.0 pcs >

(Slide or Input for Setting)



Brake Sensor

Brake Sensor Disabled >

Brake Sensor Signal Invert Disabled >

Motor

Motor Temp Enabled >

SPEED SENSOR

Wheel Diameter

The wheel diameter can be measured or calculated. We advise that this number must be calibrated so that vehicle speed within the app matches display speed. This will give more accurate speed limiting under different modes.

Remember to set the correct wheel size within the display as well (only applicable to 500c & 750c displays). Kindly refer to your user manual.

Wheel Magnet

This is the number of magnets in the wheel that is communicating with the speed sensor. For more accurate vehicle speed limiting and measurement, we advise to add more magnets to the wheel.

BRAKE SENSOR

Brake Sensor Enable

Enable/Disable brake sensors

BRAKE SENSOR SIGNAL INVERT TAB

If you are using brake sensors from a different supplier, you can use this feature to set up your brake sensors as needed.

MOTOR TEMP

This is an advanced feature and requires a password from CYC to change. This allows you to disable your motor temperature sensor. Contact technical_support@cycmotor.com for more details.



BATTERY



< Back Save >

Battery Type
Adjust via slider or input value

13s >

6 13 20

Maximum Voltage 10 V >

Minimum Voltage 10 V >

SERIES OF CELLS

10s = 36V, 14s = 52V, 20s = 72V

MAXIMUM VOLTAGE

The value the controller will fault when connecting too high a voltage to the system. An error will be triggered if a battery is too high of a voltage.

MINIMUM VOLTAGE

The value the controller will fault when connecting too low a voltage to the system. This setting can be used to protect your battery if too much voltage sag is detected.



DISCLAIMER

If you require any more information or have any questions about the user manual disclaimer, please contact us via email at technical_support@cycmotor.com.

All information contained in this user's guide is published in good faith and for general informational purposes only. CYCMOTOR LTD does not make any warranties about the completeness of this information and encourages further inquiries as stated above if needed. CYCMOTOR LTD will not be held liable for any losses and/or damages caused by negligence or misinterpretation.

PRIVACY POLICY

This service is provided by CYCMOTOR LTD. at no cost and is intended for use. This text is used to inform visitors regarding our policies with the collection, use, and disclosure of personal information if anyone decided to use this service. If you choose to use this service, then you agree to the collection and use of information in relation to this policy. The personal information that we collect is used for providing and improving the service. We will not share your information with anyone except as described in this Privacy Policy. The terms used in this Privacy Policy have the same meanings as in our Terms and Conditions, which is accessible at CYCMOTOR LTD unless otherwise defined in this Privacy Policy.

Information Collection and Use

For a better experience while using this service, we may require you to provide us with certain personally identifiable information, including but not limited to Name (optional), Phone number, Email address, Location (Optional). The information that we request will be retained by us and used as described in this Privacy Policy.

Visit www.cycmotor.com/privacy-policy for more detailed information.