
INSTRUCTIONS OF REMOTE CONTROL

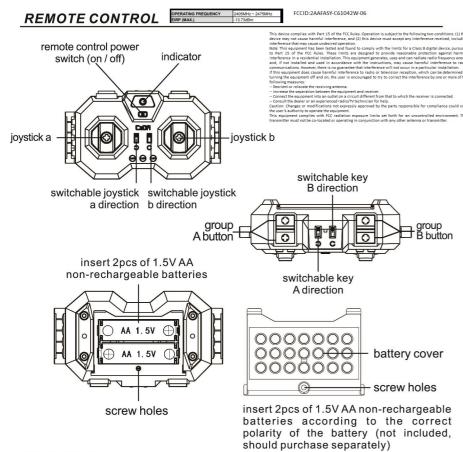

CHARGER

charging output: 5V-2A (not recommended to use a higher power charger)








The main parts of the toy have overload protection function. When connected to overload or faulty components, it will automatically power-off (it can't work),need to charge it for more than 2 seconds to recover.

BATTERY CASE

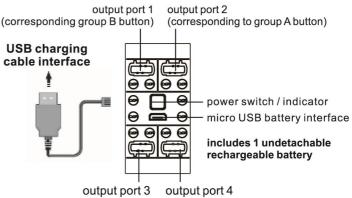

output port 3 output port 4 (corresponding to joystick B) (corresponding to joystick A)

ATTENTION

- 1. You must charge the product when using it for the first time. The charger output current and charging line have an effect on the charging time.
- When charging, the blue light flashes to indicate that the charging is normal; the blue light does not flash when the charging has been completed; charge for more than 3 hours to play.
- 3. The output port can only be used with the matching plug the product.
- 4. The output port can not touch the metal (conductive) surface. Please pay attention when placing and avoid damaging the product.
- 5. This toy contains batteries that are non-replaceable.

2.4GHz AUTOMATICAL CODE DESCRIPTION

- 1. When the remote control is equipped with the battery, press the power switch of it, and the indicator light of the remote control flashes slowly and starts to match the code; Press the power switch of the battery box again, the indicator light of the battery box will change from flashing into long bright. In the meanwhile, the indicator light of the remote control will flash twice, and then goes out, indicating the success of the code.
- 2. Each remote control can only pair with one battery box. When the pairing code is successful, each battery box does not interfere with each other.
- 3. If the remote control or the battery box don't get the 2.4G signal from corresponding battery box or remote control after 2 minutes, or does not have any button operation after about 4 minutes in a successful code state,it will automatically shut down. Need to press its power switch again to continue to use.
- 4. Turn off the power to re-pair the code with the other remote control or battery box.

The instruction manual must be retained since it contains important information.

06. 03. 00051027. 06