

昌明印刷廠有限公司
Cheong Ming Press Pty Ltd

4/F, Mai Sik Industrial Building,
1-11 Kwai Ting Rd., Kwai Chung, N.T., Hong Kong
Tel: (852) 2426 2721 Fax: (852) 2480 5997

Material No: F6744UU00
Item * P/N: F6744UU00_INST_FUR_FURBY_CORAL_FAR

File Name: F6744UU00_INST_FUR_FURBY_CORAL_FAR.ai
Version: US
FAR Date: 10 24 2022
1st PVF Date: 10 24 2022
2 and PVF: 12 05 2022
HFE Prepress: Edmond


PTP Operator: Ji Jian Zhong
Reviewed by: Yun Cong Yin
Proof:
Software: ILLUSTRATOR CC
Printer: Epson 9910
Screen: 175 Lpi

Print Color: Cyan Magenta Yellow Black die

☐ 001 ☐ 002 ☐ 003

Signature:

NOTES TO PRINTER: Proofs accurate for process color only.
All spot colors must follow PMS Color
Formula Guide or color swatch specified.



F6744UU00_INST_FUR_FURBY_CORAL_FAR



XCMYK_Print_FM網



SENSITIVE ITEM

Warning this is a sensitive product!
Please handle it carefully!

SIP




6+



"HEY PARENTS"
SCAN FOR INSTRUCTIONAL VIDEOS!

IMPORTANT: BATTERY INFORMATION
Retain this information for future reference. Batteries should be replaced by an adult.

CAUTION:
TO AVOID BATTERY LEAKAGE
1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.
Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.



This product and its batteries must be disposed of separately at your local waste recycling centre. Do not dispose of them in your household waste bin.

FCC STATEMENT
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.
CAUTION: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

DÉCLARATION DE LA FÉDÉRATION DES COMMUNICATIONS
Cet équipement est conforme à la Section 15 des règlements de la FCC. Son fonctionnement est soumis aux deux conditions suivantes: (1) Cet équipement ne peut causer d'interférence nuisible; (2) cet équipement doit pouvoir fonctionner même s'il capte de l'interférence, incluant celle pouvant provoquer un fonctionnement indésirable.
NOTE: Cet équipement a été testé et est conforme aux limites d'un instrument numérique de classe B de la Section 15 des règlements de la FCC. Ces limites ont été établies pour assurer une protection raisonnable contre les brouillages préjudiciables dans une installation résidentielle. Cet équipement produit, utilise et peut émettre des fréquences radioélectriques et, s'il n'est pas monté et utilisé conformément aux instructions, peut créer un brouillage préjudiciable aux radiocommunications. Cependant, ces limites ne garantissent pas qu'il n'y aura pas d'interférence dans une installation particulière. Si ce produit produit un brouillage préjudiciable aux transmissions télévisuelles ou radioélectriques, ce qui peut se déclarer à la mise en marche et à l'arrêt du jouet, l'utilisateur doit corriger la situation en suivant une ou plusieurs des mesures suivantes:
- réorienter ou déplacer l'antenne de réception;
- augmenter la distance entre l'équipement et le récepteur;
- demander l'aide d'un marchand ou d'un technicien en radio et télévision.
ATTENTION: Toute modification ou altération apportée à cet appareil, sans autorisation expresse de la partie responsable de sa conformité, peut révoquer l'utilisation de droit de l'utilisateur.

BATTERY INFO:

FIRST TIME FURBY SETUP:

1 Use a PHILLIPS HEAD SCREWDRIVER (not included) to OPEN THE COVER.

2 Insert 4 fresh AA BATTERIES and SCREW THE COVER BACK ON.

3 Press the HEART GEM and FURBY will tell you what to do next!



DON'T FORGET THE HIDDEN BATTERY!

START HERE:

1. PRESS FURBY'S HEART GEM!
2. Say "HEY FURBY!"
3. WAIT for FURBY to respond. FURBY'S EARS will GLOW GREEN and you'll HEAR A CHIME.
4. When the HEART GEM AND EARS CHANGE TO WHITE, that means FURBY is LISTENING.
Now you can SAY ONE OF THESE COMMANDS:

"DANCE PARTY"
Unlock songs, a freeze dance game, and more! Tap on Furby's head to skip songs or tap the tummy to repeat.

"COPY CAT"
Furby will wait 6 seconds to hear you say something, then say it back with silly voice effects. Tap the head to change voices and tap the tummy to repeat.

"TELL MY FORTUNE"
CRYSTAL FURBALL MODE: Rub the tummy for happy words of wisdom. Shake to switch to Magic Furball mode. MAGIC FURBALL MODE: Ask a question and shake Furby for an answer.

HEY FURBY!

"LET'S CHILL"
Furby will play peaceful music and guide you through calm exercises or cheer you up with positive sayings. Tap on Furby's head to explore the different routines.

"LIGHT SHOW"
Make Furby's ears light up for 10 minutes! Tap the head to see different color patterns. Touch the tummy for special light effects.

Try each mode again and again to discover more amazing things FURBY can say and do!
Tell My Fortune and other play modes are for entertainment purposes only.

QUICK START GUIDE:

PRESS FURBY'S HEART GEM!
Say "HEY FURBY!"
WAIT for FURBY to respond.
When FURBY is LISTENING, SAY ONE OF THESE COMMANDS:

"DANCE PARTY"
"COPY CAT"
"TELL MY FORTUNE"
"LET'S CHILL"
"LIGHT SHOW"

COMMANDS YOU CAN GIVE FURBY
For a full explanation of each, see the Start Here section.

FURBY and HASBRO and all related trademarks and logos are trademarks of Hasbro, Inc. © 2023 Hasbro.
Hasbro, Pawtucket, RI 02861-1059 USA. HASBRO CANADA, LONGUEUIL, QC, CANADA J4G 1G2. US/CANADA TEL: 1-800-255-5516. Manufactured by: Hasbro SA, Rue Émile-Boeschat 31, 2800 Delemon, CH.
Represented by: Hasbro, De Entree 240, 1101 EE Amsterdam, NL. Hasbro UK Ltd, P.O. Box 43, Newport, NP19 4YH, UK. Tel.: 00800 2242726. consumer_affairs@hasbro.co.uk



F6744
PNU0084814

HELPFUL HINTS:

Press the heart gem and say "Hey Furby!" again to change modes. Remember to WAIT FOR FURBY TO RESPOND before you say your next command.

You'll UNLOCK MORE phrases, songs, and activities the more you play. FURBY will let you know when you've UNLOCKED something!

Make sure you're in a QUIET PLACE. FURBY reacts to noise and music!

Speak clearly and say ONLY ONE command at a time.



ANATOMY OF FURBY:

HEAD:
Loves to be pet and brushed. Responds to your touch!

HEART GEM:
PRESS HERE to make FURBY pay attention to you, change modes, and power off.

EARS:
React to music and speech with lights. Shake FURBY to change which color they glow!

TUMMY:
See what happens when you tickle and cuddle FURBY's tummy.

MOUTH:
Feed with your finger or FURBY's favorite pizza charm.

FEET:
FURBY may not have arms, but FURBY's feet are always ready for dancing.

FURBY FASHION GUIDE:

COMB AND CARE!

HAIR CLIPS TO SHARE...

...DOUBLE AS BEADS TOO!

MAKE YOUR OWN:

FRIENDSHIP BRACELET

NECKLACE FOR FURBY

OR FASHIONS FOR YOU!

MEET OTHER FRIENDS:

When you have 2 or more FURBY friends next to each other (sold separately):

1 Hold both of their heart gems for at least 5 seconds or until you hear the phrase: "FURdar Activated".

2 Choose your "leader" FURBY and tap their head once.

3 The "leader" will pair with the other FURBY to start the fun!

Each Sold Separately. Subject to availability.



FURBISH DICTIONARY:

FURBY SPEAKS THEIR OWN LANGUAGE!
See if you can figure out what FURBY is saying.

Kah	I or Me
Oo-Nye	You
Noo-lah	Friend
Noh-lah	Dance
May-lah	Hug
Dah-ay-loh-oo-tye!	Good morning
Ah-mah-doo-ay	Have fun
Dah doo-ay wah	Big fun
Oh-kah-tee	OMG
Kah mee-mee noo-loo	Me very happy
Kah toh-loo ee-kah-lee-koo	Me like music
Dah-kah-oo-nye	Thank you
Tee-wee-lah	Twinkle
Wah-tee	Sing
Loo-loo	Joke
Dah-noh-lah	Party time

WAKE UP:
Press the heart gem or feed Furby!

TIPS & TROUBLESHOOTING:

I SAID A COMMAND BUT FURBY WON'T DO IT.
- Try again: press the heart gem button, say "Hey Furby!", and repeat the command.
- WAIT FOR FURBY TO RESPOND to "Hey Furby" before you say the command.
- It may be too noisy where you are. Move to a quieter place.
- Turn Furby off and back on again.
FURBY'S FUR GOT DIRTY.
- Gently wipe it down with a damp cloth, but don't let it get wet! Furby doesn't like water.
FURBY WON'T TURN ON OR DOESN'T SOUND RIGHT.
- Make sure you have fresh batteries. You won't lose the fun things you unlocked when you change the batteries.

POWER OFF:

SLEEP MODE
Lay FURBY down on its back to hear sleep sounds.

POWER OFF
Press the heart gem rapidly 3 times for full power off.

TIPS & TROUBLESHOOTING:

I SAID A COMMAND BUT FURBY WON'T DO IT.
- Try again: press the heart gem button, say "Hey Furby!", and repeat the command.
- WAIT FOR FURBY TO RESPOND to "Hey Furby" before you say the command.
- It may be too noisy where you are. Move to a quieter place.
- Turn Furby off and back on again.
FURBY'S FUR GOT DIRTY.
- Gently wipe it down with a damp cloth, but don't let it get wet! Furby doesn't like water.
FURBY WON'T TURN ON OR DOESN'T SOUND RIGHT.
- Make sure you have fresh batteries. You won't lose the fun things you unlocked when you change the batteries.

FULL RESET:

Turn Furby upside down. Press and hold both the mouth and heart gem at the same time for over 5 seconds. You will see the ears flash red and hear a beep.