



## MEET YOUR FIRE HD 8

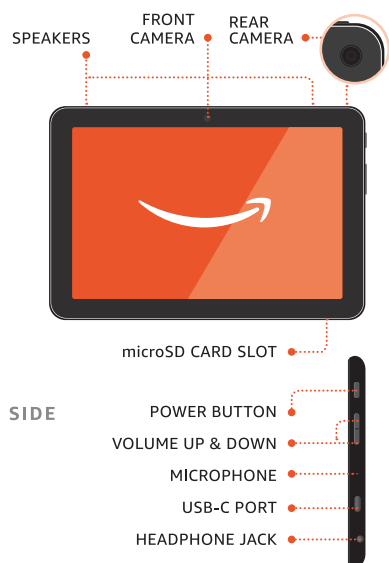

Also included: USB-C cable, power adapter

## ACTIVATE YOUR FIRE HD 8

- 1 POWER**  
Power on your tablet.
- 2 SETUP**  
Follow the on-screen instructions to complete setup.

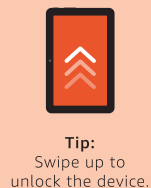

### NAVIGATION FROM HOME SCREEN

- Go back
- Return home
- Switch between apps

## EXPLORE YOUR FIRE HD 8

### TO ACCESS SETTINGS AND CONTENT



Swipe down for settings and quick controls.

Swipe right for movies, TV shows, games, books, your library and more.


### EXPAND YOUR STORAGE



Install microSD for up to 1TB of additional storage.  
*microSD card sold separately.*

## CHARGE YOUR FIRE HD 8

- USB-A**  
Adapter side
- USB-C**  
Tablet side

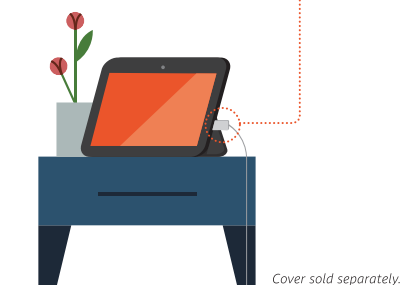

*Cover sold separately.*



### TROUBLESHOOTING

For troubleshooting tips and Amazon Customer Service, visit [www.amazon.com/devicesupport](http://www.amazon.com/devicesupport).