

kogan.com



**75" Mini-LED QLED 4K Smart AI Google TV**

**MQ8Z**

**(KAQL75MQ8ZTA)**



# COMPONENTS



 
- A Kogan 75" Mini-LED QLED 4K Smart AI Google TV
- B Remote control
- C Stand (x2)

- D M4 x 20 mm screw (x4)
- E Quick-start guide
- F Warranty card


## NOT INCLUDED

Phillips head screwdriver, antenna cable, broadband internet connection.

# REMOTE CONTROL OVERVIEW

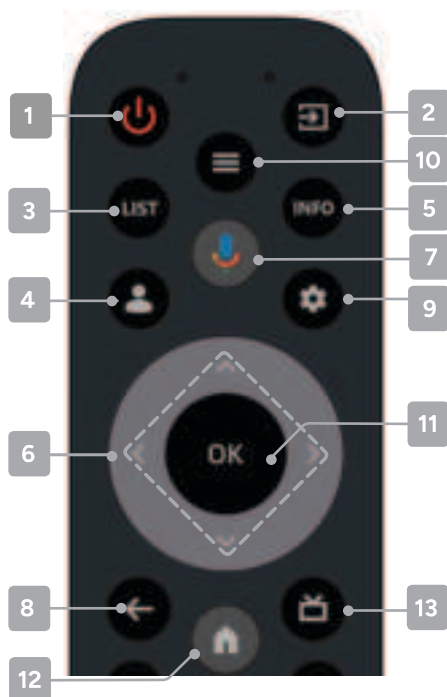

- 1 **Power**, press to enter or exit standby mode
- 2 **Source** displays the list of input source channels.
- 3 **LIST** Open the List menu
- 4 **Account** Switch account
- 5 **info** displays the current program information
- 6 **Direction buttons** for navigating menus and settings
- 7 **Google Assistant** to launch the built-in virtual assistant for voice commands
- 8 **Back** to the previous menu
- 9 **Dashboard** Dashboard contains user account, settings page, input source list, weather panel, image settings, notifications, etc.
- 10 **Quick Menu** to display TV options with optional, adjustable settings
- 11 **OK Enter** select the current item or confirm selection, display Channel list in DTV mode
- 12 **Home** to access the home page
- 13 **Electronic Program Guide** DTV mode

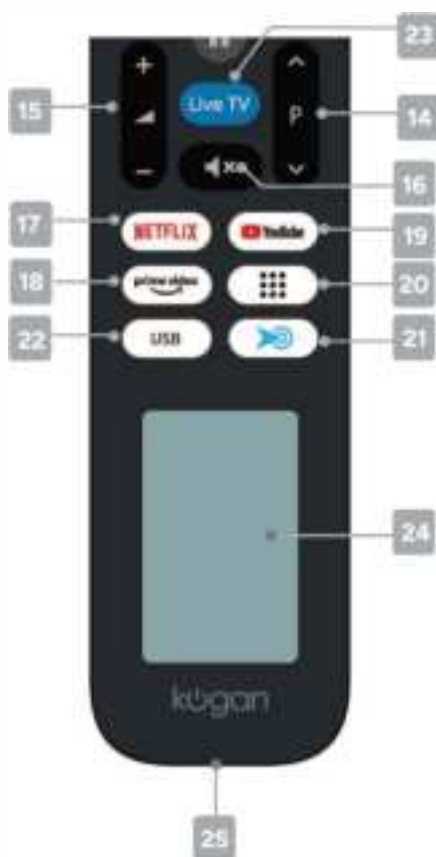 

**14** ^P^ **Program** to scroll channels

**15** + - **Volume** to adjust the volume up or down

**16** **Mute** to toggle sound on/off

**17** **NETFLIX** to open app homepage

**18** **prime video** to open app homepage

**19** **YouTube** to open app homepage

**20** **Apps** Show all installed apps

**21** **Free hotkey** Customise as app shortcuts or system function shortcuts

**22** **usb** Press to switch to the USB source

**23** **Live TV** to live TV channels

**24** **Solar panels**

**25** **USB-C Charging Port**

# ASSEMBLY AND INSTALLATION

## BEFORE YOU GET STARTED

 
 
Spread cushioning flat to lay the TV on. This will help to prevent damage.

### 1. How to charge the remote control's solar panels.

- There is a film on the solar panel. Please tear it off before use. Failure to tear the film will affect the charging efficiency of the solar panel.
- When you use it for the first time, it is recommended to charge the remote control first, and use the USB-C (5V/2A) charger for charging.
- When it is not in use, please keep the remote controller facing upward, so that the solar panel can charge the remote controller.


### 2. Stand assembly

- Attach stands to base of TV, ensuring 'L' and 'R' markings on the TV and stands match.
- Insert two 20mm screws for each stand and use a Phillips head screwdriver (not supplied) to tighten.

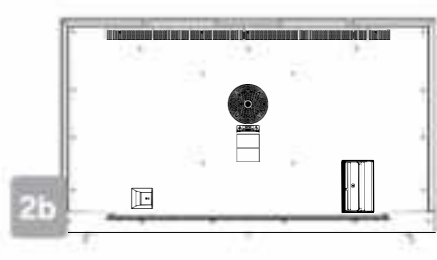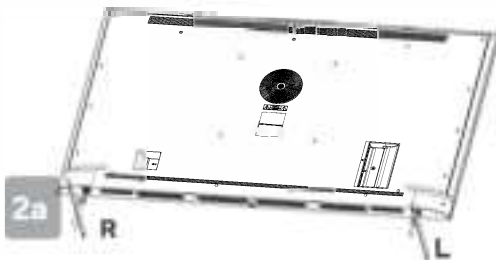


### 3. Connect to antenna

 
- a. Connect an antenna cable (not supplied) via the 'ANT' input port at the back of the TV.
- b. Ensure the antenna cable is also connected to a working antenna, either via an antenna wall socket in your home, or directly.

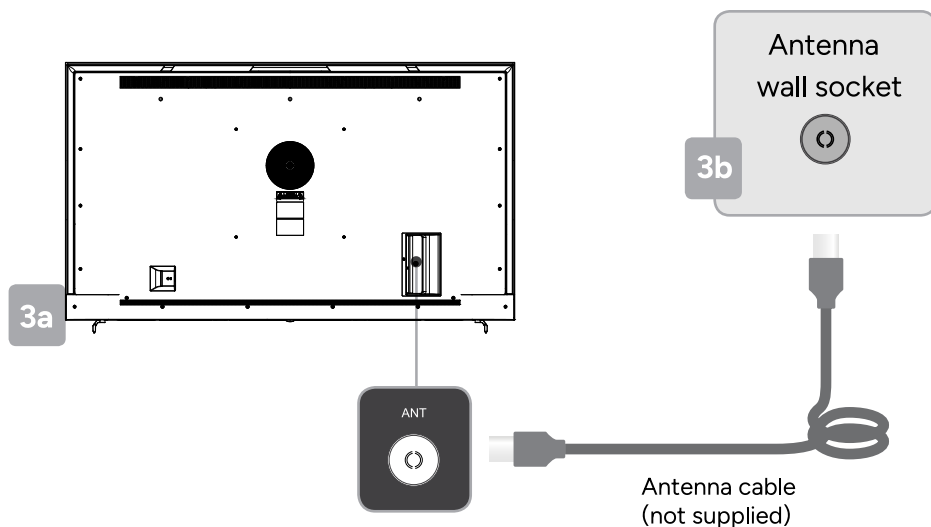

### 4. Turning TV on

Plug the power cord into a suitable power outlet, then press the POWER (  ) button on the remote control, making sure to aim it at the sensor at the front of the TV. Alternatively, you can press the power button on the lower side of the back panel on the TV.

#### TURNING TV OFF

Press the POWER (  ) button on the remote control to enter standby mode. To power down the TV completely, unplug the power cord from the power outlet.

Do not leave your set in standby mode for long periods of time. If you will not use the TV for a long time, it is recommended to unplug the set from both the power outlet and aerial.

# FIRST TIME SETUP

When turning the TV on for the first time, the **Welcome** screen will appear. Use the **^** **▼** and **OK** buttons to navigate the following options.

## **Language**

Select your menu language.

## **Select TV mode**

The 'home mode' is optimised for efficient usage for home use. The 'retail mode' is optimised for store demo with fixed settings.

## **Select your Wi-Fi network**

Your Google TV will automatically scan for wireless networks nearby.

Ensure the TV is within range of your wireless modem or router, and have your password handy. Follow the prompts to input your password and connect your TV to your selected network.

If you'd prefer to connect an Ethernet cable to connect to the internet, simply insert the cable (not supplied) to the LAN input port at the back of the TV **(4a)**, and ensure that it is correctly connected to the internet.

## **Use your Google Account**

In your Google account you get movies and TV shows from your favourite streaming apps, personalised recommendations, Google Assistant, search and control your TV with your voice, live TV, external devices and basic TV.

## **Terms of Service**

By accepting the Google Terms of Service to improve the product experience, select "Accept" to proceed.

## **Search across all your TV apps**

Allow it to share your requests with your TV's apps. Without this permission, Google Assistant may not be able to find all the content from your TV's apps.

 
## **Region or Country selection**

Use **^**/**▼** buttons to select your region or country, then press **OK** to confirm.

## **Remote & accessories**

Your Google TV remote control has bluetooth capabilities. Follow the onscreen prompts to pair the remote with the TV. This will allow you to use voice commands with your remote via the Google Assistant button.



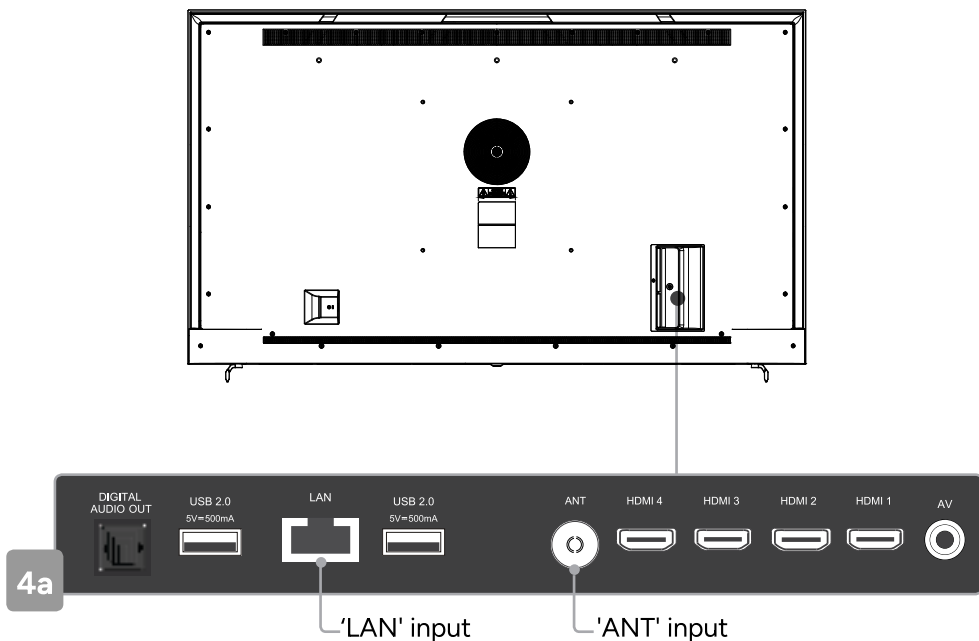

Following these options, the **Auto Tuning** screen will appear. Ensure you have an antenna cable connected to the 'ANT' input port at the back of the TV (**4a**).

The auto tuning function will search for and save all available free-to-air TV channels. After confirming your settings, the process will automatically begin. The number of searched channels will be displayed on the screen. When setup is complete, you will be able to access the **Home** page.

**eARC** Enhanced Audio Return Channel.

If you want to use eARC function, set the EDID version to 2.1 (Settings-> Channels & Inputs->Inputs->select HDMI port-> HDMI EDID Version).

In addition, the eARC switch needs to be turned on (Settings-> Display & Sound ->Sound->eARC).

(HDMI2 supports eARC/ARC function)

# HOME PAGE



## 1 Dashboard

Dashboard contains user account, settings page, input source list, weather panel, image settings, notifications, etc.

## 2 Text search

Enter text manually to search TV apps.

## 3 For you

Displays application recommendations, new episodes your shows, resume what you're watching, top picks for your shows & apps.

## 4 Live

The content of the TV channel recommended by Google

### Note:

The layout and functions of the home page will change dynamically with the version of the launcher. All pictures in the Quick Start Guide are for reference only.

## 5 Notification

Advertising, new arrivals, warnings and legal statements, and system messages.

## 6 Apps

Access the App Centre to display all installed apps. Free-to-air channels can be accessed under the 'Live TV' option.

 
## 7 Library

View records, manage watch list.

# SETTING


## Global settings

To access the global settings menu, under the Home interface, Press the > key until the Dashboard menu appears, then press the arrow keys to move to the Settings icon **(5a)**. Here you will find all of the adjustable options for Google TV's interface, connectivity, and apps.

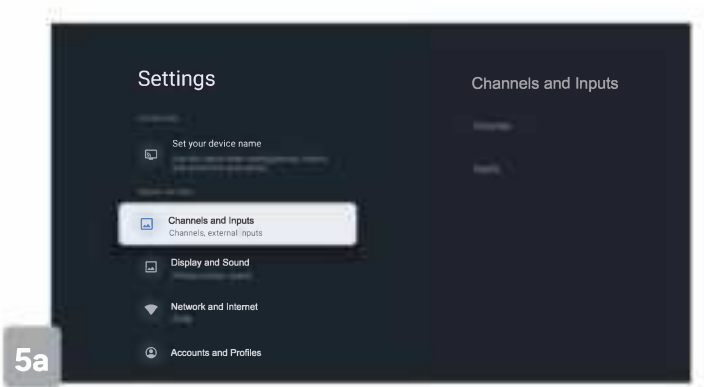

## Quick Menu

 Options for your Live TV (channel scan, channel edit, picture, screen, sound, etc.) can be accessed by pressing the Quick Menu button on your remote control. Use the arrow buttons to navigate through the submenus.

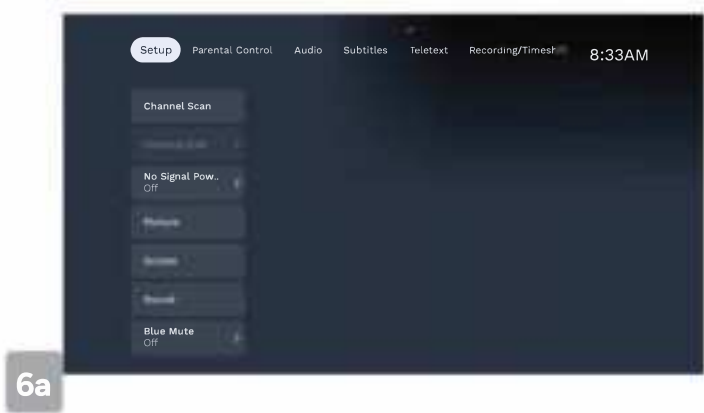

# BASIC TROUBLESHOOTING

## Poor picture and sound quality

- Try a different channel
- Adjust the antenna
- Check all connections

## No picture or sound in TV status

- Try another channel  
Press the TV/AV button
- Make sure TV is plugged in
- Check the antenna connection

## No sound or sound is too low at maximum volume

- Check the volume settings on any external speakers connected to your television
- Adjust the TV volume accordingly
- Check another channel or input
- Check that MUTE hasn't been turned on

## No colour, wrong colour or tints

- Make sure the program itself is broadcast in colour
- Select the picture menu, then adjust the HUE and Color Tuner

## Picture rolls vertically

- Check all connections

## Blurred or snowy picture, distorted sound

- Check direction, location and connections to your antenna
- Issues may be caused by the use of an indoor antenna (poor signal)

## Remote control malfunctions

- Remote is out of range, move closer to the TV
- Remove any obstructions between the remote and IR sensor of the TV
- Make sure the power cord to your TV is plugged in and turned on

## Image is not centred on the screen

- Adjust the horizontal and vertical position

## "No Signal" on HDMI source

- Test the device with a different HDMI cable:
- Plug the device into another HDMI port
- Try a different device connected to the same cable and port
- Perform a factory reset on your TV

**For our full TV troubleshooting guide and extended User Manual for this TV, head online to [help.kogan.com](http://help.kogan.com)**



Dolby, Dolby Vision, Dolby Atmos, and the double -D symbol are registered trademarks Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories.

Confidential unpublished works. Copyright © 2012 -2022 Dolby Laboratories. All rights reserved.

# NOTES

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

This image shows a single page of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

### **Need more information?**

This is a **Quick Start Guide**, and while we hope that this has given you the assistance needed for a simple set-up, a full user guide outlining all of this product's instructions and features can be found online at **[help.kogan.com](https://help.kogan.com)**

**kogan.com**