



Firmware Version: V1.00.040
OS Version: V1.1.8
Published: 2020/07/29

These release notes include important information about D-Link DXS-3610 Series firmware revisions. Please verify that these release notes are correct for your switch:

- If you are installing a new switch, please check the hardware version on the device label; make sure that your switch meets the system requirement of this firmware version. Please refer to [Revision History and System Requirement](#) for detailed firmware and hardware matrix.
- If the switch is powered on, you can check the hardware version by typing "show version" command or by checking the device information page on the web graphic user interface.
- If you plan to upgrade to the new firmware release, please refer to the Upgrade Instructions:
- D-Link switches support firmware upgrade via TFTP server. You can download the firmware from D-Link web site <http://tsd.dlink.com.tw>, and copy the downloaded firmware to the TFTP server folder. Please make sure that the TFTP server is accessible from the switch via networks.
-

For more detailed information regarding DXS-3610 Series switch products, please refer to [Related Documentation](#).

You can download the switch firmware and technical documentation from <http://tsd.dlink.com.tw>; and download D-View 7 Network Management Software from <http://dview.dlink.com/>

Content:

Revision History and System Requirement	3
Upgrade Instructions:.....	3
Upgrade using CLI (serial port)	3
Upgrading by using Web-UI	5
New Features	7
Changes of MIB	7
Changes of Command Line Interface	7
Problem Fixed.....	7
Known Issues.....	8
Related Documentation	8

Revision History and System Requirement

Firmware Version	Date	Model	Hardware Version
Runtime: v1.00.040	2020/7/29	DXS-3610-54S DXS-3610-54T	A1

Upgrade Instructions:

D-Link switches support firmware upgrade via TFTP server. You can download the firmware from D-Link web site <http://tsd.dlink.com.tw>, and copy the downloaded firmware to the TFTP server folder. Please make sure that the TFTP server is accessible from the switch via networks.

Upgrade using CLI (serial port)

Connect a workstation to the switch console port and run any terminal program that can emulate a VT-100 terminal. The switch serial port default settings are as follows:

- ♦ Baud rate: **115200**
- ♦ Data bits: **8**
- ♦ Parity: **None**
- ♦ Stop bits: **1**

The switch will prompt the user to enter his/her username and password. It should be noted that upon the initial connection, there is no username and password by default.

To upgrade the switch firmware, execute the following commands:

Command	Function
copy tftp://location/filename flash: filename	Download firmware file from the TFTP server to the switch.
boot image flash filename	Change the boot up image file.
show boot	Display the information of current boot image and configuration.
reboot	Reboot the switch.

Example:

1. Upgrade the firmware for a Standalone Switch via management port.

```
Switch#copy tftp: //192.168.0.127/dxs-3610-R1.00.040.had flash: 1.00.040.had
```

```
Address of remote host [192.168.0.127]?
```

```
Source filename [dxs-3610-R1.00.040.had]?
```

```
Destination filename [1.00.040.had]?
```

```
Accessing tftp://192.168.0.127/dxs-3610-R1.00.040.had...
```

```
Transmission start...
```

```
Transmission finished, file length 49938976 bytes.
```

```
Please wait, programming flash..... Done.
```

```
Switch#configure terminal
Switch(config)#boot image 1.00.040.had
Switch(config)#end
Switch#show boot
```

```
Unit 1
  Boot image: /c:/1.00.040.had
  Boot config: /c:/config.cfg
```

```
Switch#reboot
```

```
Are you sure you want to proceed with the system reboot?(y/n) y
Please wait, the switch is rebooting..
```

2. Upgrade the firmware for switches in a Physical Stack.

```
Switch#copy tftp: //10.90.90.127/R1.00.040.had flash: R1.00.040.had
```

```
Address of remote host [10.90.90.127]?
Source filename [R1.00.040.had]?
Destination filename [R1.00.040.had]?
Accessing tftp://10.90.90.127/R1.00.040.had...
Transmission start...
Transmission finished, file length 49938976 bytes.
Transmission to slave start..... Done.
Transmission to slave finished, file length 49938976 bytes.
Please wait, programming flash..... Done.
Wait slave programming flash complete...
Done.
```

```
Switch#configure terminal
Switch(config)#boot image R1.00.040.had
Switch(config)#boot image unit2:/c:/R1.00.040.had
Switch(config)#boot image unit6:/c:/R1.00.040.had
Switch(config)#boot image unit12:/c:/R1.00.040.had
Switch(config)#end
Switch#show boot
```

```
Unit 1
  Boot image: /c:/R1.00.040.had
  Boot config: /c:/config.cfg
```

```
Unit 2
  Boot image: /c:/R1.00.040.had
  Boot config: /c:/auto.cfg
```

```
Unit 6
  Boot image: /c:/R1.00.040.had
  Boot config: /c:/config.cfg
```

```
Unit 12
  Boot image: /c:/R1.00.040.had
  Boot config: /c:/config.cfg
```

Switch#reb force_agree

Please wait, the switch is rebooting...

 
Note:

If new firmware's file name is the same as current running image's file name, no need to manually configure slave's boot image to new one.

After uploading the firmware to the master switch, the firmware will also be pushed to the slave switches. Once that is done, user must set the new boot image on the master switch and the slave switches.

Upgrading by using Web-UI

1. Connect a workstation installed with java SE runtime environment to any front panel ports of the device and also connect console cable to switch's console port.
2. Enter switch's default IP address, 10.90.90.90 with subnet mask 255.0.0.0 into the address bar of the browser and press the Enter key.



3. A user authentication window will be opened, by default, there is no user name and password configured on the switch. Just leave the **User Name** and **Password** fields blank and click the Login button.

 A screenshot of a web-based user authentication window. The window has a title bar that says "Connect to 10.90.90.90". Below the title bar is a blue header with a key icon. The main area is light blue and contains two input fields: "User Name" and "Password". Below these fields are two buttons: "Login" and "Reset".

4. Firmware upgrade from TFTP: click **Tools > Firmware Upgrade & Backup > Firmware Upgrade from TFTP**
Enter the TFTP Server's IP address and the source and destination file name in associated fields and then click **Upgrade** button.

Firmware Upgrade from TFTP

Unit:

TFTP Server IP: ☒ IPv4 ☐ IPv6

Source File:

Destination File:

- Firmware upgrade from HTTP: click **Tools > Firmware Upgrade & Backup > Firmware Upgrade from HTTP**

Firmware Upgrade from HTTP

Unit:

Source File:

Destination File:

Select the switch's unit and then click **Browse** button to find the file name, specifying the destination file name. Click **Upgrade** to start the process.

- Select the boot up image: click **Management > File System** to open the **File System** window

File System

Unit:

Path:

Drive	Media Type	Size (MB)	File System Type	Label
C:	Flash	29797	other	

Click [c:](#) hyperlink, the following window will appear.

File System

Unit:

Path:


Index	Attr	Size (byte)	Update Time	Name	
1	-rw	49943072	Jan 07 2001 03:59:04	dxs-3610R1.0040.had	<input type="button" value="Rename"/> <input type="button" value="Delete"/>
2	-rw	29770272	Jan 01 2001 01:28:32	dxs-3610-R1.00.013.h...	<input type="button" value="Rename"/> <input type="button" value="Delete"/>
3	-rw	49840672	Jun 19 2020 06:44:32	dxs-3610.had	<input type="button" value="Rename"/> <input type="button" value="Delete"/>
4	-rw	8413	Jan 01 2001 00:03:41	lionel.cfg	<input type="button" value="Rename"/> <input type="button" value="Delete"/>
5	-rw	49832480	May 30 2020 01:10:43	dxs-3610R1.00.S034.h...	<input type="button" value="Rename"/> <input type="button" value="Delete"/>
6	-rw	8506	Jan 01 2001 00:08:45	config.cfg	<input type="button" value="Rename"/> <input type="button" value="Delete"/>
7	-rw	29970976	Jan 01 2001 00:09:37	dxs-3610-diag-D013.h...	<input type="button" value="Rename"/> <input type="button" value="Delete"/>
8	d--	4096	Jan 01 2001 00:08:45	system	<input type="button" value="Delete"/>
9	-rw	49938976	Jan 01 2001 00:14:22	1.00.040.had	<input type="button" value="Rename"/> <input type="button" value="Delete"/>

31245213696 bytes total (30911864832 bytes free)

1/1

Click **Boot Up** button to set a specific runtime image as the boot up image.

7. Reboot the system: click **Tool > Reboot System**, as shown below; click **Reboot** to reboot the switch. When rebooting the switch, any configuration changes that was made during this session, will be lost unless the **Yes** option is selected when asked to save the settings

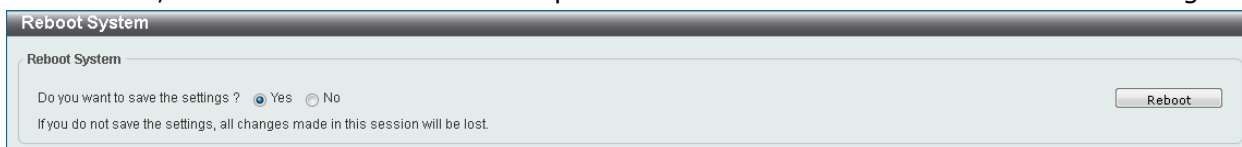

New Features

Firmware Version	New Features
V1.00.040	First release, please refer to the datasheet and manual for detailed functions support

Changes of MIB

Please refer to the modification history in each MIB file for the detailed changes of MIB content.

Firmware Version	MIB File	New Features
V1.00.040		First release, please refer to the datasheet for detailed MIBs support

Changes of Command Line Interface

The section below only shows command line changes that may bring backward compatibility issues with configuration settings for previous version of firmware. Any new feature commands that do not have backward compatibility issues are not included in the below section.

Firmware Version	Changes
V1.00.040	First release

Problem Fixed

Firmware Version	Problems
------------------	----------

V1.00.040	First release
-----------	---------------

* D-Link tracking number is enclosed in ()

Known Issues

Firmware Version	Issues	Workaround
V1.00.040	First release	

Related Documentation

- DXS-3610 Series Web UI Reference Guide Release 1.00
- DXS-3610 Series CLI Reference Guide Release 1.00
- DXS-3610 Series HW Installation Guide Release 1.00