



For the complete User
Guide, How-To Videos
and more visit:


www.nickwatch.com

© 2022 VIACOM INTERNATIONAL INC. ALL RIGHTS RESERVED.
NICKELODEON, NICKWATCH, NICKELODEON SLIME,
SPONGEBOB SQUAREPANTS, THE LOUD HOUSE, TMNT
AND ALL RELATED TITLES, LOGOS AND CHARACTERS ARE
TRADEMARKS OF VIACOM INTERNATIONAL INC.

WHAT'S IN THE BOX?




NickWatch

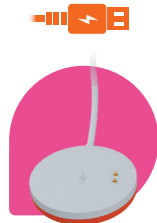

Connect-o Cable



Power Station

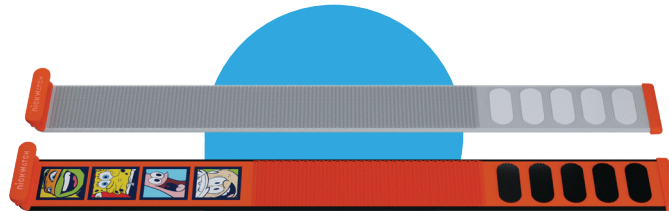

Simple Strap & Snazzy Strap

nickWATCH
BY: nickelodeon.
QUICK START GUIDE





Kid's 4G watch with WiFi/Bluetooth/
GPS tracking, camera, and
Emergency button.

1. Camera

2. Display screen & touch panel

3. Button

- Press once for back button
- Long press for turn on/off
- Very long press to activate SOS

4. Speaker

5. Microphone

6. Charging port

7. Strap holsters



APP INSTALLATION

Find the free Nickwatch app on Google Play or App Store.

Or scan QR code to go to the app in the Google Play or App Store.



CREATE THE ACCOUNT

Launch the mobile app, tap "Create Account", and follow the on-screen prompts. You will need to enter a valid email address.

Verify your email address (on your phone) and accept the Privacy Policy and Terms of Service to create the account.

Tap "Add Watch"

Scan the QR code displayed on the watch display with the phone's camera.

If purchased via nickwatch.com, Enter the subscription activation code that was sent to you.

Enter your child's information

CHARGING THE WATCH

Charge the watch by connecting it to the Connect-o Cable OR the Power Station.

Connect the USB to a power source (not included) and ensure that the contacts on the back of the watch engage the port on the charging dock. When the watch is fully charged, remove it from the charging dock.



SPLASH RESISTANCE

The watch is rated IP68 for dust and splash resistance. You CANNOT immerse the watch in water (for swimming or other sports), and it should not be worn during showering or bathing.

Care should be taken to avoid exposure from moisture due to rain, hand washing or perspiration.





For the complete User
Guide, How-To Videos
and more visit:

www.nickwatch.com


WHAT'S IN THE BOX?



NickWatch



Connect-o Cable

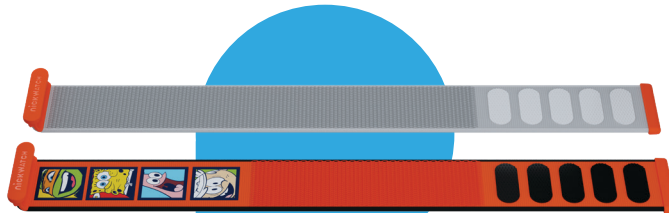

Simple Strap & Snazzy Strap

nickWATCH
BY: nickelodeon.
QUICK START GUIDE



© 2022 VIACOM INTERNATIONAL INC. ALL RIGHTS RESERVED.
NICKELODEON, NICKWATCH, NICKELODEON SLIME,
SPONGEBOB SQUAREPANTS, THE LOUD HOUSE, TMNT
AND ALL RELATED TITLES, LOGOS AND CHARACTERS ARE
TRADEMARKS OF VIACOM INTERNATIONAL INC.



Kid's 4G watch with WiFi/Bluetooth/
GPS tracking, camera, and
Emergency button.

1. Camera

**2. Display screen
& touch panel**

3. Button

- Press once for back button
- Long press for turn on/off
- Very long press to activate SOS

4. Speaker

5. Microphone

6. Charging port


7. Strap holsters



APP INSTALLATION

Find the free Nickwatch app on Google Play or App Store.

Or scan QR code to go to the app in the Google Play or App Store.

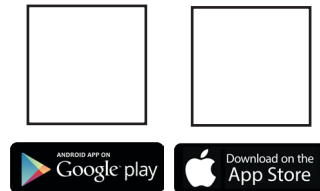

CREATE THE ACCOUNT

Launch the mobile app, tap "Create Account", and follow the on-screen prompts. You will need to enter a valid email address.

Verify your email address (on your phone) and accept the Privacy Policy and Terms of Service to create the account.

Tap "Add Watch"

Scan the QR code displayed on the watch display with the phone's camera.

If purchased via nickwatch.com, Enter the subscription activation code that was sent to you.

Enter your child's information

CHARGING THE WATCH

Charge the watch by connecting it to the Connect-o Cable.

Connect the USB to a power source (not included) and ensure that the contacts on the back of the watch engage the port on the charging dock.

When the watch is fully charged, remove it from the charging dock.



SPLASH RESISTANCE

The watch is rated IP68 for dust and splash resistance. You CANNOT immerse the watch in water (for swimming or other sports), and it should not be worn during showering or bathing.

Care should be taken to avoid exposure from moisture due to rain, hand washing or perspiration.





Cyan	Magenta	Yellow	Black

COLOR:

