# Outdoor CPE Router User Manual

# 1.WiFi Connection

1.Choose the right SSID (4G-CPE-xxxx) of the device, and click connect.



2. Type in the correct password (1234567890) and connect.



# 2. Backstage Configuration

## Log in the WEB management interface

Please follow below steps to log in the management interface

- 1. Make sure the WiFi between the device and other wifi devices or PC are connected normally.
- 2.Open the browser, and type in [http://192.168.199.1] and enter.
- 3.Type in user name and password, log in the management interface, the default user name and password are both "admin"



# **Dial-up Setting**

Update


If you need to set roaming mode, first you need to disconnect, second click Dial-up Setting in network setting, finally tick "Check here, you can connect to Internet the roaming status" and then click "Apply".

# Home User Information Information No. **Host Name MAC Address** IP Address **Download Driver** DQVSZAJPL3TL0S2 2c:b0:5d:ea:96:b0 192.168.199.219 1 SMS Phonebook Settings **Network Connection** Disconnect Home Dial-up Settings Information WAN Connection Mode Automatic **Download Driver** Check here, you can connect to internet in the roaming status. SMS ○ Manual Phonebook Settings Network Settings ? Network Selection ▶ APN **Ethernet** Wi-Fi Settings **Device Settings Router Settings**

#### **Network Selection**

The following is how to set the Network Selection:

If you want to switch between 3G/4G networks, you'll need to click "Network Selection" in "network setting" and then select "automatic" or "manual" according to your needs, and finally "Apply".

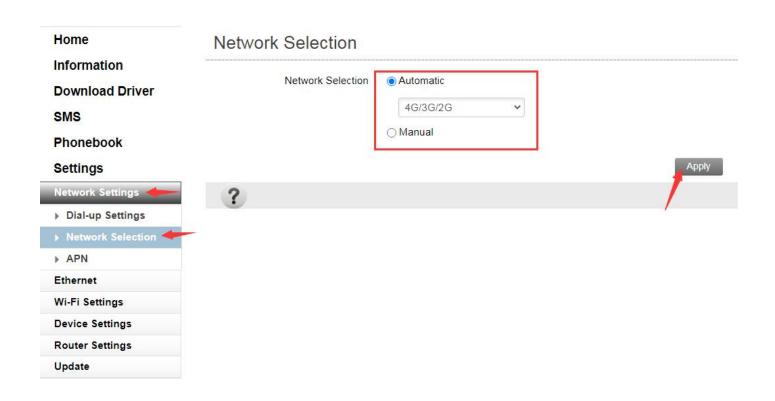


#### **APN**

The following is how to set the APN:

You need to click on "APN" in "network settings" and then click on "add new".


Please fill in "Profile Name", "APN", "mcc" and "mnc" and click "Apply".

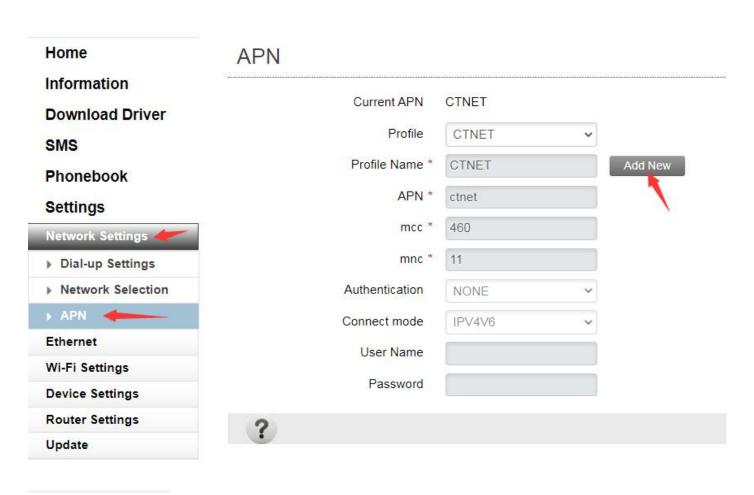



#### **Basic Settings**


Modify wireless network parameters (network name, broadcast network name, security mode, Pass Phrase etc.

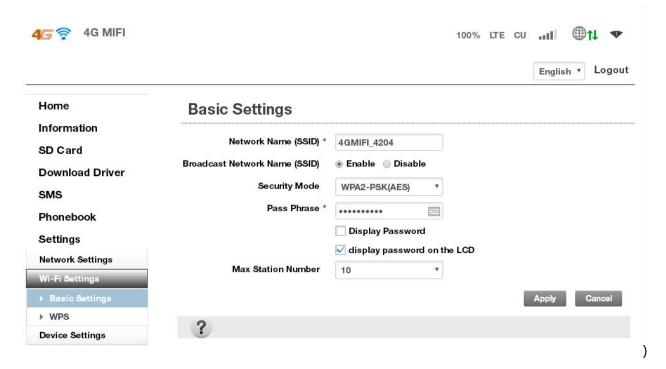

### **PIN Management**

About the setting method of PIN:


Please open "settings", then click "Device settings" and "PIN management", please select "disable" in the "PIN status" option, and finally click "apply". If the "PIN Status" of the router is disabled, you do not need to perform this step.

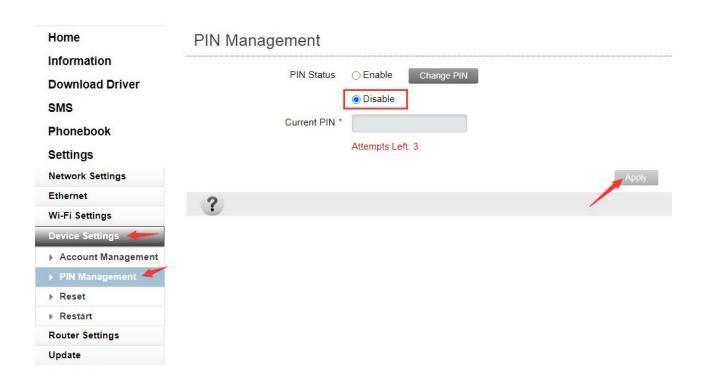

#### **Router Setting**

The following is how to change the IP address:

You need to click "disconnect" next to the network connection option on the homepage. Then click "Router Setting" in "setting" and modify it, and finally click "Apply".

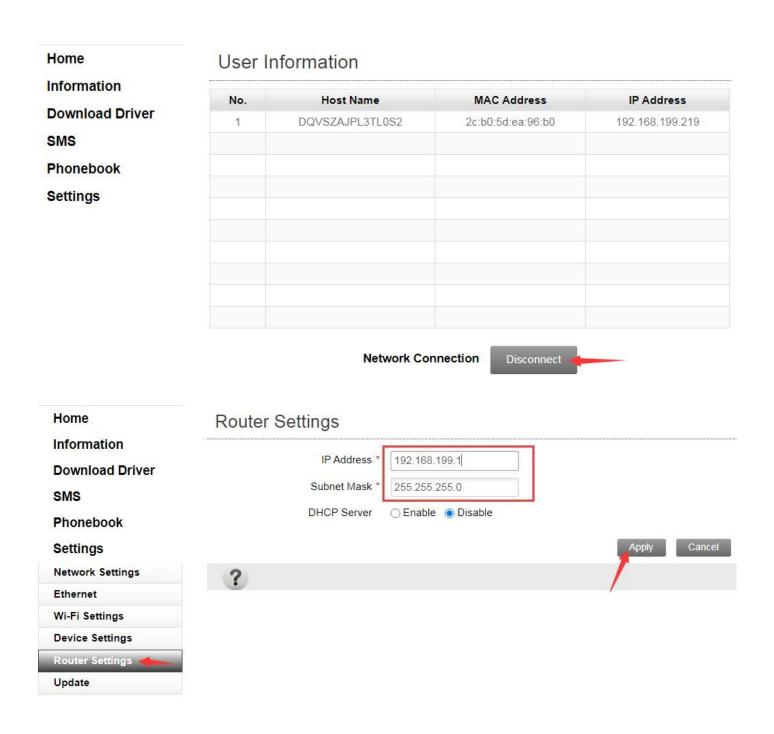

#### Note:

Please do not connect the router with a micro USB cable at will. The micro USB port on the router is used to upgrade the firmware and cannot be used for charging. Improper usage will cause the router to burn out.

If you encounter any questions, please feel free to contact us. Thank you!