

INSTRUCTIONS

ELECTRIC OIL EXTRACTOR PUMP EXTRACTION

PACKAGE CONTENTS


- Oil pump
- Inlet pipe
- Outlet pipe
- 2 × hose clip
- User manual (English)

TECHNICAL SPECIFICATIONS

- Voltage: 12 V DC
- Current: 5 A
- Max. flow rate: 1.5 L/min
- Inlet hose length: 123 cm
- Inlet hose diameter: 6 mm
- Pump size: 13 × 13 × 8.3 cm



COMPONENTS

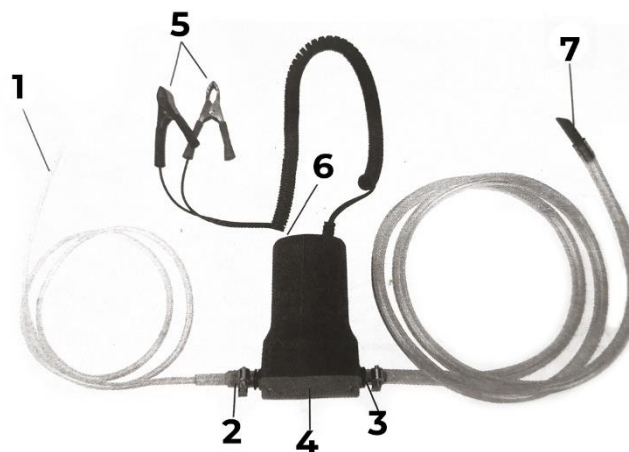

- (1) Inlet hose
- (2) Inlet connector
- (3) Outlet connector
- (4) Pump
- (5) Battery clamps
- (6) ON/OFF switch
- (7) Outlet hose

Note: Read these instructions carefully in their entirety before first use, and store for further reference.

HOW TO USE

- This product is used for pumping oil out of a car's engine.
- First, start your car and let the oil temperature rise to 40–50 °C, then turn off

the car. Don't let it get too hot – this may damage the pump. If the oil is too cold, it can clog the pipes.

- **During the rest of the pumping process, the car should be turned OFF!**
- Set up the pump by connecting the inlet and outlet hoses to the pump. See the picture in the previous column for reference.
- Take the oil dipstick out of the engine and insert the inlet hose into the opening. The external diameter of the inlet hose is 6 mm; thus, this device can only be used to pump oil out of engines with the internal diameter of the dipstick tube of more than 6 mm.
- Hook-up the battery clamps to your car's battery. The red clamp goes on the positive terminal on the battery, and the black clamp goes on the negative terminal. Do not connect them to anything else. Ensure that your car is turned **OFF** while doing this.
- Get a canister (depending on the size of your car engine's oil tank) and insert the outlet hose into it.
- Turn ON the pump using the ON/OFF switch on the back of the device. When it's done pumping the oil, turn it OFF, remove the clamps from the car's battery, and take out the inlet hose.
- Replace the engine oil according to your car's user manual.
- After each use, clean the hoses and pump.

WARNINGS

- Do not pump anything else than oil. This might damage the pump as it needs the oil for lubrication.
- Never keep the engine running when connecting the device or pumping oil. This can cause damage to your car, the device, or can be dangerous to your health and safety.
- Only use the product for its intended purpose.
- Do not disassemble or modify in any way.
- Keep away from heat and moisture.
- This device is not a toy. Keep away from children.
- Always dispose of the pumped oil according to your local rules and regulations.

WARRANTY

The warranty is valid for 24 months. You can claim it from DFVU d.o.o., Liparjeva 6a, 1234 Mengeš, Slovenia, for a replacement product or a refund. Send us your order number and purchase date in the email, which is available by clicking on our logo in the bottom right corner. The product has a lifetime of 24 months from the date of collection.



WEEE disposal and recycling symbol. The WEEE symbol is attached to the product in compliance with the EU directive *2012/19/EU* on Waste Electrical and Electronic Equipment (WEEE). It is intended to deter the improper disposal of this product and to promote reuse and recycling.