

Powerbolt 2
TOUCHPAD KEYLESS ENTRY

Installation Guide

Required Tools

Additional Tools (depending on application)

Use and programming instructions are located on the reverse side of this document.

Parts in the Box

| | | |
|--|---------------------------------|---------------------------------|
| <p>Latch and Strike</p> | <p>Exterior Assembly</p> | <p>Interior Assembly</p> |
| <p>If needed, please contact Kwikset to order a drive-in latch for your lock.</p> <p>A2</p> <p>Kwikset 1-800-327-5625 www.kwikset.com</p> | <p>Fasteners</p> | |

1 Check dimensions

2-3/8" (60 mm) or 2-3/4" (70 mm)

1-3/8" — 1-3/4" 35 mm — 44 mm

1-1/2" 38 mm or 2-1/8" 54 mm

1" 25 mm

Additional door preparation may be required for doors with 1-1/2" (38 mm) holes. Consult the drilling instructions at www.kwikset.com/doorprep.

2 Adjust the backset of latch (if needed)

A Hold the latch in front of the door hole, with the latch face flush against the door edge.

B If the latch holes are centered in the door hole, no adjustment is required. Proceed to step 3. If the latch holes are NOT centered, adjust latch. See "Latch Adjustment."

Latch Adjustment (only if needed)

3 Install latch

For doors with chiseled edge

When installing "A," make sure slot is at the bottom.

For doors without chiseled edge

A When installing "A," make sure slot is at the bottom.

B wood block

4 Prepare exterior keypad (if needed)

For doors with 2-1/8" (54 mm) holes

Proceed to step 5.

For doors with 1-1/2" (38 mm) holes

A Temporarily remove gasket

B Remove adapter ring

C Reinstall gasket, ensuring a tight seal.

5 Prepare mounting plate (if needed)

For doors with 2-1/8" (54 mm) holes

Proceed to step 6.

For doors with 1-1/2" (38 mm) holes

Use pliers to remove the two tabs from the mounting plate (F).

6 Install keypad and mounting plate

A Locate screws (L) and keep them within reach.

B Tailpiece must be horizontal!

C Cable goes underneath latch

D Keep parallel to edge of door

E Insert key and test latch. If latch does not extend or retract smoothly, adjust screws (L). Remove key when finished and make sure the latch bolt is in the unlocked position.

Tighten screws evenly L (2x)

7 Load batteries and reset the lock

A

B 4x AA

Note: The turnpiece may rotate on its own.

C Press and hold the Reset button on the interior assembly for five seconds, until you hear three beeps.

Ensure correct polarity. For best results, use new, non-rechargeable Alkaline batteries only.

8 Install interior assembly

A Align colored edges of connectors and ensure secure cable connection.

B Rotate turnpiece AWAY from the door edge.

C Make sure tailpiece is horizontal.

D Check for smooth turnpiece rotation. If turnpiece does not rotate, pull interior assembly (G) off the door. Repeat steps 7B and 7C, making sure the turnpiece is rotated away from the door edge.

E K (3x)

F Make sure door is unlocked.

9 IMPORTANT: Enter door handing code and test lock

A While the door is OPEN AND UNLOCKED, enter the following code to teach the lock the orientation of the door.

| | | | |
|-----------------------------|-------------|-----|-------------|
| Default MASTERCODE: 0-0-0-0 | Lock button | "0" | Lock button |
|-----------------------------|-------------|-----|-------------|

If programming is successful, the keypad will flash green twice with two beeps. If unsuccessful, the keypad will flash red three times with three beeps. Attempt to enter the code again.

B Press the Lock button once.

C If the latch bolt extends to lock, the lock has correctly learned the orientation of the door.

D Unlock door.

10 Install strike

J (2x)

11 Re-key the lock

D

If needed, re-key the lock to work with your existing key. See the supplied SmartKey Re-key instructions for more information.

12 Program the lock

Programming instructions are located on the reverse side of this document.

Template

If your door requires drilling, cut out the template and place it on the exterior side of the door. Complete door drilling instructions are available at www.kwikset.com/doorprep.

Edge Face

1-3/8" (35 mm)

1-3/4" (44 mm)

Centerline

2-3/8" (60 mm)

2-3/4" (70 mm)

Backset

Fold

Powerbolt 2

TOUCHPAD KEYLESS ENTRY

User Guide

Kwikset
1-800-327-5625
www.kwikset.com

Installation instructions are located on the reverse side of this document.

A Pre-Set Codes

CAUTION: This lock contains a pre-set mastercode (0-0-0-0) and user code (1-2-3-4). Immediately change these to codes of your own.


To change the mastercode, follow the steps in “Changing the Mastercode” (Section D-b below).

To change the user code, first delete it by following the steps in “Deleting a Single User Code”. Then, add a new code by following the steps in “Adding User Codes”.


IMPORTANT: Please make sure that the door handing code was entered during installation. See step 9 on the reverse side of this document.

B PowerBolt at a Glance

Exterior

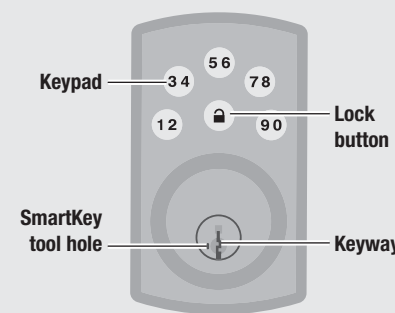


Interior (cover removed)

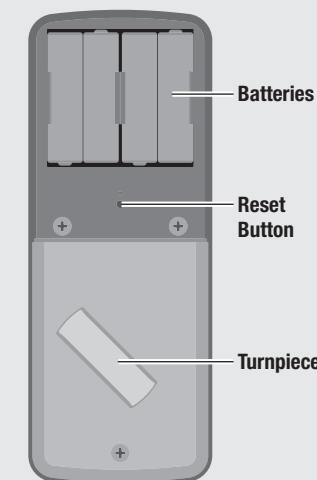

C Normal Operation

Unlocking the Door

- 1 Enter user code.
- 2 Press Lock button once.

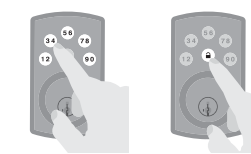

Locking the Door

Press Lock button once.



Note: If no user codes are programmed, or if they are disabled, the Lock button will be disabled.

Incorrect Codes

| Codes Entered | Lock Behavior | Next Step |
|---|--|---|
| One incorrect code entered. | Keypad flashes red three times with three beeps. | Re-enter code. |
| Five incorrect codes entered within one minute. | Keypad flashes red five times with five beeps. | Re-enter code after 45 second keypad lockout. |

D Programming Codes

a Programming Information

How the Keypad Works

Each button represents two numbers (i.e. 1 and 2 for the first button). You only need to push the button once to get either 1 or 2. For example: If your code is 1-2-5-6-8,




Programming Behavior

Programming Mode Timeout

The keypad will flash amber slowly while the lock is in programming mode. If no button is pressed for 10 seconds, the system will time out and you will need to restart the procedure.


Successful Programming

The keypad will flash green twice, and you will hear two beeps*.

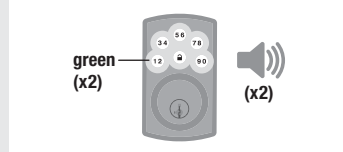

Unsuccessful Programming

The keypad will flash red three times, and you will hear three beeps*.

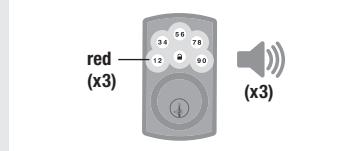

*Beeping sound will not be heard when the lock is muted.

b Changing the Mastercode

The mastercode is required to put the lock in programming mode, but it is not used to unlock the door. The lock is programmed with the **default mastercode 0-0-0-0**. **Replace this with a code of your own.** The mastercode must be 4-10 digits.

Keep door open and unlocked during programming.

| | | | | | | |
|---------------------|-------------|-----|-------------|----------------|-------------|--|
| Existing MASTERCODE | Lock button | "7" | Lock button | New MASTERCODE | Lock button | IF UNSUCCESSFUL Make sure to enter a valid existing mastercode. Make sure the new mastercode is between 4 and 10 digits during your next attempt. |
|---------------------|-------------|-----|-------------|----------------|-------------|--|

c Adding User Codes

Each user code must be a unique code between 4 and 10 digits. A total of 6 user codes may be programmed. Note: It is not recommended to program a user code that is the same as the mastercode.

Keep door open and unlocked during programming.

| | | | | | | |
|------------|-------------|-----|-------------|---------------|-------------|--|
| MASTERCODE | Lock button | "1" | Lock button | New USER code | Lock button | IF UNSUCCESSFUL Make sure to enter a valid mastercode. Make sure the user code is not a duplicate and that it is between 4 and 10 digits. Make sure the lock has room for an additional code. If all user code positions are filled, delete a code to make room for the new one. |
|------------|-------------|-----|-------------|---------------|-------------|--|

TEST CODE
While the door is open and locked, test the user code to make sure it unlocks the door.

d Disabling/Enabling User Codes

Perform this procedure once to disable all user codes, and repeat the procedure to re-enable user codes. The lock button and auto-lock function will be disabled until user codes are re-enabled, and the lock can only be operated by the key and turnpiece.

Keep door open and unlocked during programming.

| | | | | | |
|------------|-------------|-----|-----|-------------|--|
| MASTERCODE | Lock button | "1" | "7" | Lock button | IF UNSUCCESSFUL Make sure to enter a valid mastercode. |
|------------|-------------|-----|-----|-------------|--|

TEST
While the door is open and unlocked, press the Lock button. If the latch bolt extends to lock, the user codes are enabled. If the latch bolt does not extend to lock, the user codes are disabled.

e Deleting a Single User Code

The lock is programmed with the **default user code 1-2-3-4**. **Delete this code. Add new codes of your own** in section c.

Keep door open and unlocked during programming.

| | | | | | | |
|------------|-------------|-----|-------------|-------------------------|-------------|---|
| MASTERCODE | Lock button | "3" | Lock button | USER code to be deleted | Lock button | IF UNSUCCESSFUL Make sure to enter a valid mastercode and existing user code. |
|------------|-------------|-----|-------------|-------------------------|-------------|---|

TEST CODE
While the door is open and locked, test the user code to make sure it no longer unlocks the door.

f Adding a One-Time User Code

A one-time user code may be used only once and will be deleted from the lock immediately after use. The one-time user code should not be the same as an existing user code.

Keep door open and unlocked during programming.

| | | | | | | | |
|------------|-------------|-----|-----|-------------|------------------------|-------------|--|
| MASTERCODE | Lock button | "1" | "9" | Lock button | New one-time USER code | Lock button | IF UNSUCCESSFUL Make sure to enter a valid mastercode. Make sure the one-time user code is between 4 and 10 digits. |
|------------|-------------|-----|-----|-------------|------------------------|-------------|--|

g Deleting All User Codes

The lock button and auto-lock function will be disabled until a new code is added, and the lock can only be operated by the key and turnpiece.

Keep door open and unlocked during programming.

| | | | | |
|------------|-------------|-----|-------------|--|
| MASTERCODE | Lock button | "5" | Lock button | IF UNSUCCESSFUL Make sure to enter a valid mastercode. |
|------------|-------------|-----|-------------|--|

TEST
While the door is open and unlocked, press the Lock button. If the latch bolt does not extend to lock, then all codes have been successfully deleted.

E Auto-Lock and Mute Settings

a Enabling/Disabling Auto-Lock

This feature is not enabled by default. When enabled, the door will automatically lock after 30 seconds. This time can be adjusted in section b. After auto-lock is enabled, repeat this procedure to disable it as needed.

Keep door open and unlocked during programming.

| | | | | | |
|------------|-------------|-----|-----|-------------|--|
| MASTERCODE | Lock button | "1" | "1" | Lock button | TEST While the door is open and unlocked, wait for the latch bolt to extend after the pre-set time. If it extends, auto-lock is enabled. If it does not extend, auto-lock is disabled. |
|------------|-------------|-----|-----|-------------|--|

b Setting Auto-Lock Time Delay

Perform this procedure to change the pre-set 30 second time delay of the auto-lock feature.

Keep door open and unlocked during programming.

| | | | | | | |
|------------|-------------|-----|-----|-------------|-----------------|-------------|
| MASTERCODE | Lock button | "1" | "3" | Lock button | 10 seconds: "1" | Lock button |
| | | | | | 20 seconds: "3" | |
| | | | | | 30 seconds: "5" | |
| | | | | | 40 seconds: "7" | |
| | | | | | 50 seconds: "9" | |

c Mute

Perform this procedure to mute the beeping sound heard during programming and normal operation. Repeat the procedure to unmute the beeping sound.

CAUTION: Low battery indicators and system alerts will not be heard while the system is muted.

Keep door open and unlocked during programming.

| | | | | |
|------------|-------------|-----|-----|-------------|
| MASTERCODE | Lock button | "1" | "5" | Lock button |
|------------|-------------|-----|-----|-------------|

F Regulatory Compliance

This product complies with standards established by the following regulatory bodies:

- Federal Communications Commission (FCC)
- Industry Canada

FCC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Industry Canada

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

G System Alerts

| Alert | Reason | Solution |
|---|--|--|
| Keypad flashes green two times with two beeps*. | Successful programming. | N/A |
| Keypad flashes red three times with three beeps*. | Door jammed while attempting to lock. | Manually re-lock door. If needed, reposition strike. |
| | Door handing code has not been entered. | Enter door handing code. See step 9 of the installation guide. |
| | No user code programmed or user codes are disabled. | Program at least one user code, or re-enable user codes. |
| Keypad flashes red five times with five beeps*. | Unsuccessful programming. | Attempt programming procedure again. |
| | Incorrect user code entered. | Re-enter user code. |
| Keypad flashes red 10 times with 10 beeps*. | Five incorrect user codes entered within one minute. | Re-enter user code after 45-second keypad lockout. |
| | Low battery. | Replace batteries. |

*Beeping sound will not be heard when the lock is muted.

H Troubleshooting

a. The turnpiece cannot rotate or operate the lock.

Remove and reinstall the lock, making sure that the tailpiece is horizontal in step 6B and 8C.

b. The lock cannot be locked or unlocked by the keypad.

Make sure the lock is programmed with at least one code and that the user codes are not disabled. If needed, perform a factory reset and enter the door handing code (see "Factory Reset").

c. The keypad doesn't respond when touched (no lights are visible and no beeping is heard).

Make sure the cables are properly connected, and make sure the batteries are new and installed correctly.

d. After the lock has been working normally, the latch bolt locks up and the turnpiece will not rotate.

Re-enter the door handing code, using your mastercode. See "Factory Reset," steps 2 and 3.

e. The door can be locked with the Lock button, but the user code will not unlock the door.

Make sure the user code is correct and that the Lock button is pushed after entering the user code. If the door still won't unlock, use a key to unlock the door. Call technical support for further troubleshooting.

f. When the door is closed and the Lock button is pressed to lock the door, the lock emits a system alert. When the door is open and the Lock button is pressed to lock the door, there is no system alert.

Make sure that the hole in the door frame behind the strike is drilled at least 1" (25 mm) deep. Also make sure the strike plate is aligned with the latch bolt. If needed, reposition the strike.

I Factory Reset

A factory reset will delete all codes associated with the lock, and the default mastercode (0-0-0-0) and user code (1-2-3-4) will be restored.

CAUTION: Replace the pre-set codes with codes of your own.

Note: Auto-lock will be disabled after a factory reset.

- 1 Make sure the door is open and unlocked. Press and hold the Reset button on the interior assembly for five seconds, until you hear three beeps* and see the keypad flash amber three times.
- 2 Enter the door handing code:

| | | | |
|-----------------------------|-------------|-----|-------------|
| Default MASTERCODE: 0-0-0-0 | Lock button | "0" | Lock button |
|-----------------------------|-------------|-----|-------------|
- 3 Press the Lock button once. Make sure the latch bolt extends to lock.

*Beeping sound will not be heard when the lock is muted.

J Important Safeguards

1. Read all instructions in their entirety.
2. Familiarize yourself with all warning and caution statements.
3. Remind all family members of safety precautions.
4. Restrict access to your lock's interior assembly and routinely check your settings to ensure they have not been altered without your knowledge.
5. Protect your user codes and mastercode.
6. Dispose of used batteries according to local laws and regulations.

CAUTION: Prevent unauthorized entry. This lock has a pre-set user code and mastercode. Upon installation and set-up, replace both of these codes with your own. Since anyone with access to the interior assembly can reset the lock and change the user codes, you must restrict access to the interior assembly and routinely check the user codes to ensure they have not been altered without your knowledge.

WARNING: This Manufacturer advises that no lock can provide complete security by itself. This lock may be defeated by forcible or technical means, or evaded by entry elsewhere on the property. No lock can substitute for caution, awareness of your environment, and common sense. Builder's hardware is available in multiple performance grades to suit the application. In order to enhance security and reduce risk, you should consult a qualified locksmith or other security professional.