

# DAEWOO

ELECTRICALS



## LED Bluetooth Party Speaker AVS1449

User Manual



**DAEWOO**

**2 YEAR  
WARRANTY**

Terms and conditions apply.

## IMPORTANT SAFEGUARDS

**When using electrical appliances, basic safety precautions should always be followed. These instructions should be saved for future reference:**


- Read and familiarise yourself with all operating instructions before using this Speaker.
- Before using your Speaker, visually check that the unit is intact and has not suffered any transit damage.
- Always use this appliance on a solid, level, non-flammable surface.
- Ensure that there is clearance of at least 100mm (4 Inches) minimum around the Speaker for sufficient ventilation.
- Ensure that any ventilation openings are not covered with items, such as newspapers, table-cloths, curtains, etc.
- No naked flame sources, such as lighted candles, should be placed on the Speaker.
- Do not position the Speaker close to sources of heat such as radiators, heaters, other electronic equipment, etc.
- The Speaker shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Do not immerse the Speaker or its charging cable in water or any other liquids.
- Do not leave the Speaker unattended during use.
- Do not leave the Speaker unattended whilst connected to a USB supply.
- Close supervision is required when using this Speaker near children.
- Never leave this Speaker within reach of children.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children of less than 3 years should be kept away unless continuously supervised.
- It is imperative to unplug the USB supply after the Speaker has been

used, before it is cleaned and whilst being repaired.

- Unplug after each use.
- Repairs to electrical appliances should only be performed by qualified personnel. Improper repairs may place the user at serious risk.
- Do not operate this appliance after a malfunction or after being dropped or damaged in any way.
- Do not allow the charging cable to hang over sharp edges or come in contact with hot surfaces.
- Do not run the charging cable under carpets, rugs, etc.
- This product is intended for household use only and should not be used for industrial purposes.
- Do not use any accessories or attachments with this product other than those supplied or recommended by supplier.
- Do not use this product for anything other than its intended use.
- Do not push objects into any openings as damage to the product and/or electric shock may occur.


### Description of Parts – Top Panel

1. Handle
2. **DC 5V** in – Charging Socket.
3. Power On/Off Switch
4. Micro SD/TF Card Player
5. LED Display
6. USB Memory Stick Player
7. 3.5mm AUX input Jack socket.
8. 6.25mm (quarter Inch) Microphone input Jack socket.
9. Briefly press **◀◀** to **Skip back** to the previous track, press and hold to reverse search a track in USB and SD/TF card mode.
10. Briefly press **▶▶** to **Skip forwards** to the next track, press and hold to forward search a track in USB and SD/TF card mode.
11. **▶||** Press to Play or Pause tracks.
12. Volume Control.
13. Repeat.
14. LED (mode).
15. MODE – press to select Bluetooth, AUX input, USB memory stick, SD/TF Card or FM Radio mode.
16. LED Indicator

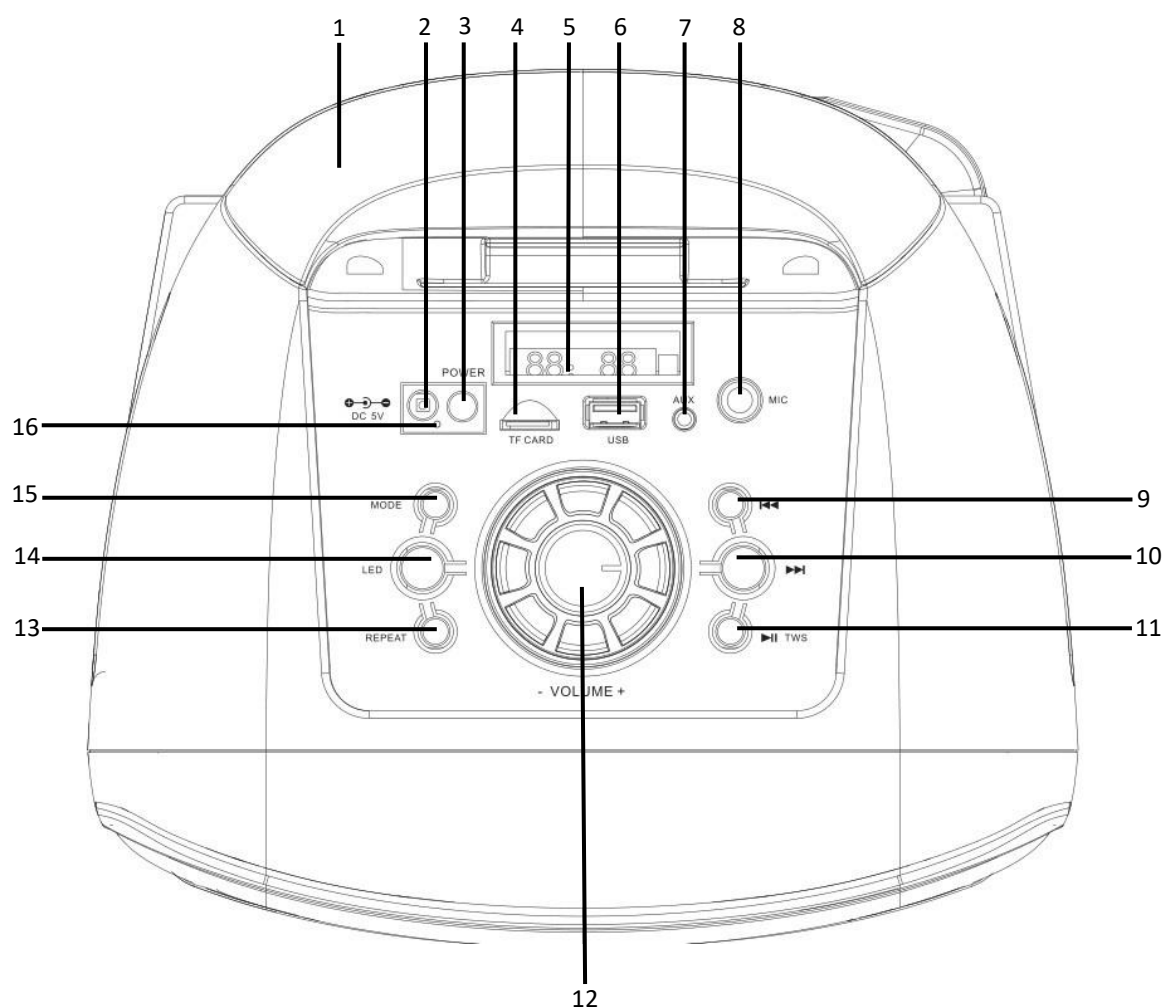



## Description of Parts – Speaker Front & Accessories

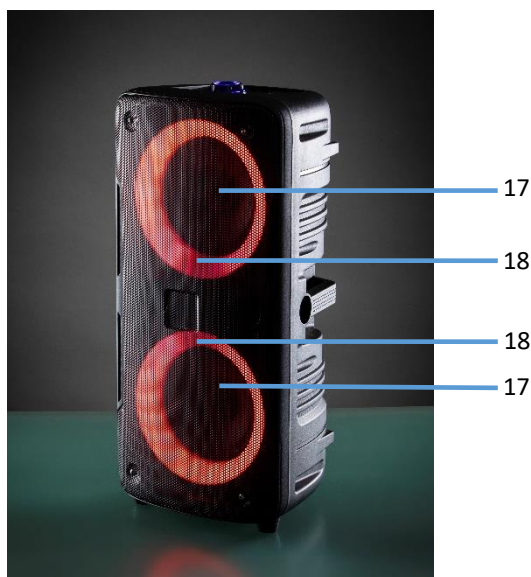 

- 17. Loudspeaker(s)
- 18. LED Lighting Effect(s)
- 19. 3.5mm Jack to Jack lead (a 3.5mm Jack to Jack Lead is supplied but an appropriate lead maybe required to suit the external equipment used.)
- 20. USB Charging Cable
- 21. USB Plug
- 22. DC Plug



### Before the first time you use your Party Speaker

Please read these operating instructions thoroughly and keep them in a safe place for future reference.



Remove all packing materials and discard responsibly.

### Charging the internal Battery

*Before use, please ensure that the internal rechargeable battery is fully charged as follows:*

1. Insert the **DC Plug** (22) of the **USB Charging Cable** (20) into the **DC 5V in Charging Socket** (2) on the top panel of the speaker to charge the internal battery.
2. Insert the **USB plug** (21) of the **USB Charging Cable** (20) into a suitable USB charger rated at **2 amp** minimum.
3. The **LED Indicator** (16) will light red to show the internal battery is charging. Once the battery is fully charged (after approximately 6 hours), the **LED Indicator** (16) will go out showing that the internal battery is fully charged and the **USB Charging Cable** (20) can be removed.


**NB** the speaker can be used normally during charging. Also, once fully charged, the speaker will operate for up to 3 hours on its internal battery. During use, if the speaker gives a beep tone, this indicates the internal battery is low on charge and will need recharging. Follow the procedure above to recharge the battery.

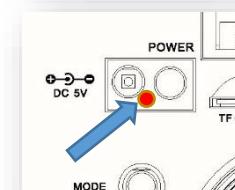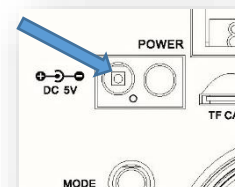


### Using the Bluetooth Mode

1. Switch on the speaker by pressing the **Power On/Off switch** (3) on the top panel (arrowed right).
2. The **LED Display** (2) on the top panel will flash the word 'blue' to indicate that it is ready to pair with an external Bluetooth device as below:

BLUE

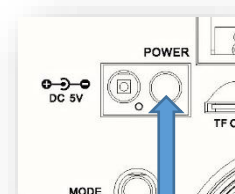

3. Enable the Bluetooth mode on your Phone, Tablet or other Bluetooth compatible device and set it to search.
4. Select '**AVS1449**' from the search results found by your device which will now pair with the speaker. Once your device has paired the speaker will chime once to confirm it is has paired and the word '**BLUE**' on the **LED Display** (2) will stop flashing and the speaker is ready to play.
5. Enable the music player on your Phone, Tablet or other device you are using.
6. Press the **Play/Pause** button ►|| (11) to start and stop (pause) the connected device playing.
7. Briefly press the **skip forwards** ►► (10) and **skip back** ◀◀ (9) buttons (9) to change the track being played.
8. Alternatively use your devices controls in the usual manner.
9. Rotate the **Volume Control** (12) control (right) clockwise and anticlockwise to increase and decrease the volume level.

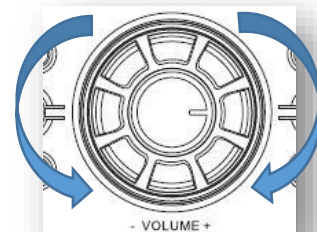

### Using the FM Radio

1. Press the **Mode** button (15) until the FM radio is shown on the LED display (5) as below:




2. Press the **Play/Pause** button ►|| (11) to make the FM radio scan the airwaves. As the radio scans, each station picked up will automatically be stored into the radio presets.
3. Once the radio has finished scanning the radio will default to preset 1, to change the radio preset, briefly press the **skip forwards** ►► (10) and **skip back** ◀◀ (9) buttons (9) to change the radio station being played.
4. Rotate the **Volume Control** (12) control clockwise and anticlockwise to increase and decrease the volume level.

### Using the AUX Input

*The AUX Input allows a direct wired connection of an external audio device (such as a mobile phone, mp3 player, etc.) via a 3.5mm jack socket input on the top panel.*

1. Insert the **3.5mm jack to jack lead** (19) into the **3.5mm AUX input Jack socket** (7) on the top panel (arrowed top right).
2. Connect the other end of the **3.5mm jack to jack lead\*** (19) to your external device.
3. Press the **Mode** button on the top panel (15) to enter the aux in mode. The **LED Display** (2) on the top panel (arrowed bottom right) will show the word '**AUX**'.
4. Rotate the **Volume Control** (12) control clockwise and anticlockwise to increase and decrease the volume level.
5. Use your devices controls in the usual manner whilst playing music back through the speaker.

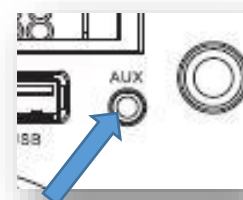

\*A different lead may be required if the supplied cable is not compatible with your device.



## Using the Microphone input



Insert a Microphone (not supplied) equipped with a 0.25" (6.35mm) Jack plug into the **Microphone Input Jack Socket (8)** in order to sing along with your favourite tracks.

## Playing Music from a USB Memory Stick

1. Insert a USB Memory Stick (pre-loaded with audio tracks – Mp3, WAV, files etc.) into the **USB memory stick player (6)** on the top panel. **NB** the USB port supports USB 2.0 and up to 32GB capacity max.
2. The tracks on the memory stick will begin to play automatically.
3. Press the **Play/Pause** button ►|| (11) to play and pause the memory stick. Press the Play/Pause button ►|| (11) again to resume playing the memory stick.
4. Briefly press the **skip forwards** ►► (10) and **skip back** ◄◄ (9) to change the track being played, press and hold to search a track.
5. Rotate the **Volume Control** (12) control (right) clockwise and anticlockwise to increase and decrease the volume level.

**NB** the speaker will default to Aux mode after the USB memory stick has been removed.

## Playing Music from a Micro SD/TF Card

1. Insert a Micro SD/TF card (pre-loaded with audio tracks – Mp3, WAV, files etc.) into the **Micro SD/TF Card Player (4)** on the rear panel. **NB** the Micro SD/TF card player supports cards up to 32GB capacity max.
2. The tracks on the card will begin to play automatically.
3. Briefly press the **skip forwards** ►► (10) and **skip back** ◄◄ (9) to change the track being played, press and hold to search a track.
4. Rotate the **Volume Control** (12) control (right) clockwise and anticlockwise to increase and decrease the volume level.

**NB** the speaker will default to Aux mode after the Micro SD/TF card has been removed.

## TWS (True Wireless Stereo) mode

*TWS mode enables two speakers to be used together producing stereo sound whilst using them in Bluetooth mode, follow the below steps to pair the two speakers together using Bluetooth:*

1. Press and hold the **Play/Pause (TWS)** button (11) ►|| on both speakers for three seconds and the two speakers will automatically pair together.
2. Connect to the speakers via Bluetooth as described in 'Using Bluetooth Mode' above.
3. Enable the music player on your Phone, Tablet or other device you are using.
4. Briefly press the **Play/Pause** button (11) ►|| on either speaker to start and stop (pause) the connected device playing.


**NB** True Wireless Stereo pairing is only available in Bluetooth mode.

## Care and Use of your Speaker


- Always disconnect the Speaker from the USB supply before cleaning.
- Clean outside of the Speaker with a clean damp cloth. Never clean with harsh or abrasive cleaners.
- Do not submerge the Speaker or its charging cable in water or any other liquids.

**Technical Specification**

Model Number	AVS1449
Power Supply/Charger	DC 5V @2A
Audio output power	2x 8W RMS
Speaker Units	2x 6.5" Full Range Drivers
Unpacked Weight	Approx. 3.3 Kgs
Dimensions (Approx.)	533mm (h) x 250mm (w) x 222mm (d) Approx.
Operation temperature	0°C to + 40°C
Built in Battery type	3.7V Li-ion, 3600 mAh
Bluetooth Frequency Range	2402 - 2480MHz
Bluetooth Transmission power	≤-3.325dBm
FM Frequency Range	88 - 108 MHz
This product conforms to Radio Equipment Directive 2014/53/EU	

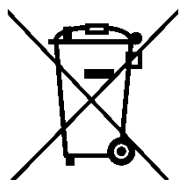

Waste batteries should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

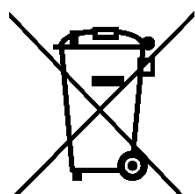

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.





# DAEWOO

## ELECTRICALS



### GUARANTEE

This product is guaranteed for twenty-four months from the date of original purchase. If any defect should occur due to faulty materials or workmanship, please return it to the store it was purchased from.

You will need to have your receipt of purchase to hand. The guarantee is subject to the following provisions:

- It is only valid within the boundaries of the country of purchase.
- The product must be correctly installed and operated in accordance with the instructions contained in the User Manual.
- The product must be used solely for domestic purposes.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- The manufacturer disclaims any liability for incidental or consequential damages.
- The guarantee is in addition to, and does not diminish, your statutory or legal rights.

Daewoo Electricals is a registered trademark.  
Produced and imported under licence by ESG Ltd  
Manchester M3 1JS [www.esgltd.com](http://www.esgltd.com)