

尺寸：130x185mm

FARBERWARE®

Copper Waffle Maker

Model Number: 201796

UPC: 655772-01796-3

Customer Assistance

1-855-451-2897 (US)



Please consider the option to recycle the packaging material.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- **Read all instructions before use.**
- Do not touch hot surfaces. Use handles or knobs.
- **WARNING** - to protect against electric shock, fire and personal injury:
 - do not immerse cord, plug or appliance in water or other liquids;
 - do not immerse the appliance or any electrical components in water or any other liquids;
 - always switch off and unplug the appliance before cleaning.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from wall outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Call our toll-free customer assistance number for information on examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injuries to persons.
- Do not use outdoors or in a damp area.
- Do not place the appliance close to the edge of the countertop.
- Do not let power cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids. A fire may occur if the appliance is covered or touches flammable material, including curtains, draperies, walls, and the like, when in operation. Do not store any item on top of the appliance when in operation.
- When using this appliance, provide 6 - 8 inches of air space above, behind and on both sides for air circulation.
- It is recommended that you use a heat-resistant mat underneath the appliance to avoid any heat damage to your counter or furniture.
- Do not use the appliance with open waffle plates.
- To disconnect, remove the plug from the wall outlet.

SAVE THESE INSTRUCTIONS!

IMPORTANT SAFEGUARDS

- Never pull on the power cord to disconnect the appliance from the wall outlet; instead, grasp the plug and pull on the plug.
- Do not use appliance for other than intended use.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts involving a risk of electric shock.
- Let the appliance cool completely before putting away or storing.
- Never leave the appliance unattended during use.

ADDITIONAL SAFEGUARDS

This appliance is for **HOUSEHOLD USE ONLY**.

WARNING:

 
- **DO NOT OPERATE THIS APPLIANCE, IF THE POWER CORD SHOWS DAMAGE OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.**
- A short power-supply cord is provided to reduce the risk resulting from it being grabbed by children, becoming entangled in, or tripping over a longer cord.
- Extension cords are available and may be used if care is exercised in their use.
- If an extension cord is used:
 - The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
 - The longer cord should be arranged so that it does not drape over the countertop or table top where it can be pulled on by children or tripped over.

Polarized plug

- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- Do not let children handle or put the electrical cord into their mouths.









SAVE THESE INSTRUCTIONS!

PARTS

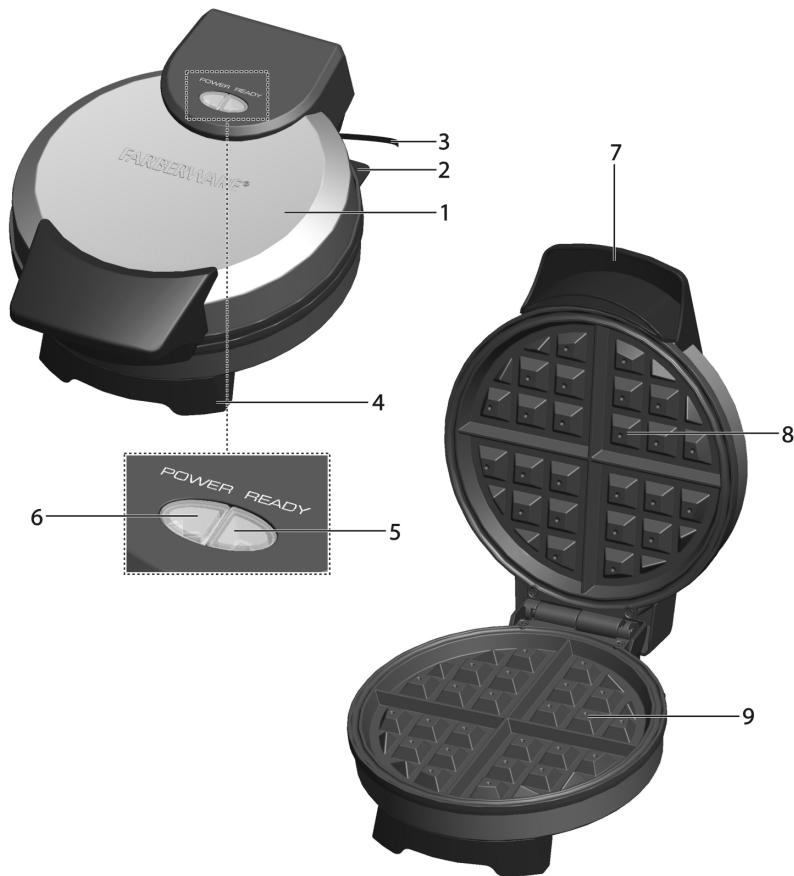

- | | |
|---------------------------|-----------------------|
| 1. Lid | 7. Handle |
| 2. Cord storage | 8. Upper waffle plate |
| 3. Power cord with plug | 9. Lower waffle plate |
| 4. Anti-slip feet | |
| 5. READY indicator | |
| 6. POWER indicator | |

        ILLUSTRATIONS

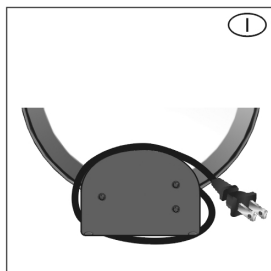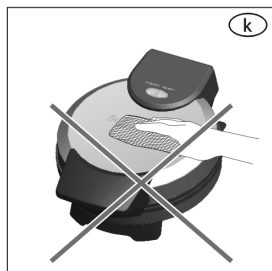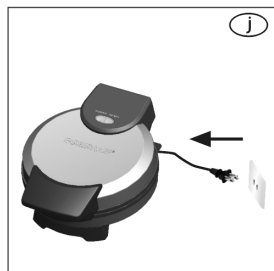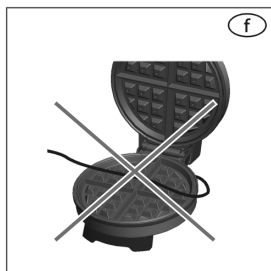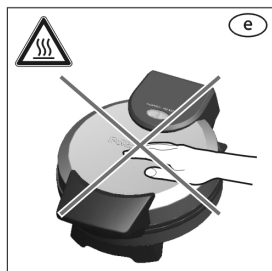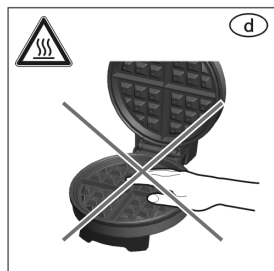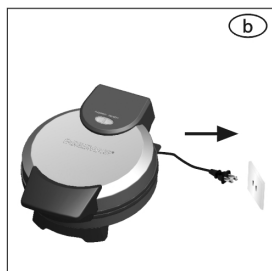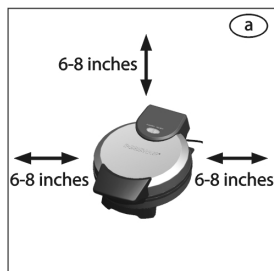

OPERATION

WARNING:

- Always use an oven mitten to protect your hand when handling the appliance. Escaping steam can burn and the appliance housing is hot.

BEFORE FIRST USE

Before first use

- Remove all packaging materials and / or other transportation means.
- Check package content to verify it is complete and undamaged. Do not operate the appliance if the content is incomplete or appears damaged. Return it immediately to Walmart.

Danger of suffocation!

- Packaging materials are not toys. Always keep plastic bags, foils and foam parts away from babies and children. Packaging material could block airways and prevent breathing.
- Clean your appliance and all accessories thoroughly before using for the first time (↳ Cleaning and Maintenance).
- When using the appliance for the first time, it is recommended to operate it for at least 5 minutes (↳ Operation), until no odor or smoke is present. During use, ensure ample ventilation.
- Let the appliance cool completely.
- Clean the appliance (↳ Cleaning and Maintenance).

NOTE:

- The appliance may produce an odor and / or emit smoke when switched on for the first time, as residues from the production process are eliminated. This is normal and does not indicate a defect or hazard.

USING THE APPLIANCE

Using the appliance

This appliance is designed for making waffles and is not intended for any other use.

NOTE:

- The appliance has a rated power of 1080W. Before plugging it into the wall outlet, ensure that the electrical circuit is not overloaded with other appliances. This appliance should always be operated on a separate 120V ~ 60Hz wall outlet.
- Make sure the lid **(1)** is closed before connecting the appliance into the wall outlet.
- Place the appliance on a clean, flat and heat-resistant surface. Ensure a minimum distance around the appliance of at least 6 - 8 inches to other objects, cupboards and walls (ill. **(a)**).
- Connect the plug **(3)** into a wall outlet (ill. **(b)**). The **POWER** indicator **(6)** will turn on. The appliance will now heat-up to operating temperature.

USING THE APPLIANCE

NOTE:

- Leave the lid (1) closed to reduce heat-up time.
- Once the operating temperature has been reached, the **READY** indicator (5) will turn on. The heat-up time will take about 3 - 5 minutes.
- Lift the lid (1) by its handle (7) placing it in the open position (fully opened) (ill. (c)).

Danger of suffocation!

- Do not touch the waffle plates (8, 9) (ill. (d)) and / or the lid (1) surface (ill. (e)).

WARNING:

- Never let the power cord (3) come in contact with the lid (1) or waffle plates (8, 9) during use (ill. (f)).

BAKING WAFFLES

- Apply cooking spray or spray butter on the upper and lower waffle plates (8, 9).
- Using a suitable cup/mug, pour less than a cup of batter onto the lower waffle plate (9) (ill. (g)).

NOTE:

- Do not overfill the lower waffle plate (9), as any excess batter may leak out of the appliance.
- Carefully lower the lid (1) by its handle (7) (ill. (h)). Make sure the appliance is fully closed.

NOTE:

- Waffles take about 3 - 6 minutes, depending on recipe, or once no more steam is being emitted. When the waffle is ready, the **READY** indicator (5) will turn on.
- Do not open the lid (1) within the first few minutes, as this may cause the waffle to tear.
- In case the waffle needs to be cooked for longer, keep the lid (1) closed for a little longer. The **READY** indicator (5) will turn on and off several times to ensure constant temperature. Avoid spoiling food by keeping it for too long within the plates.
- Open the lid (1) and remove the waffles using a plastic or wooden utensil (ill. (i)).

NOTE:

- Never use metal utensils, as these will damage the nonstick coating.
- Adapt the cooking time based on the result of your first batches of waffles.
- After removing the waffles, keep the lid (1) closed. Wait for the **READY** indicator (5) to light up again, indicating the operating temperature has been reached, before repeating the previous steps to bake more waffles.
- Once you have finished using the appliance, disconnect the plug (3) from the wall outlet (ill. (j)). Both indicator lights will switch off.
- Allow the appliance to cool down completely before handling again.

BAKING WAFFLES

Basic Waffles (for 4 ½ cups of batter, 1.125L)

2	cups flour
2 tbsp	sugar
1 tsp	baking powder
1 tsp	salt
1¾ c	cups milk
⅓ c	cup vegetable oil
2	eggs

- Combine flour, sugar, baking powder and salt.
- Whisk together milk, oil and eggs.
- Gradually add milk mixture to the dry ingredients
- Whisk until batter is even and smooth.

Basic Blueberry Waffles

- Follow the instructions for Basic Waffles.
- After pouring batter onto the lower waffle plate **(9)**, sprinkle fresh blueberries over batter, then close the lid **(1)**.

Whole wheat & Belgian waffles

1 c	whole wheat flower
⅛ c	sugar
4 tsp	baking powder
¼ tsp	salt
1	egg
1 c	milk
¼ c	vegetable oil
½ tsp	vanilla extract

- In one bowl combine flour, sugar, baking powder, salt and vanilla extract.
- In another bowl combine milk, vegetable oil and eggs.
- Gradually add the liquid ingredients to the flour mixture. Whisk until even and smooth.

RECIPES

- Most waffle batter can be poured directly onto the nonstick waffle plates **(8, 9)**. Use a cooking spray for dessert waffles or any recipe with a lot of sugar. If your waffles start to stick, the waffle plates **(8, 9)** may need to be scrubbed with a nylon brush to remove any cooked-on food particles.
- Most waffles can be made ahead of time and kept warm in a 200°F (90°C) oven.
- To store waffles, let them cool and then pack into an airtight container. Store in a refrigerator or freezer. Waffles can be reheated in a microwave oven or regular oven.
- Most waffles are done in about 3 - 6 minutes. Recipes made from scratch may take longer. Check if waffles are done after the **READY** indicator **(5)** turns on for the first time or once no more steam is being emitted. If the appliance does not open easily, allow waffles to cook for another minute before checking again.
- It is recommended to clean all accessories after each use.

CLEANING AND MAINTENANCE

Proper maintenance will ensure many years of service from your appliance. Clean the appliance after every use. The appliance contains no user serviceable parts and requires little maintenance. Leave any servicing or repairs to qualified personnel.

WARNING:

- Always disconnect the plug **(3)** from the wall outlet before cleaning. Allow all parts of the appliance to cool down completely.

NOTE:

- Do not immerse the power cord with plug **(3)** or appliance into water or any other liquids. Do not use abrasive cleaners, steel wool or scouring pads (ill. **(k)**). Dry all parts thoroughly after cleaning, before using or storing the appliance. Ensure that no water enters the appliance housing.
- Wipe the appliance housing, lid **(1)** and waffle plates **(8, 9)** with a damp cloth. Rinse cloth and wipe all parts again.

NOTE:

- Dry all parts and surfaces thoroughly before use. Make sure that all parts and surfaces are completely dry before connecting the appliance to a wall outlet.

STORAGE

Storage

- Before storage, always make sure the appliance is completely cool, clean and dry.
- The power cord **(3)** can be stored on the cord storage **(2)** underneath the appliance (ill. **(l)**).
- It is recommended to store the appliance in a dry place.
- Store the appliance on a stable shelf or in a cupboard. To avoid accidents, ensure that both the appliance and its power cord are beyond reach of children or pets.

TROUBLESHOOTING

Problem	Cause	Solution
The appliance is not working	Appliance not plugged in Wall outlet not energized Malfunctioning appliance	Insert the plug into the wall outlet Check fuses and circuit breaker Unplug the appliance from the wall outlet and contact qualified personnel to check and repair the appliance
The POWER indicator is on but the appliance does not heat up	Preheat time too short Malfunctioning appliance	Let the appliance preheat for a longer time Unplug the appliance from the wall outlet and contact qualified personnel to check and repair the appliance
The appliance heats up but the POWER indicator is off	Malfunctioning appliance	Unplug the appliance from the wall outlet and contact qualified personnel to check and repair the appliance
Batter is spilling over	Waffle plates overfilled Waffle batter too liquid	Reduce amount of batter used per serving Add some flour to the batter
Waffle is not fully cooked	Cooking time too short	Allow waffle to cook for longer

If additional assistance is needed, please contact our Customer Assistance at 1-855-451-2897 (US).

TECHNICAL DATA

Rated voltage: 120V~ 60Hz
Rated current: 9.0A

Rated power input: 1080W

CUSTOMER ASSISTANCE

If you have a claim under this warranty, please call our Customer Assistance Number. For faster service, please have the model number and product name ready for the operator to assist you. This number can be found on the bottom of your appliance and on the front page of this manual.

Model Number: _____ Product Name: _____

Customer Assistance Number 1-855-451-2897

Keep these numbers for future reference!

Two-year limited warranty

What does your warranty cover?

- Any defect in material or workmanship.

For how long after the original purchase?

- Two years.

What will we do?

- Provide you with a new one.
- For those items still under warranty but no longer available, WAL-MART reserves the right to replace with a similar FARBERWARE branded product of equal or greater value.

How do you make a warranty claim?

- Save your receipt.
- Properly pack your unit. We recommend using the original carton and packing materials.
- Return the product to your nearest Walmart store or call Customer Assistance at 1-855-451-2897.

What does your warranty not cover?

- Parts subject to wear, including, without limitation, glass parts, glass containers, cutter/strainer, blades, seals, gaskets, clutches, motor brushes, and/or agitators, etc.
- Commercial use or any other use not found in printed directions.
- Damage from misuse, abuse, or neglect, including failure to clean product regularly in accordance with manufacturer's instructions.

How does state law relate to this warranty?

- This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.
- This warranty is in lieu of any other warranty or condition, whether express or implied, written or oral, including, without limitation, any statutory warranty or condition of merchantability or fitness for a particular purpose.
- WAL-MART, FARBERWARE and the product manufacturer expressly disclaim all responsibility for special, incidental, and consequential damages or losses caused by use of this appliance. Any liability is expressly limited to an amount equal to the purchase price paid whether a claim, however instituted, is based on contract, indemnity, warranty, tort (including negligence), strict liability, or otherwise. Some states or provinces do not allow this exclusion or limitation of incidental or consequential losses, so the foregoing disclaimer may not apply to you.

What if you encounter a problem with this product while using it outside the country of purchase?

- The warranty is valid only in the country of purchase and if you follow the warranty claim procedure as noted.

FARBERWARE®

© 2018 Farberware Licensing Company, LLC. All Rights Reserved.
Copyrights and Trademarks of Farberware Licensing Company, LLC, including FARBERWARE®, are used under license from Farberware Licensing Company, LLC.

